

KMT说明书 折页 128g双铜 尺寸: 89*127mm

anko

Earphone TWS

Operating instructions

Includes:

- TWS earphone
- Charging cable
- Extra S/L size eartips



12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING:

- This Bluetooth earbuds shall be charged by the supplied charging unit only.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Function overview:

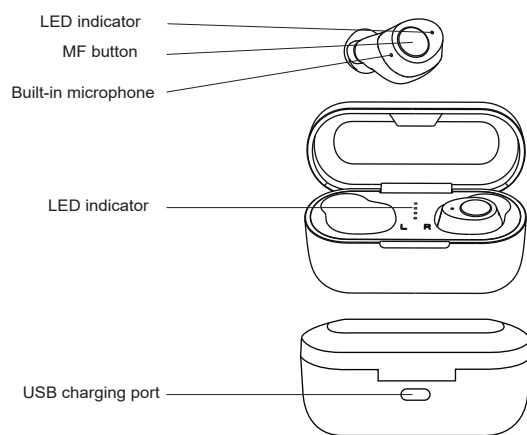

How to use these earphones:

Specifications:

Model No: 43026715

Version: V5.1

Function Operation

Function Operation	Power ON / OFF
Pause Press either O button	Power ON
Play Press either O button	Removing Earphones from charging case will automatically turn them on
Redial Double click the right O button	Power OFF
Previous Press the left O button three times quickly	Placing Earphones into charging case will automatically turn them off
Next Press the right O button three times quickly	
Volume Up Press and hold the right O button for 1 - 2 seconds	
Volume Down Press and hold the left O button for 1 - 2 seconds	

Pairing the earphone with Bluetooth devices

- Go to "Bluetooth Settings on your Bluetooth device (phone, tablet, etc.)
- Turn the Bluetooth ON, on your device
- Open the charging case and remove the Earphones, they will automatically turn on (or they can be turned on manually). The LED indicators on the left and right Earphones will flash blue and red as they automatically sync to each other. Once synced the Earphones will enter pairing mode, which is identifiable by one Earphone slowly flashing Blue while the other continues to flash Blue and Red.
- On your Bluetooth Device, select the pairing name of your Earphones on the list of available devices (Pairing name is: anko 43026715). The Earphone LED indicator will slowly flash blue once connected (Trouble shooting tip: if the Earphones do not connect to your device, turn the Earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process)

Your Earphones are designed to automatically sync to each other when they are turned ON, however if they ever fail to sync, please follow the below instructions to re-sync the left and right Earphone

- Remove the Earphones from the charging case, ensuring both Earphones are turned ON
- Double click both right and left Earphone buttons in quick successions to re-sync the earphone, or double click to cancel the pairing of both earbuds when they do not paired with devices (phone, tablet, etc.)

- Put the Earphones into the charging case, then you can repeat the above pairing process.

Answer incoming call

- When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer the call, press either of the earphone MF buttons. To end a call, press either of the earphone MF buttons again. To decline an incoming call, press and hold either MF button for 2 seconds.

Playing music

- Press either the left or right earphone MF button once to pause playback, press either earphone MF button once again to resume playback. Press the left MF button three times to play previous track. Press the right MF button three times to play next track.

Battery Charging

Connect the USB-C charging cable into the socket on the charging case.

- Plug the cable into a standard USB 5V power output.
- The LED indicator will flash red while the case is charging and will turn blue when fully charged. (Note: Before using the charging case for the first time, we recommend you fully charge the battery. A full charge takes around 2 hours).
- When fully charged, unplug the charging cable from the power socket.

Note: The charging case will stop working when the battery is low.

Specifications:

Charging voltage:	5V d.c	Charge time:	
Battery capacity:	300mAh	Earphone:	1.5 Hours
Support profiles:	A2DP, AVRCP, HFP	Charging Case:	1.5-2 Hours
Working Distance:	10 meters	Cable length:	30 cm
Music Time :	4 Hours	Pairing window time:	10 minutes
Talk time:	3 Hours	Non-play automatic power save mode:	
Standby time:	30 Hours	after 30 seconds the earphone will enter power save mode and then automatically switch off when the low battery alarm sounds.	

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.