

INSTRUCTION MANUAL

43026722
[KMT083]

WHITE
GLOSSY

 
5107_MAN_43026722_TWS_White_V6

Artwork Proof Date: 23.03.21

PAPER:


80gsm
Bright white uncoated paper

PRINT COLOURS:

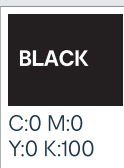

PRINT FINISH:

 Double sided
Z-Fold

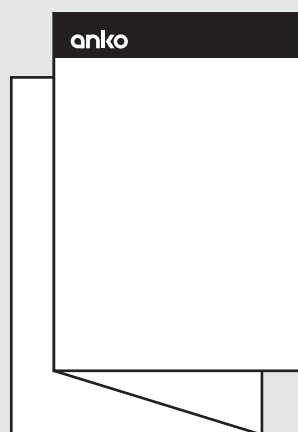

CHANGE LOG CREST INTERNAL USE ONLY

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

 
IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

BACK

This product shall be supplied by a power source not exceeding PS1 only. This Bluetooth earpiece shall be charged by the supplied charging unit only.
CAUTION The batteries in this product are not replaceable. During use, storage or transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could cause explosion.

Function overview:

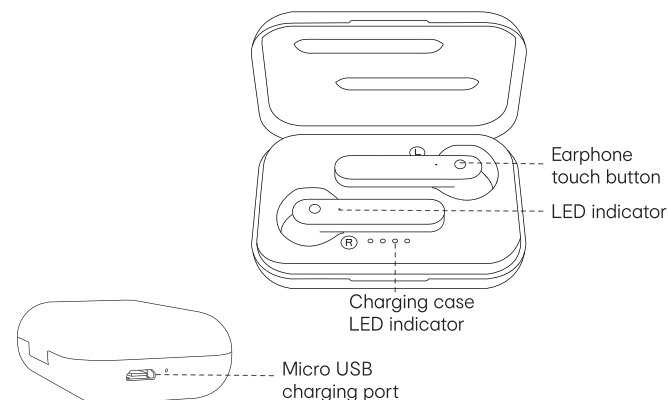

Note: Please remove insulation film from the charging terminals and charge the earphones and case before use.

WARNING Do not dispose of unit in fire or water. Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. Keep your device and all accessories out of the reach of children and animals. Small parts may cause choking or serious injury if swallowed. Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. Do not allow your device to get wet—liquids can cause serious damage. Do not handle your device with wet hands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.
iPhone, iPad and Mac is a trademark of Apple Inc., registered in the U.S. and other countries.



Earphone Function Operation

Power ON

When the charging case is opened and the earphones are removed from the case, both earphones will automatically power ON and sync up.

Or when the earphones are OFF you can press and hold both touch buttons for 3 seconds to turn them ON.

Power OFF

Put earphones back into the charging case and close the lid, they will be automatically powered OFF.

Or you can press and hold the button of either earphone for 5 seconds, both earphones will be turned OFF.

Play/Pause Press either button

Previous Track Press and hold right button for around 2 seconds

Next Track Press and hold left button for around 2 seconds

Volume Up Press left button 2 times in quick succession

Volume Down Press right button 2 times in quick succession

Answer Call Press either button

Reject Call Press and hold either button for 3 seconds

End Call Press either button

Activating Phone Assistant Press either button 3 times in quick succession

Redial Last Call Press either button 4 times in quick succession

Pairing window: 2 minutes

Bluetooth® Pairing

- Go to "Bluetooth" Settings on your Bluetooth device (phone, tablet, etc.)
- Turn the Bluetooth ON on your device.
- Open the charging case, the Earphones will automatically power ON (or they can be turned on manually) and remove the earphones from the case. The LED indicators on the left and right Earphones will flash blue for 5 seconds and then either earphone will continue to flash blue as both earphones

automatically sync to each other. Once synced the Earphones will enter pairing mode, which is identifiable by either Earphone flashing blue and red.

- On your Bluetooth Device, select the pairing name of your Earphones on the list of available devices. Pairing name is: KM43026722.

Trouble shooting tip

- If the Earphones do not connect to your device, turn the Earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process.
- Your Earphones are designed to automatically sync to each other when they are turned ON, however if they ever fail to sync, please put both Earphones back into the charging case and close the cover to turn them OFF; then open the cover and the Earphones will turn ON and sync together again.

Phone Calls

If there is an incoming call on your Bluetooth device, the Earphones will pause the playback and ring to alert you of the call. Press either Earphone button to answer the call or press and hold either button for 3 seconds to reject the call. To end the call, press either Earphone button again.

Charging the Case

- Connect the micro USB charging cable into the socket on the Charging Case.
- Plug the cable into a standard USB 5V/1A output.
- The LED indicator on the case will flash green while charging and stay green when fully charged.

Warning: To avoid damage to the Charging Case, please only use a 5V/1A charger.

FRONT

Charging the Earphones

- Put the Earphones into the Charging Case. The earphones LED indicator will stay red while charging, the LED on the case will stay green when the case is supplying power to the Earphones.
- When the Earphones are fully charged, the red LED on the Earphones will turn blue and then turn off after 30 seconds.

(Note : The Earphones come with a built-in rechargeable battery. Before using them for the first time, we recommend you fully charge the battery. A full charge takes approximately 1 hour).

WARNING : The Earphones can only be used with the provided Charging Case

Specifications:

Model No:
43026722

Version
5.0 Bluetooth® chipset

Support profiles:
A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6

Frequency Response:
20Hz-20kHz

Impedance:
32Ω

Driver size:
10mm

Sensitivity:
101dB±3dB

Effective range:
up to 10 meters

Earbud battery capacity:
2 x 25mAh

Playing time:
up to 3 hours

Charging case battery capacity:
300mAh

Earbud charging time:
max 1 hour

Charging case's charging time:
max 1.5 hours

Charging port:
Micro USB

Input Voltage:
DC5.0V / 1A

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

anko

True Wireless Earphones Operating instructions



Includes:

- true wireless earphones
- charging case
- charging cable (micro USB)

43-026-722

Bluetooth name is KM43026722

5107/6