 


anko

Digital Camera

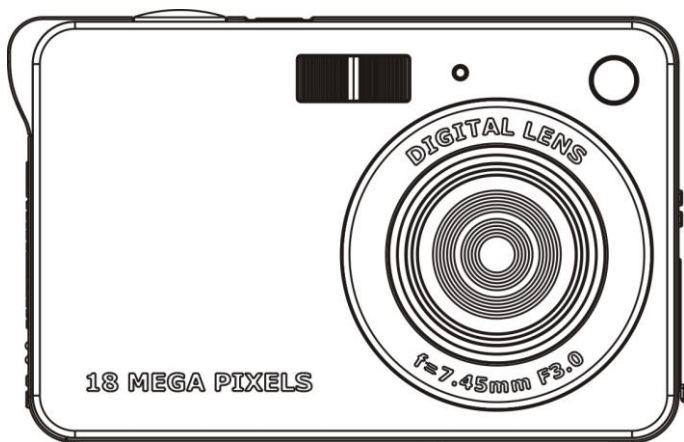

Please read this manual carefully before using this unit and keep it for future reference

Table of content

Key Features	2
What Your Camera Includes	2
Computer System Requirement for Windows 7/XP	2
Computer System Requirement for Windows Vista	3
Computer System Requirements for Macintosh	3
Quick Look at Your Digital Camera	4
Main Icons on the LCD	5
Prepare Your Camera for use	7
Install battery	7
Charging your lithium battery	7
Install a SD memory card	7
Starting Your Digital Camera	8
Camera Mode	9
Taking Photos	9
Video Mode	15
Playback Mode	16
Download photos and videos to your computer	19
Appendix A: Technical Specifications	19
Appendix B: Troubleshooting	21

Key Features

- Digital Video resolutions- 1280x720 HD , 640x480 VGA, 320x240 QVGA.
- 18 mega pixels camera with choice of 10 digital camera resolutions- (18M) 4896x3672, (14M) 4416x3312, (12M) 4000x3000, (10M) 3648x2736, (8M) 3264x2448, (7M HD) 3648x2048, (5M) 2592x1944 (3M) 2048x1536, (2M HD) 1920x1080, (VGA)640x480
- 2.7-inch TFT LCD
- 8X digital zoom
- Anti-shake function
- Face detection
- Smile Capture
- Continue Shot
- SD memory card slot accepts SD compatible memory card up to 32GB.
- **Built in LED flash light**

What Your Camera Includes

- Digital Camera
- USB cable for sync and charge
- User's manual
- Strap
- Camera bag
- Li-ion battery

Computer System Requirement for Windows 7/XP

To be able to download photos and videos to your PC you will need the following minimum configuration:

- Pentium processor or above with Windows XP SP3, Windows 7,8,10
- 128 MB RAM, more than 150MB free disk space.
- Available USB Port
- CD-ROM Drive
- Recommended screen resolution 1024 X 768 pixels or higher.

Computer System Requirement for Windows Vista

To be able to download photos or videos to your PC you will need the following minimum configuration:

Windows Vista

800MHz processor and 512 MB of system memory

 
- 20GB hard driver with at least 15GB of available space
- Available USB Port
- CD-ROM Drive

Computer System Requirements for Macintosh

- Power Macintosh G3 500 MHz or higher
- Mac OS X version 10.5.X or later
- 128 MB or more available system RAM (256 MB recommended), 150 MB free disk space
- 800 x 600 or higher-resolution monitor displaying millions of colors

Note: This hardware is plug and play compatible when used on a Mac.

Quick Look at Your Digital Camera

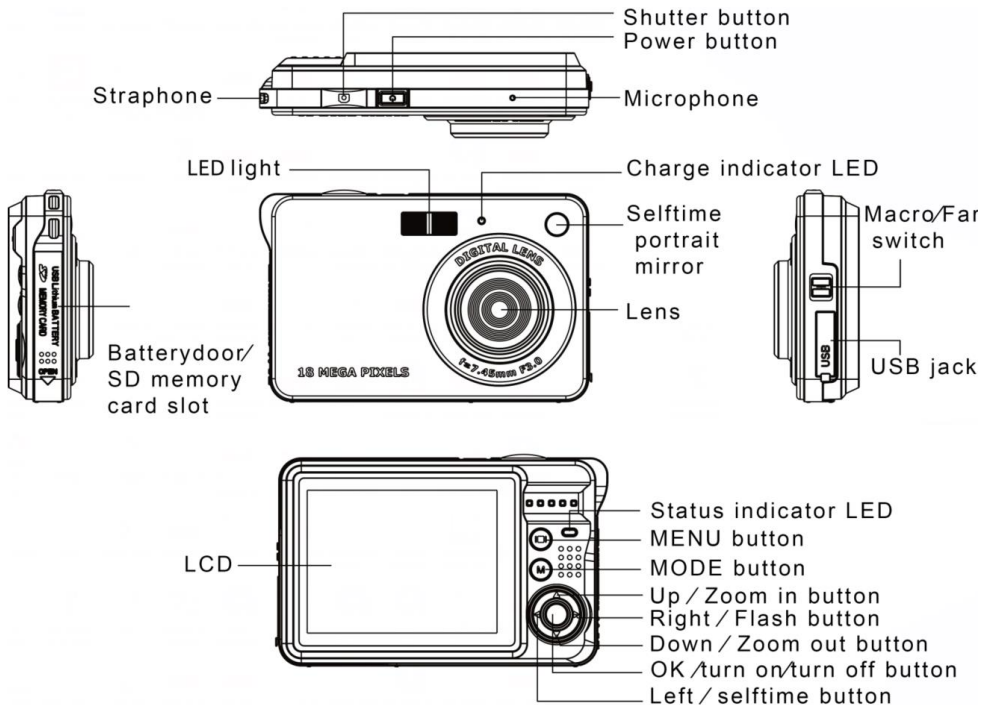

Main Icons on the LCD

Camera mode

- Face Detection
- Scene
- Image siz
- Camera mode
- SD card inserted
- LED off
- Smile capture
- Selftime
- Remaining photo
- Digital Zoom
- Anti-shake
- Image quality
- ISO
- Sharpness
- White balance
- Battery level
- Exposure

Playback mode for photos(full screen)

- Still photo
- File sequence
- SD card inserted
- Photo date
- Battery level

Playback mode for Videos(full screen)

- Video
- Video size
- File sequence
- Recording date
- Battery level

Recording mode

- Recording mode
- SD card inserted
- The recorded time
- Battery level

Battery power level



 
 



Photo quality

 

Flash

 

Modes

 

Digital Zoom



 
Protect



Anti-Shake



Scenes




Prepare Your Camera for use

Install battery

Your camera supplied with a lithium battery, please refer to the following illustration as correct installation method:

 1. Slide and open the battery compartment.

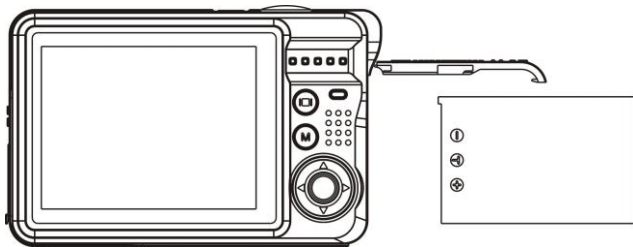

Install Lithium Battery

2. Insert the lithium battery correctly as the correct polarity facing up.
3. Close the battery compartment.

 
Note: Please remove the battery when you don't intend to use your camera for a long time.

Charging your lithium battery

To charge your battery, connect your camera to PC or a USB Adaptor (DC 5V, 500mA) with supplied USB cable correctly. The LED light will light up and it will be off after full charge.

Install a SD memory card

This camera supports any compatible SD memory card up to 32GB. Limited internal memory is only for you to take test photo, these photo will be lost when you turn off your camera or remove away the battery. So that insert a SD memory card is normally for use. Please refer to the below diagram for correct installation.

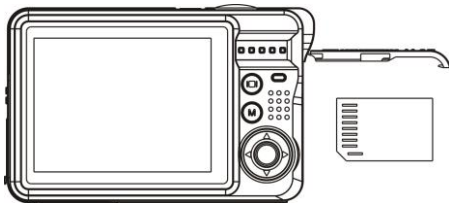

Locate the SD memory card slot, insert a SD memory card as above, until you hear a “Click” sound, it indicates your SD card is installed with an icon “SD” appear on the LCD screen.

Note:

1. After the SD memory is inserted successful, the photos/videos you have taken will be stored on the SD memory card.
2. Formatting will delete all data on the SD memory card including protected data.
3. Don't remove the SD card during formatting as this may damage the card and render it unusable.

Starting Your Digital Camera

Your digital camera is included 4 modes-Camera mode, Video mode , Recording mode and Playback mode. Camera mode is for you to take still photos. You can shoot video file/recording file in Video mode/in Recording Mode. And you can preview photos/videos/records, delete, rotate, protect, crop and printing your photos in playback mode.


Power on

Press Power button once to turn on your camera. The LCD will light up and it will sound “beep”, this indicates your camera is turned on and ready for use.

Power off

Press Power button once to turn off your camera. When there is insufficient battery power, your camera will show “**Low Battery**” on the LCD screen and power off automatically after a moment.

Camera Mode

After you power on your camera,  icon will appear on your LCD screen, indicating your camera is in Camera Mode.


Taking Photos

You can compose your shot using LCD screen. Hold the camera steady and press Shutter button to take photo. There will be a short delay while the camera saves the photo to memory.

After each photo is shot (when the camera returns to icon mode) the numbers of photos left to shoot at this resolution will be displayed on the LCD screen.

When the camera's memory is full, the LCD screen will display **"Memory Full Insert a SD memory Card to Transfer and Take More Photos!"** when you attempt to press Shutter button to take photo, now you need to download these photos to PC or delete them for taking more photos, alternatively you can insert a SD memory card for expanding the memory.

Digital Zoom function



You can magnify your subject up to 8 times using the digital zoom. Press UP button to zoom in the object and press the Down button to zoom back out. The icon 1.00X  8.00X will show on your LCD screen.


Flash

In low light conditions it is best to use the built-in **LED light**. You can also use the **LED light** to compensate for backlight conditions.

To set the **LED flash**:

Press Flash button repeatedly. Select the  icon shown on the LCD screen. This will activate the automatic flash.

Press Flash button repeatedly. The  icon will appear on the LCD screen. This means the flash function has been "forced on" (manual flash). If the flash is not ready, a red LED will light up beside the LCD screen and the  icon will flash repeatedly- wait until the flash is ready before taking a photo. A **"low battery"** warning will appear on the LCD screen if there is insufficient battery power to operate the flash.

Press Flash button repeatedly. Select the  icon shown on the LCD screen. This will activate the Red-eye reduction

Press the Flash button repeatedly until the  icon appears. This will turn off the **LED flash function**.

Scene

Your camera supplies scenes for you to take photos in any environment nearly, there is abundant scene included with your camera. Such as Auto, Night Portrait, Night Scenery, Portrait, Scenery, Beach, High Sensitivity. You can choose your best scenery according to your light and environment conditions.

Press Power button to turn on your camera – the  icon will appear on the top left of your LCD screen.

1. Press Menu button.
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: Auto/Night Portrait/Night Scenery/Portrait/Scenery/Beach/High Sensitivity.
4. Press OK button to confirm.

Note:

1. After you selected your scenery, the corresponding scenery icon will be appeared on the LCD.
2. Press Up/Left/Right/Down button to select the scene and press OK button to confirm.

Image Size


The image size and quality settings determine the number of photos can be saved and the amount of memory required for each photo. The higher quality photo will take the more memory. The image size and quality will also affect the maximum size, you can print your photo effectively. To set the Image size:


1. Press Menu button.
2. Press Right/Left button to select the icon **MP**.
3. Press Up/Down button to select: 4896x3672 (18M), 4416x3312 (14M), 4000x3000 (12M), 3648x2736 (10M), 3268x2448 (8M), 3648x2048 (7M HD), 2592x1944 (5M), 2048x1536 (3M), 1920x1080 (2M HD), 640x480 (VGA).
4. Press OK button to confirm and to exit in each menu.

The image size icon will show on the LCD screen.

Anti-Shake


Your Digital Camera has a function that prevents some blurry photos from trembling when taking photo. Because of this function, you are not required to use a tripod for steady shooting photos. To set as below:

1. Press Menu button.
2. Press Right/Left button to select the icon .


3. Press Up/Down button to select: On/Off.
4. Press OK button to confirm and exit the menu. The icon  will appear on the LCD screen if you select "On".

Face Detect

Your camera supports face detecting that allows you to take best photos.


1. Press Menu button.
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: On/Off.
4. Press OK button to confirm and exit the menu.

Smile Capture

1. Press Menu button.
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: On/Off.
4. Press OK button to confirm and exit the menu.

Continue Shot


You can take 6 photos continuously after pressing Shutter button only once with this function on.

1. Press Menu button.
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: On/Off.
4. Press OK button to confirm and exit the menu.

Note: The image size will automatically become VGA when select continue shot on , if you try to change the image size "Continue Shot Mode Off" information will remind you that you can only use continue shot function when the image size is VGA.

Self Timer


You can include yourself in a photo by using this feature to delay the time between your pressing Shutter button and when the photo is actually taken.

1. Press Menu button.
2. Press Right/Left button to select icon , the function menu as below:
3. Press Up/Down button to select 2, 5 or 10 seconds count down shooting or you can select Off to turn off.
4. Press OK button to confirm and exit the menu

Setup

You can set Exposure, ISO, White Balance, Sharpness, Image Quality, Effect, Date, Auto Power Off, Sound Effect , Language, Frequency , Format, Default Setting

To operate it as below:

1. Press Menu button.
2. Press Right/Left button to select icon .

Exposure

This setting allows you to control the brightness of your images.

1. Press Up/Down button to select Exposure option in Setup menu.
2. Press OK enter the Exposure submenu.
3. Press Up/Down button to select an exposure value (from+3 to -3).
4. Press OK button to confirm and return to the Camera mode. The corresponding icon of exposure will appear on the LCD screen.

ISO

This is a special function that allow you to compensate the light conditions when the light source is not good and also you are not admit to use LED light or tripod. And you will know the LED light or a tripod is best to compensate the light conditions for your primal choice, and then ISO. When you want to use ISO sensitization, please choose the low value ISO to forbid mottles appears on your photo.

1. Press Up/Down button to select ISO in Setup menu.
2. Press OK button to enter the ISO option submenu.
3. Press Up/Down button to select: Auto/100/200/400.
4. Press OK to confirm and return to the Camera mode. The corresponding icon of ISO will appear on the LCD screen.

White Balance

This setting allows the camera to adjust the color of your photos according to the color of your light source.

1. Press Up/Down button to select White balance option in Setup menu.

2. Press OK button to enter the White Balance submenu.
3. Press Up/Down button to choose the best option: Auto/Daylight/Cloudy/Incandescent/Fluorescent.
4. Press OK button to confirm and return to the Camera mode.

Sharpness

This setting allows you to adjust the sharpness of your images, making edges more or less distinct.

1. Press Up/Down button to select Sharpness option in Setup menu.
2. Press OK button to enter the Sharpness submenu.
3. Press Up/Down button to select: Sharp/Normal/Soft.
4. Press OK to confirm and return to the Camera mode.

Quality

The quality of your photos also affects the number of shots you can take. The Super setting means you can take fewer photos, but they will be better quality.

1. Press Up/Down button to select Quality option in Setup menu.
2. Press OK button to enter the Quality submenu.
3. Press Up/Down button to select: Super Fine/Fine/Normal.
4. Press OK button to confirm and return to the Camera mode. The corresponding icon of Quality will appear on the LCD screen.

Effect

1. Press Up/Down button to select Effect option in Setup menu.
2. Press OK button to enter the Effect submenu.
3. Press Up/Down button to choose the best option: Normal/ B&W/ Sepia / Red / Green / Blue/ Sunset / Warm/ Cool .
4. Press OK button to confirm and return to the Camera mode.

Date

This allows you to set system time which will be displayed on the photos if you selected date on.

1. Press Up/Down button to select Date option in Setup menu.
2. Press OK button to enter the Date submenu.
3. Press Up/Down button to select: "On"-display date on the photo you take and LCD screen, "Off"- won't show date on photos and LCD screen, "Set Date"-set the system date.
4. If choose the ON or OFF option, press OK button to confirm and return the Camera mode. Or

Press OK button enter the Set Date submenu.

- 1). Press Right/Left button select value, and press Up/Down button to set the Date, time and format.
- 2). Press OK button to confirm and return to the Camera mode.

Auto Power off

The default setting will be automatically power off if your camera is idle for 3 minutes.

1. Press Up/Down button to select Auto Power Off option in Setup menu.
2. Press OK button to enter the Auto Power Off submenu.
3. Press Up/Down button to select: 1 Minute/2Minutes/3 Minutes/None.
4. Press OK button to confirm and return to the Camera mode.

Note: If you select "None", the camera will not be powered off until the battery power using up or turn off it manually.

Sound Effect

Sets the button sound on/off.

1. Press Up/Down button to select beep sound option in Setup menu.
2. Press OK button to enter the Beep sound submenu.
3. Press Up/Down button to select on/off.

Press OK button to confirm and return to the Camera mode.

Language

You can select your language per your request.

1. Press Up/Down button to select Language option in Setup menu.
2. Press OK button to enter the Language submenu.
3. Press Up/Down button to select the language you want.
4. Press OK to confirm and return to the Camera mode.

Frequency

1. Press Up/Down button to select Frequency option in Setup menu.
2. Press OK button to enter the Frequency submenu.
3. Press Up/Down button to select: 50Hz/60Hz.
4. Press OK button to confirm and return to the Camera mode.

Format

This function reformats the memory card and will erase all files in memory including protected files, please operate it cautiously.

1. Press Up/Down button to select Format option in Setup menu.
2. Press OK button to enter the Format submenu.
3. Press Up/Down button to select: OK/Cancel.
4. If you select Cancel ,Press OK to confirm and return camera mode ,or press OK button to enter the OK submenu..
5. Press Up/Down button to select “Yes” to format or “No” to exit if you select OK
6. Press OK button to confirm and “please wait” tip will show on the LCD screen.The camera will Return camera moder automatically after the format operation is finished

Default Setting

If your camera setting is in a confused status, you can execute this function to your camera original setting.


1. Press Up/Down button to select Default Setting option in setup menu.
2. Press OK button to enter the Default Setting submenu.
3. Press Up/Down button to select: “OK”-set to default setting, “Cancel”- to exit.
4. If you select Cancel ,Press OK to confirm and return camera mode ,or press OK button to enter the OK submenu..
5. Press Up/Down button to select “Yes” to format or “No” to exit if you select OK
Yes: set to default
No: exit the menu
6. Press OK button to confirm and return camera mode.

Cancel

This is for you to exit the menu manually, select it in setup menu and press Menu button to exit.

Video Mode

Note: The camera has limited internal memory and does not allow recording videos without a SD card inserted. A SD card (up to 32GB) needs to be inserted in order to use the video mode normally.

Press Mode button to enter the Video mode and start shooting videos, an icon  will appear on the LCD screen and a red spot will be flashing on the LCD screen.Press Shutter button to stop shooting ,the elapsed time will be shown on the LCD screen.

1. You can play this AVI file in playback mode or Quick time and Windows Media player.

Note:

1. The file you recorded will be saved as AVI format.
2. When the camera's memory is full, the "Card Full" message will appear on the LCD screen when you attempt shoot more videos. Download the test file from the internal memory to the PC or delete them to shoot more videos. Alternatively, you can insert a SD memory card to expand the memory to record longer videos.

Recording Mode

Note: The camera has limited internal memory and does not allow recording without a SD card inserted. A SD card (up to 32GB) needs to be inserted in order to use the record mode normally.

Press Mode button twice to enter the recoding mode Press shutter button to start recording, a red spot will be flashing on the LCD screen.Press Shutter button again to stop recording , the elapsed time will be shown on the LCD screen.

Note:

1. You can not play this WAV file in playback mode ,because there is a speaker in the camera.
2. You can play WAV file in Quick time and Windows Media player.
3. The file you recorded will be saved as WAV format.

Playback Mode

Press mode button to switch Playback mode. You can playback the photos and videos in your camera. In Playback mode you can rotate, protect, delete and crop your photos and you can play, protect and delete video clips. You can also print photos directly from your camera using PictBridge.

NOTE:

1. The message, "No File Exist" will be displayed on the LCD screen if there are no photos/videos in the camera. Press Mode button to return to the camera mode.
2. Please go to the camera mode for setting video parameters for shooting videos, such as Video size, White balance and so on.

Thumbnail display

When the camera is in the Playback Mode, press Down button will take you to the thumbnail display.

Select a JPG file, Press OK button to display the files in full screen.

In full screen display mode, you can press up button to enter slide show mode.


Note: when you select a file is JPEG file, then the icon  will display on the LCD screen.


Photo to enlarge

When the camera is in playback mode, press the OK button to enter the picture to enlarge interface, press up button to enlarge the picture, press down to decrease the picture. When the picture to enlarge and then press the OK button, press up, down, left, right can be up, down, left, or right to move the enlarged picture, press the OK button to return to photo playback mode.

Operation for still photos

Select a still photo (an icon  will show on the LCD) you can rotate, protect, delete, crop or print.



Rotate

1. Press Menu button in playback mode .
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: 90° /180° /270° /Cancel
4. Press OK button to save current photo and return the playback mode.

Note: a “Saving” will show on the LCD after you pressed OK button to confirm.


Protect

You can protect your photos/videos from accidental deletion.

1. Press Menu button.
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: Lock/Unlock.
4. Press OK button to confirm. A lock icon  will be shown on the LCD if you select “Lock”.
At step 3, select “Unlock” and press OK button to unlock the current file.


Delete

Delete unwanted photos and videos at any time to free up memory. You can delete one image or video clip at a time or delete all the unprotected photos and videos that are currently recorded on the memory card at once.

1. Press Menu button.
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: This image/This Video (depends on your file selection): delete current photo you selected; ALL: delete all unprotect photos; Format : format SD Card ;Cancel to exit.
4. Press OK button to enter delete submenu.
5. Press Up/Down button to select “Yes” or “No”.
6. Press OK to confirm deletion.


Crop Image

Crop your photos to show only a specific portion of an image or to highlight certain focal points. The Crop feature lets you zoom in on an image and then save that part of the image as a new photo.

1. Press Menu button.
2. Press Right/Left button to select the icon .
3. Press Up/Down button to select: Crop/Cancel.
4. If you select the crop option, press ok button to enter crop submenu.
5. Press Up/Down/Left/Right button to select an area you want to crop.
6. Press OK button to confirm the operation.or press shutter button to exit without corpping;
7. Press OK button again to save or you can press shutter button to exit without saving.

Print

Your camera allows you to print the photos with printer. The operation as below:

1. Select a photo you want to print.
2. Press Menu button.
3. Press Right/Left button to select the icon .
4. Press Up/Down button to select: "Pictbridge"-to print photo, "Cancel"-to exit menu.
5. Press OK button to enter Pictbridge mode and the LCD will show: "Please connect to device".
6. Connect your camera to compatible printer with USB cable correctly for printing.

Operation for AVI file

Select an AVI file you want to play.

1. Press Menu button.
2. Press Up button to play the file ,and play right button to stop and again to play.

Note: For how to protect, delete videos, please refer to **Operation of still photos**.

Download photos and videos to your computer

1. Plug the camera into an available USB port and connect to computer, Turn on the camera.
2. Click on the MY COMPUTER Icon on the desktop, a new drive should mount on the desktop which stores any photos or videos that have been taken.
3. Your memory card will appear as a REMOVABLE STORAGE DEVICE.
4. Click on the REMOVABLE STORAGE DEVICE to view the images and videos. the images and Videos are stored in the subfolder called DCIM.
5. You can now copy and paste the images to any directory you choose.

Appendix A: Technical Specifications

Image Sensor	CMOS Sensor
Image Resolution	(18MP 4896x3672, 14MP 4416x3312, 12MP 4000x3000, 10MP 3648x2736, 8MP 3264x2448, 7MP HD 3648x2048, 5MP 2592x1944 via interpolation) (3M) 2048x1536, (2M HD) 1920x1080, (VGA) 640x480
Video Resolution	1280x720 HD , 640x480 VGA, 320x240 QVGA
LCD Display	2.7" TFT LCD
External Memory	SD card (Up to 32GB)
Digital Zoom	8X Digital Zoom
Exposure	EV-3---EV+3
White Balance	Auto/Daylight/Cloudy/Incandescent/Fluorescent
Scene	Auto/Night Portrait/Night Scenery/Portrait/Scenery /Beach/High sensitivity
ISO	Auto/100/200/400
Self-timer	Off/2s/5s/10s
File Format	JPEG / AVI

Anti-shake	YES
LED Flash	Auto/Force/Red-eye reduction/Off
PictBridge	YES
Face Detection	YES
Smile Capture	YES
Continue Shot	YES (VGA 6PCS)
Microphone	YES
Optical Viewfinder	N/A
TV out	N/A
Interface	USB 2.0
System Requirements	Windows XP/VISTA/7/MAC
Battery	Li-ion Battery
Working Temperature	0-40 °C

Appendix B: Troubleshooting

Q: I have taken photos but my computer does not recognize my camera. What do I do?

A:

First, ensure that you have in fact taken photos. Press the Shutter button a few times to take some sample photos and then try downloading them again.

It is also recommended that you have a SD card inserted in the camera.

Secondly, always use the USB cable that came together in the package with the camera.

The USB cable needs to be inserted in a free USB slot on your computer.

Thirdly, give your computer time to recognize that the device is inserted. If need be, refresh the device options list until you see the removable device appearing.

If the computer does not recognize your device it may mean that your computer does not meet the minimum system requirements.

Please see the System Requirements section of this manual. If your computer does not matches these requirements then it is possible that you will not be able to transfer the photos and videos from your camera.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

**CAUTION
RISK OF EXPLOSION IF BATTERY IS
REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THIS INSTRUCTIONS.**