KMT说明书 折页 128g双铜 尺寸: 89*127mm

anko

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or nealect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
 Replacement of a battery with an incorrect type that can result in an explosion or the leakage of
- Replace that to a battery with an influence type that can result in an explosion of the learning of flammable liquid or gas.
 Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

- Displosal of a datery into lite of a not over, or mechanically clost ling or exting of a battery, that can result in an explosion.
 Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
 A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
 This product shall be supplied by a power source not exceeding PS1 only.
 The ambient temperature for product normal operation is 0 °C to 40 °C.


Bluetooth® Headphones Operating instructions

Includes:

- Bluetooth headphones
- Charging cable
- Audio cable



Function overview:

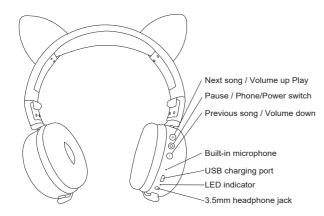

How to use these headphones:

Function Operation Pause Short press Power button

Play Short press Power button Next Song Short press + button Previous Song Short press - button Volume Up Long press + button - when the volume is adjusted to maximum you will hear a voice indication tone Volume Down Long press - button

Long press power button 3-5 seconds ,red and blue LED flashes quickly

Power OFF

Long press power button LED indicates red & blue then turn

Turn off the LED light : Long press the +/- button at the same time.

Pairing the headset with Bluetooth devices

 Once the headphone is powered on, it is in pairing mode (LED flashes) slowly) and will pair to the last paired device(if available).

• Pair the headset in Bluetooth menu in mobile phone and once it is paired, you can hear a pairing tone and the LED indicates blue

Bluetooth Name:anko 43030699

Phone calls

- Press power button to pick up/hang up / reject phone calls.
- . Double click the power button to call the previous number dialed.

Plaving music

When the headset connects with the mobile phone via Bluetooth you can enjoy music through the headset wirelessly.

Alternatively you can connect the headphone cable and listen to music when the cable is connected directly to your music device via its headphone input. This function can still be used when the

Battery ChargingThis Bluetooth heaset battery is rechargeable.

Please use the accessory USB cable to recharge the battery.

- Insert USB charging cable into a suitable
- Connect charging cable with the headset USB port. Indicator LED turns RED to show battery
- is charging.

 Indicator LED turns OFF when battery is
- fully charged.

 It takes about 2 hours to fully charge the
- battery.

Specifications:

Model No: 43030699 Version: Working Distance: 10 meters Music Time: >6 Hours >5 Hours Talk time: Standby time: >7-12 Hours Charging voltage: 5V d.c Charge time: Charging Cable length: 30 cm Pairing window time: 5 minutes Non-play automatic power save mode

after 30 seconds the headphone will enter power save mode and then automatically switch off when the low battery alarm sounds.

The Bluetooth@ word mark and logos are registered trademarks owned by Bluetooth@ SIG, Inc. and any use of such marks by KMART AUSTRALIA is under licence.