 


# anko

43037834

## DUAL POD FRAGRANT DIFFUSER Instruction Manual

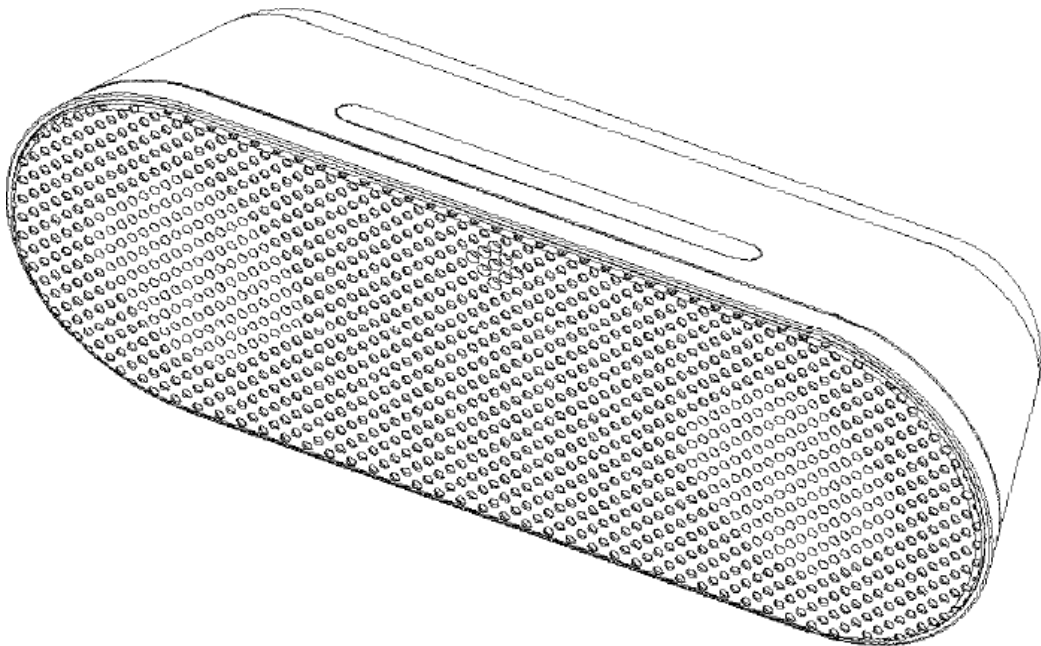

### **Includes**


Main Unit

2\*Fragrance pods

AC adaptor: 5V / 1A

Remote control

## Names of parts

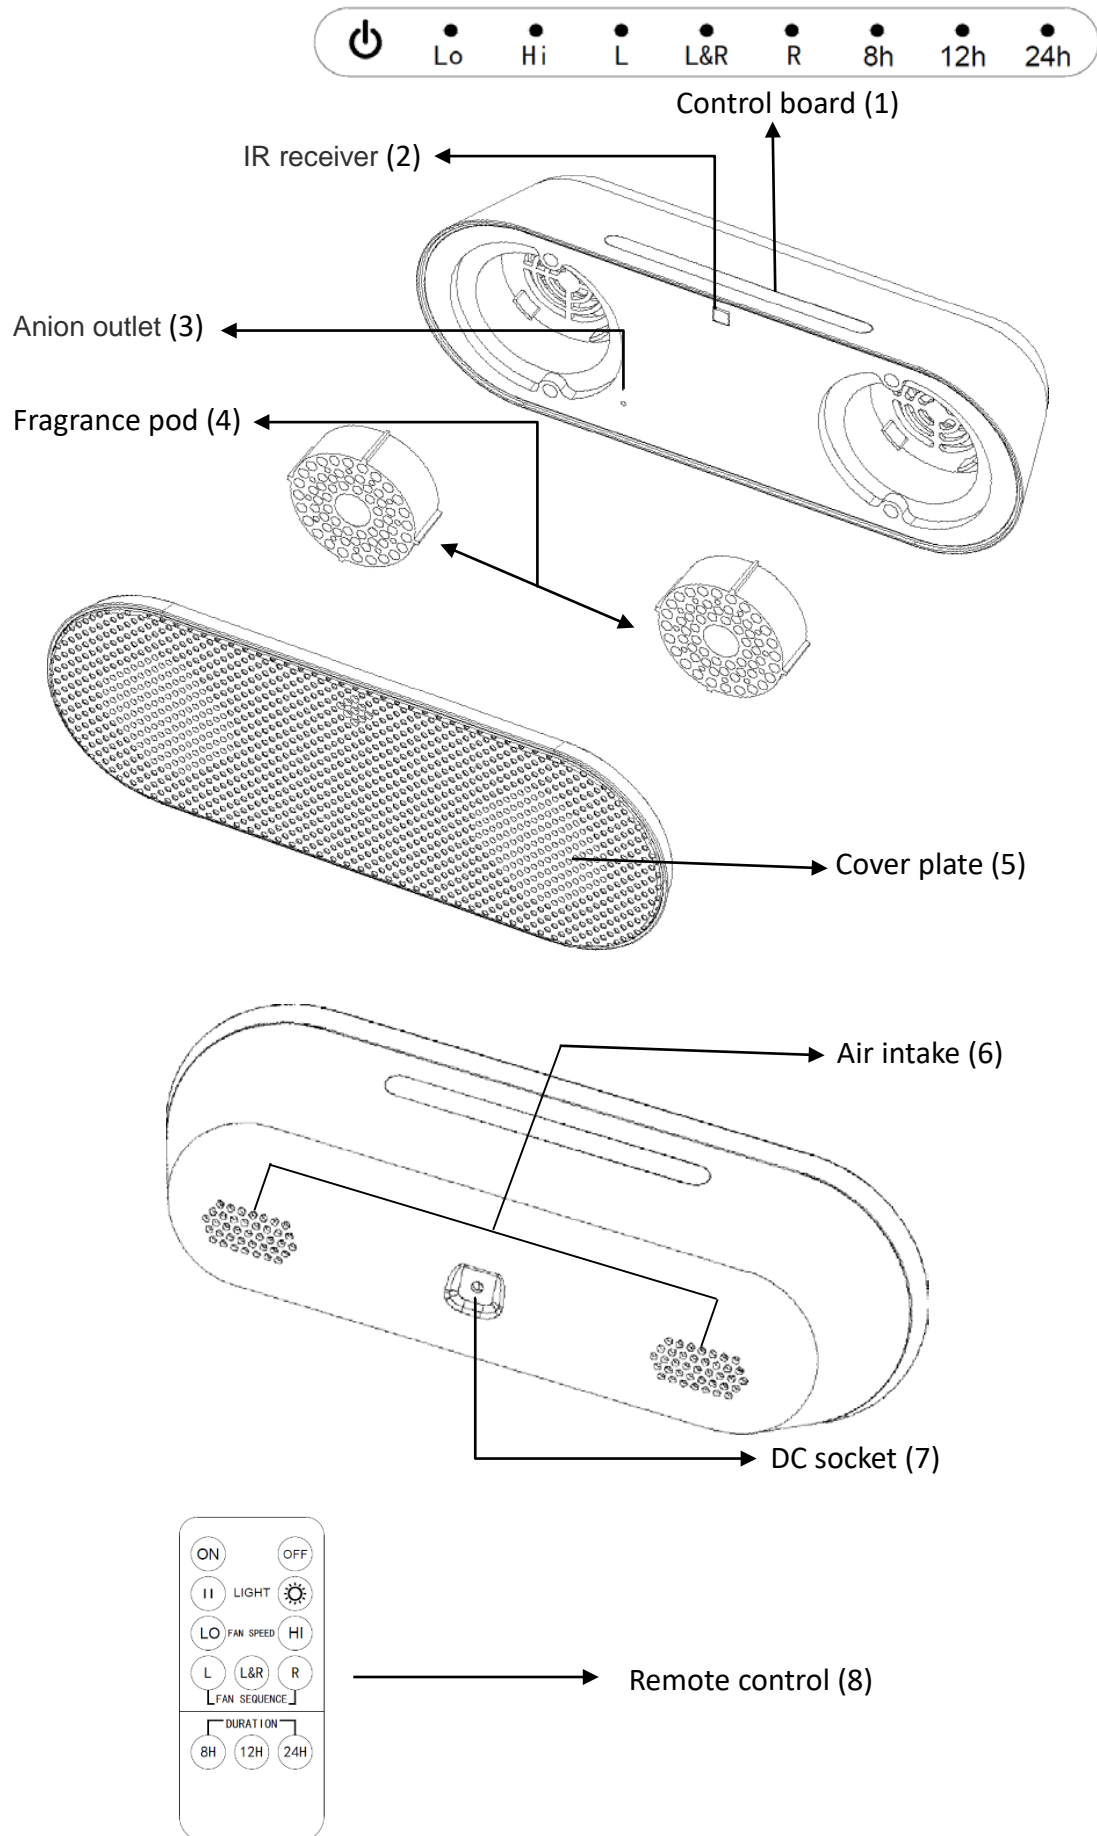

## Warning

1. Important safety instructions:  
The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.
2. The AC/DC adaptor and the apparatus should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on or near it.
3. To completely disconnect the power input, the AC/DC adaptor should be disconnected from the mains.
4. The AC/DC adaptor should not be obstructed or easily accessed during intended use.
5. Keep a minimum distance of 10cm around the apparatus for sufficient ventilations.
6. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
7. No naked flame sources such as lighted candles should be placed on or near the apparatus.
8. Always cut off power source before cleaning.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they do not play with the appliance.
11. Use provided power adaptor only.

## Light settings

**This is controlled by the (☀) and (||) button on the remote control (8)**

**Default:** Circulates 6 colours (Red-Yellow-Green-Cyan-Blue-Purple) ambient LED light from dim to bright.


**Short press (☀):** Stay at current light. Press again, the colour will change in sequence (Red-Yellow-Green-Cyan-Blue-Purple-default circulates).

**Short press (||):** The light effect will switch off.


## Operating instructions

- Take out the magnetic cover plate (5) and put the fragrance pods (4) into the device.
- Connect AC adaptor power cord into the DC socket (7).
- Plug the AC adaptor into a wall outlet.
- To switch on, touch the power button (⏻) on the control board or press (ON) on the remote control once.
- To switch off, touch the power button again (⏻) or press (OFF) on the remote control.
- To change to a new fragrance pod, always unplug the device before changing.

## Control board

 
	<ol style="list-style-type: none"> <li>1. Short touch to switch on, the fans start working under high speed.</li> <li>2. Circulates 6 colours (Red-Yellow-Green-Cyan-Blue-Purple) ambience LED light from dim to bright.</li> <li>3. Anion Generator keeps operating.</li> <li>4. Default timer is 24H. Diffuser will be switched off automatically after 24 hours.</li> <li>5. Touch again and all functions will be stopped and the device will switch off.</li> </ol>
<b>LO</b>	Short touch, fan will operate under low speed.
<b>HI</b>	Short touch, fan will operate under high speed.
<b>L</b>	Short touch, left fan starts working and right fan stops working at the same time.
<b>L&amp;R</b>	Short touch, both left and right fans work together.
<b>R</b>	Short touch, right fan starts working and left fan stops working at the same time.
<b>8H</b>	Short touch, timer sets up as 8H, diffuser will be switched off automatically after 8 hours.
<b>12H</b>	Short touch, timer sets up as 12H, diffuser will be switched off automatically after 12 hours.
<b>24H</b>	Short touch, timer sets up as 24H, diffuser will be switched off automatically after 24 hours.

## Remote control

<b>ON/OFF</b>	<b>ON</b>	<ol style="list-style-type: none"> <li>1. Short press to switch on, the fans start working under high speed.</li> <li>2. Circulates 6 colours (Red-Yellow-Green-Cyan-Blue-Purple) ambience LED light from dim to bright.</li> <li>3. Anion Generator keeps operating.</li> <li>4. Default timer is 24H. Diffuser will be switched off automatically after 24 hours.</li> </ol>
	<b>OFF</b>	Short press, all functions will be stopped and the device will switch off.
<b>LIGHT</b>		Stay at current light. Press again, the colour change will change in sequence (Red-Yellow-Green-Cyan-Blue-Purple-default circulates).
	<b>  </b>	Short press, all light effects will be switched off.
<b>FAN SPEED</b>	<b>LO</b>	Short press, fan will operate under low speed.
	<b>HI</b>	Short press, fan will operate under high speed.
<b>FAN SEQUENCE</b>	<b>L</b>	Left fan starts working and right fan stops working at the same time.
	<b>L&amp;R</b>	Left and right fans work together.
	<b>R</b>	Right fan starts working and left fan stops working at the same time.
<b>DURATION</b>	<b>8H</b>	Timer sets up as 8H, diffuser will be switched off automatically after 8H.
	<b>12H</b>	Timer sets up as 12H, diffuser will be switched off automatically after 12H.
	<b>24H</b>	Timer sets up as 24H, diffuser will be switched off automatically after 24H.

## Button cell battery replacement

1. Remove the screw on the back of the remote control with a screwdriver.
2. Pull the battery bracket out from the bottom.
3. Take the cell battery out and replace a new **CR2025 3V** type cell battery.
4. Please do not use any other type of cell battery except CR20205 3V.

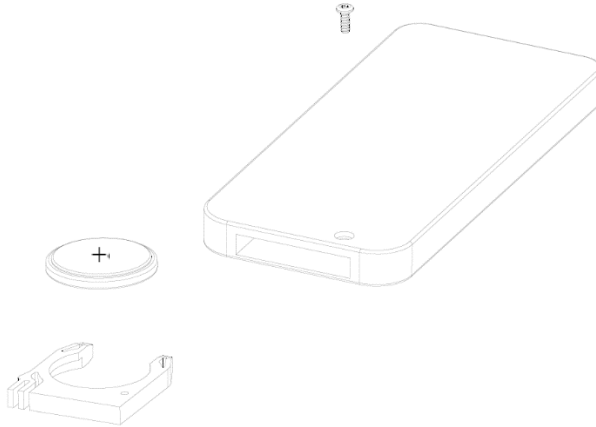

## Caution

1. Ensure your device is placed on an even, stable dry surface that is out of reach of children and pets.
2. Never allow liquids to come into contact with the device.
3. Never operate the device without the **cover plate (5)**.
4. Always use **fragrance pods (4)** to optimize the diffusion performance.
5. Remove the fragrance pods when the device is non-operational for extended periods of time.
6. When not in use always unplug the adaptor from the mains, never just the DC cable.
7. Always unplug the device from the power source when cleaning.
8. Always follow the maintenance instructions below when cleaning.
9. Always keep the **cover plate (5)** vents dust free.
10. There are no serviceable components inside the device, never disassemble.

## Maintenance

- Turn off the power and unplug the power source.
- Remove the **cover plate (5)** and **fragrance pods (4)**.
- Wipe the dust from the main body with a dry soft cloth. Marks or stains can be spot cleaned using a damp (not wet) swab or cloth. Do not use commercial polishes or cleaners. Never immerse in water.
- Remove dust from the **cover plate (5)**, **anion outlet (4)** and **air intake (6)** vents using the soft brush. Brush in an outwards motion.
- Wipe the internal section of the machine with a dry cloth.
- If the device is not used for some time, we recommend keeping in its packaging box for storage. Wrap the device and place in a clean dry place.

## Specifications

Dimensions	Approx 8.5cm(H) x 27cm(W) x 10cm(D)
Rated voltage	DC 5V
AC adaptor	I/P:100-240V,O/P:DC 5V 1A
Remote Control	Up to 5 metres (approx.)
Accessories	AC Adaptor, fragrance pods and instruction manual

## Troubleshooting

Problem	Possible Reasons	Solution
Will not turn on when connected to the power source.	<ol style="list-style-type: none"><li>1. Power source not switched on.</li><li>2. Leads not connected properly.</li></ol>	<ol style="list-style-type: none"><li>1. Turn on power.</li><li>2. Check and re-plug lead into the device and power source.</li></ol>
There is little or no fragrance coming from the device.	<ol style="list-style-type: none"><li>1. There are no fragrance pods inside the device.</li><li>2. The fragrance pod has gone past its useful life.</li><li>3. There is only 1 fragrance pod inside the device.</li></ol>	<ol style="list-style-type: none"><li>1. Insert fragrance pods into the device.</li><li>2. Replace fragrance pods with new ones.</li><li>3. Add a second fragrance pod into the device.</li></ol>

## Warning

- SWALLOWING MAY LEAD TO SERIOUS INJURY OR DEATH IN AS LITTLE AS 2 HOURS DUE TO CHEMICAL BURNS AND POTENTIAL PERFORATION OF THE OESOPHAGUS.
- DISPOSE OF USED BATTERIES IMMEDIATELY AND SAFELY. FLAT BATTERIES CAN STILL BE DANGEROUS.
- EXAMINE DEVICES AND MAKE SURE THE BATTERY COMPARTMENT IS CORRECTLY SECURED, E.G. THAT THE SCREW OR OTHER MECHANICAL FASTENER IS TIGHTENED. DO NOT USE IF COMPARTMENT IS NOT SECURE

- IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON BATTERY, CALL THE 24HOUR POISONS INFORMATION CENTRE IN AUS ON 131126 OR IN NZ 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT.



**WARNING:** Button Cell Batteries are hazardous (new or used). Keep away from children. Button Cell Batteries can cause severe or fatal injuries in 2 hours or less if they are swallowed or placed inside any part of the body. If you suspect your child has swallowed or inserted a button cell battery, call the 24hour poisons information centre in Australia on 131126 or in New Zealand 0800 764 766 or contact your country's emergency dept. Used batteries must be disposed of in the garbage or a battery recycle facility.

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.