



Instruction Manual

Wireless Ergonomic Keyboard

Keycode: 43040391



Package Contents

- ① 2.4GHz wireless keyboard
- ② USB receiver (inside the battery compartment)
- ③ User manual

Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instruction to avoid damage caused by improper use.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- Only use this appliance indoors.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean, dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances.
- Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

Features:

2.4GHz wireless technology

Ergonomic design, comfortable to use

Low voltage alarm design, low power consumption, energy conservation

Working distance up to 10m (without any obstructions)

Supports:

Windows XP/7/8/10/Linux/Mac OS

Operation Instructions

Inserting the batteries

1. Remove the battery compartment covers of keyboard and insert one 1.5V AA batteries.
Caution! Danger of explosion if the batteries are incorrectly replaced.
2. Replace the battery compartment cover again.

Notes on Batteries


- > It is recommended to only use Alkaline or Rechargeable batteries.
- > If the device is not to be used for an extended period of time, then the batteries should be removed.
- > Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.
- > Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.
- > Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.
- > Remove the batteries prior to disposing of the device.

Connecting Keyboard



1. After the batteries are successfully inserted, and toggle the power switch to the ON position.
2. Plug the USB receiver to the computer's USB port, then wireless keyboard will work normally.



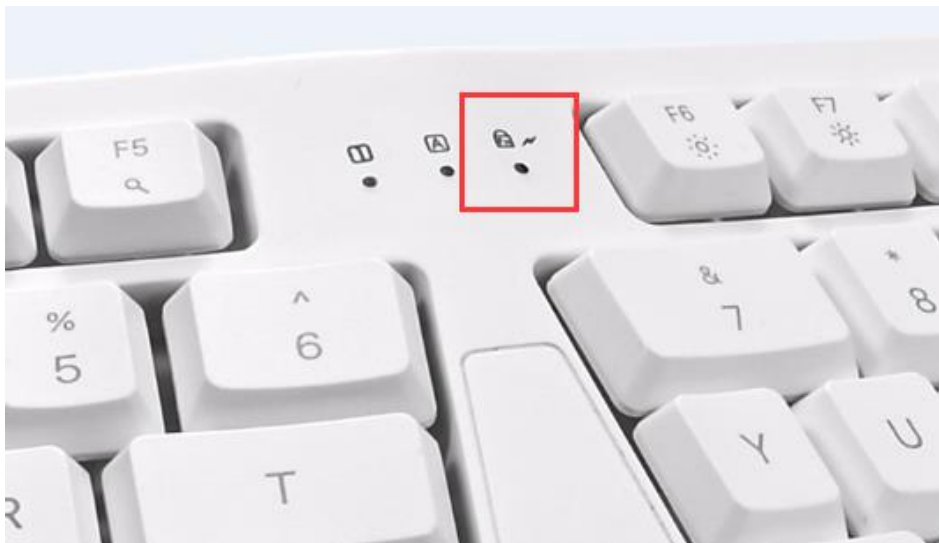















If the keyboard cannot work normally, take out the receiver from computer USB port and plug again, toggle the power switch again to ON position, and press "ESC+Q" keys at the same time, the indicator on the top right corner will light up or flash. The matching succeed once indicator is off after receiver is inserted into.

3. When the battery is running out of the power, the below lower-voltage indicator flashes green.



Key function

1. When Fn+ is off, Fn indicator light is off, separately press F1~F12 to achieve the original function;
2. When pressing Fn+, Fn indicator light is green, separately press F1~F12 to achieve below shortcut key function.

ICON	Windows	ICON	Windows	ICON	Windows
 Fn:fn+esc	Fn Lock	F6 	Brightness -	F12 	Volume -
F1 	Home	F7 	Brightness +		Volume +
F2 	Mail	F8 	Previous		Calculator
F3 	Favorite	F9 	Play/Pause		Print
F4 	Music	F10 	Next		Set
F5 	Search	F11 	Volume Mute		Lock Screen

Note: The hot key : Volume Mute, Volume-, Volume+, Calculator, Print, Set and Lock screen could not support If for Mac OS system.

Power saving mode

If the device is not used for ten minutes, it switches to power saving mode. Just move the mouse, or press any key to reactivate it.

Care and maintenance

Wipe all parts with a dry soft cloth.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.