

STOPWATCH USER MANUAL

Key Code: 43040919 Junior Athletics Set

- **Count Timer Mode**

Under normal time mode, press button MODE, it turns into StopWatch count time mode, and display zero on screen. Press button START/STOP to start StopWatch count time, press button START/STOP again to stop count time. Press button SPLIT/RESET to reset.

- **Double Count Timber Mode**

Press button START/STOP to start count time, then press button SPLIT/RESET to memory first count time, (Note: When StopWatch under the first count time mode, normal time else works). Press button SPLIT/RESET again, it adds the first count time and continue StopWatch count time, press button START/STOP to stop count time. Press button SPLIT/RESET to reset.

- **Display Double Count Time**

Press button START/STOP to start count time, press button SPLIT/RESET to display the first count time, press button START/STOP again to stop count time, then press button SPLIT/RESET again to display second count time. Press button SPLIT/RESET to reset.

- **Display Time Calendar Week and Alarm time**

Under normal time mode, keep pressing button START/STOP to display Month/Day/Week, keep pressing button SPLIT/RESET to display Alarm time, press button SPLIT/RESET and START/STOP in the meantime to chime alarm & ON/OFF alarm.

- **Time and Day Setting**

Under normal time mode, press button MODE three times, the Second and Week flash and the unit into time set mode, press button START/STOP to adjust (keep pressing on button START/STOP can adjust fast), press button SPLIT/RESET again and again to set Second/Minute/Hour/Day/Month/Week. After finished setting, press button MODE to turn into normal time mode.

- **Alarm time setting**

Under normal time mode, press button MODE two times, the Time and Week flash and the unit into Alarm time set mode, then press button SPLIT/RESET to set Time Minute, press button START/STOP to adjust. After finished setting, press button MODE to turn into normal time mode.



Keep out of reach of children



WARNING: Button cell Batteries are Hazardous (new or used). Keep away from Children. Button Cell Batteries can cause severe or fatal injuries in 2 hours or less if they are swallowed or placed inside any part of the body. If you suspect your child has swallowed or inserted a button cell battery, call the 24hour poisons information centre in Australia on 131126 or in New Zealand 0800 764 766 or contact your country's emergency dept. Used batteries must be disposed of in the garbage or a battery recycle facility.

FOR AU/NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

Made in China