

anko

Tower Fan User Manual




Model No.: HEG74
220 - 240Va.c. 50Hz 40W
Rev 2

Note: The specifications and/or components of this appliance are subject to change without prior notice.

1	Safety Instructions	4
2	Components	6
3	Getting to know your Tower Fan	7
4	Instructions for Use	7
4.1	Remote Control	7
4.2	On/Off Button	8
4.3	Speed Button	8
4.4	Oscillating (OSC) Button	8
4.5	Timer Button	8
4.6	Fan Modes	9
4.6.1	Normal Mode "NOR"	9
4.6.2	Natural Mode "NAT"	9
4.6.3	Sleep Mode "SLP"	9
5	Care and Cleaning	10
6	Storage	10
7	Guarantee	11

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this instruction manual before using appliance. 
- Keep appliance out of reach of young children and pets.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do Not disassemble the appliance. There are no user serviceable parts inside.
- **VERY IMPORTANT:**
Ensure that appliance does not get wet (water splashes etc.).
Do not use appliance with wet hands.
Do not immerse appliance in water or other liquids or use near sinks, baths or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them.
- Use appliance only for its intended use. Appliance is intended for household use only and not for commercial or industrial use.
- Do not use appliance if it has been dropped or any part of appliance (including cord or plug) has been damaged.
- If the supply cord is damaged, it must be replaced by a qualified electrical person only or the appliance must be disposed.
- The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to: heat sources (e.g. radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.
- Appliance should not be used outdoors.

- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not hang or wall-mount the appliance.
- Do not operate appliance underneath or near flammable or combustible materials (e.g. curtains). Keep at least 300mm clearance around sides, back, front and top.
- Do not allow curtains, drapes or any other items to drape across the appliance or openings.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Never insert fingers or any other objects through the fan guard and ventilation openings.
- Do not use the product in oily or dirty areas (i.e. the kitchen, smoky place, etc), as the air vents may become blocked.
- Turn off and unplug before cleaning or storing.
- There are no user serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.


Additional Safety Instructions

If using an extension cord:

- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - Do Not pull on the cord.

Read and Save These Instructions

2 Components

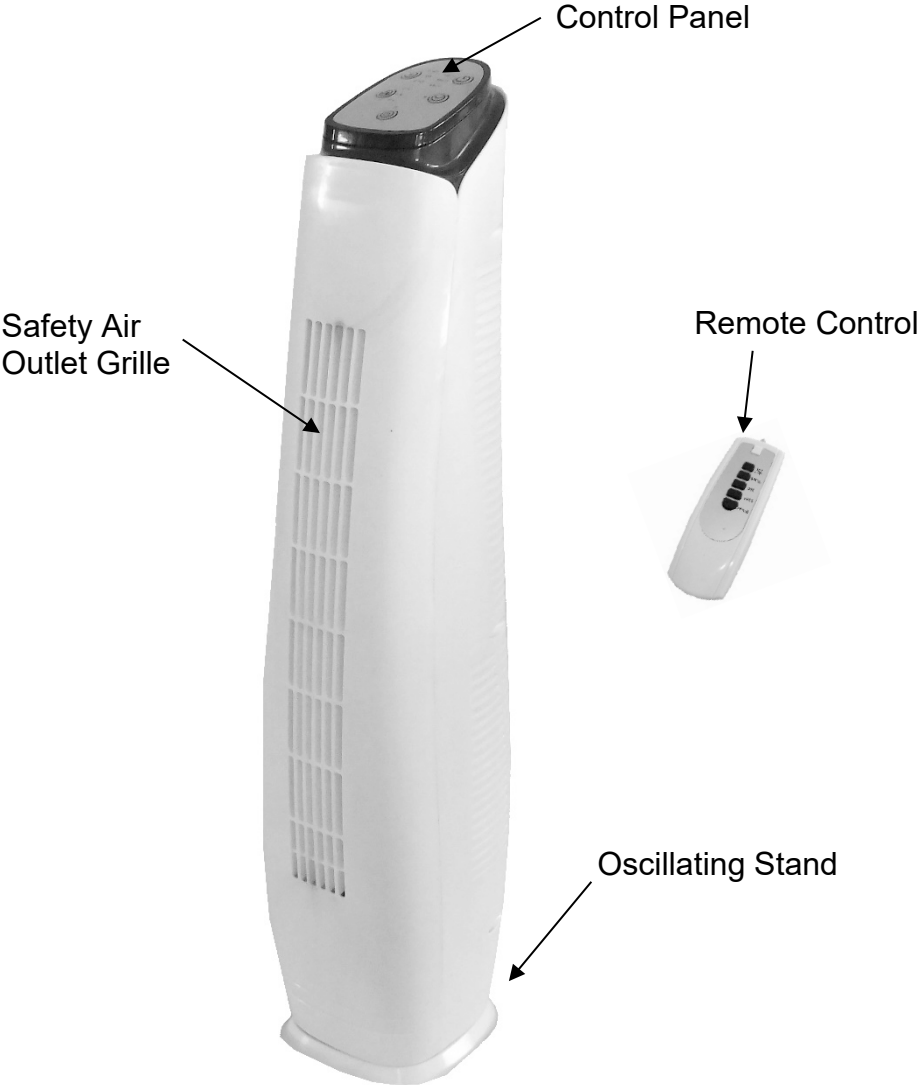

3 Getting to know your Tower Fan


Congratulations on the purchase of your new Tower Fan.

Before first using your new Tower Fan, it is most important that you read and follow the instructions in this booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section "SAFETY INSTRUCTIONS".

Find a safe and convenient place to keep this booklet handy for future reference.

4 Instructions for Use

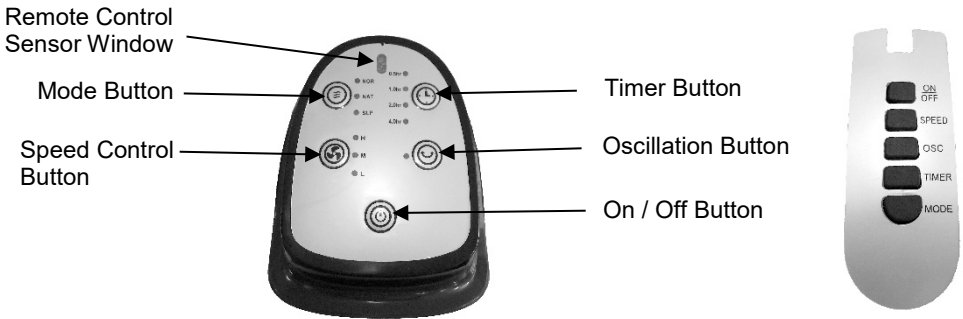

Always operate the product on a flat, level, steady, and stable surface to avoid it overturning.

4.1 Remote Control

Note: 2 x AAA batteries are not included.

The tower fan comes with a remote control for your convenience.

The functions on the remote control are the same as the buttons on the fan control panel.

To install the batteries, first remove the back of the remote control by sliding the back battery cover off.

Insert the batteries inside the battery compartment matching polarity icons with those in the battery compartment and then refit the cover securely.

Battery Type: "1.5V 2 x AAA". Alkaline recommended

Do Not mix new and old batteries in the remote control.

To prevent corrosion, remove the batteries if the remote control will not be used over a lengthy period.

4.2 On/Off Button

- Plug the product into a standard electrical outlet and switch on. The Red Indicator light will illuminate above the On / Off Button indicating Power is supplied to the unit.
- Press the ON / OFF button to turn the fan on.
- Once the fan is ON, you may proceed to set the following functions.
- To Turn Off, press the “ON/OFF” button again.

4.3 Speed Button

- Each press of the “SPEED” button advances the Speed setting as indicated by the lights on the control panel.

Note, “L” indicates Low speed, “M” indicates Medium speed and “H” indicates Maximum speed.

- Continue to press the “SPEED” button to cycle around.

4.4 Oscillating (OSC) Button

- To activate the oscillation function for widespread breeze distribution, press the Oscillating button. (“OSC” on the remote control)
- The Tower will rotate side to side and the light next to the Oscillating button on the fan control panel will illuminate.
- To turn off the oscillation function, press the Oscillating button (“OSC” on the remote control) again when it reaches the desired position.

4.5 Timer Button

This function sets the duration of operation before the fan automatically turns OFF.

Pressing the “Timer” button will increase the time of operation in 0.5 hour increments to a maximum of 7.5 hours.

The total time selected is indicated by the display illuminating at 0.5H, 1H, 0.5 + 1H, 2H, 0.5 + 2H, 1H + 2H, 0.5H + 1H + 2H and so on up until all the lights are illuminated adding up to 7.5H.

Note: Pressing the button once more after 0.5H + 1H + 2H + 4H lights are illuminated (at the same time) will cycle around and cancel the auto off function. (no timer lights illuminated).

The timer will count down until the time has expired, then the fan will turn off automatically.

To cancel the timer, either press the “OFF” button, which will turn the fan off as well, or continue to press the “TIMER” button until it cycles back around to where no timer lights are illuminated

4.6 Fan Modes

The Fan has three modes being “NOR” (normal), “NAT” (natural) and “SLP” (sleep).

With the Fan running in “NOR” mode, press the “MODE” button and the mode will change to “NAT”.

Press the “MODE” button again and the mode will change to “SLP” mode.

Press the “MODE” button again, and it will cycle back around to the “NOR” mode.

4.6.1 Normal Mode “NOR”

The Normal Mode is set by default when the unit is first turned on. The wind remains a constant flow.

4.6.2 Natural Mode “NAT”

The Natural mode creates variable wind patterns so as to simulate the variable winds that you would experience outdoors.

In this mode the speed of the fan continually cycles through a mixed selection of low, medium, high and off in set intervals.

Depending on which Fan Speed is selected, the wind pattern will be different.

4.6.3 Sleep Mode “SLP”

The Sleep mode creates wind patterns that are the same as the Natural Mode wind patterns. However, when the fan is set to either Medium or High Speed, the pattern will drop a speed level after approximately 30 minutes.

For Example: If High Speed Fan and the Sleep Mode are selected, this will be the same wind pattern as High Speed setting in Natural Mode. However, after approximately 30 minutes, the wind pattern will automatically drop down to the same wind pattern as if Natural Mode was selected at Medium fan speed.

After approximately a further 30 minutes, the wind pattern will automatically drop down to the same wind pattern as if Natural Mode was selected at low fan speed.

The fan will continue to run in the Low Speed Natural Mode until it is manually turned off.

Note: To have the fan automatically turn off at your desired time in this mode, use the “Timer” function to select the auto off timer.

5 Care and Cleaning

- Turn off and unplug the unit prior to cleaning.
- Clean the body assembly with a clean, damp cloth and wipe dry.
- Never spray with liquids or submerge the Fan in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

6 Storage

- Switch off and unplug the unit.
- Coil the cable loosely. Do not kink or pull the cable tight.
- Remove the batteries from the remote control if not used for a long period of time.
- Store in a cool dry well-ventilated area.

7 Guarantee

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

IMPORTANT!

For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).

