


Assembly Instructions

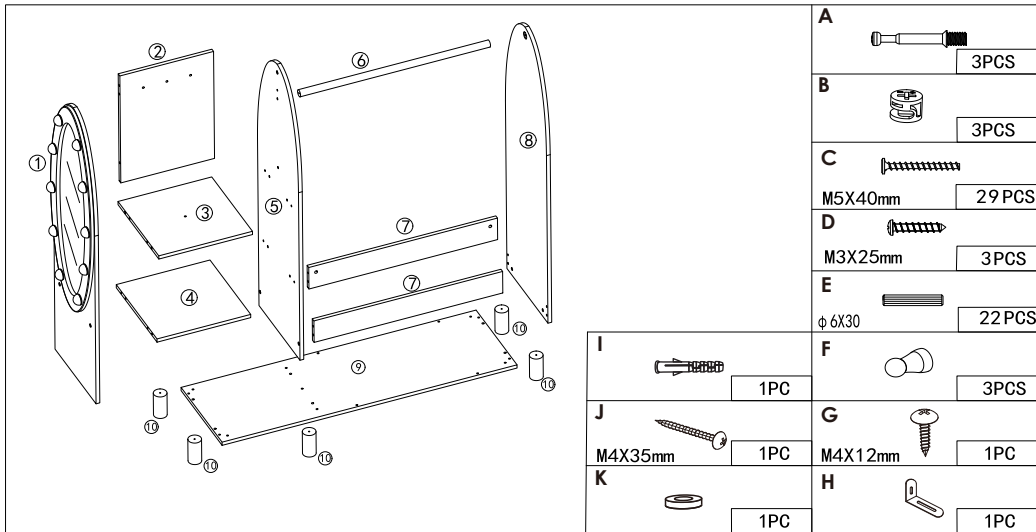

CAUTION:

HARDWARE CONTAINS SCREWS WITH SHARP POINTS.
KEEP UNASSEMBLED PARTS OUT OF THE REACH OF SMALL CHILDREN.
ADULT SUPERVISION IS RECOMMENDED.
ADULT ASSEMBLY IS REQUIRED.

WARNING

CHOKING HAZARD—SMALL PARTS.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: PLEASE SECURE THE PRODUCT WITH THE SUPPLIED WALL FIXING.


- IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
- PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE.
- REGULARLY CHECK THAT ANCHORS ARE SECURELY MAINTAINED.

CAUTION: FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE NOTE THE FOLLOWING:

- CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES (IF YOU ARE UNSURE, PLEASE SEEK PROFESSIONAL ADVICE FROM A QUALIFIED TRADESPERSON.)

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION

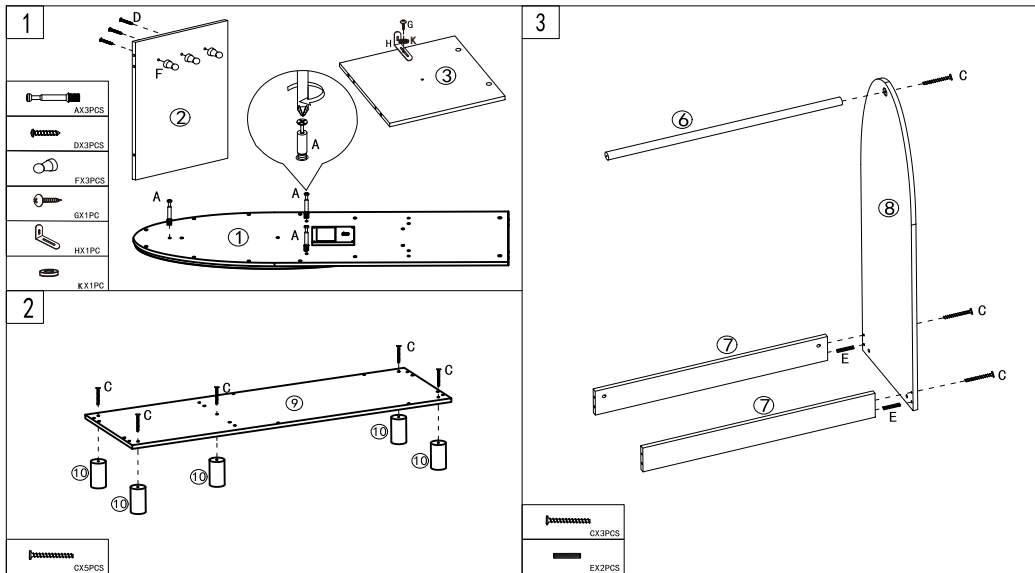

⚠ CAUTION:

HARDWARE CONTAINS SCREWS WITH SHARP POINTS.
KEEP UNASSEMBLED PARTS OUT OF THE REACH OF SMALL CHILDREN.
ADULT SUPERVISION IS RECOMMENDED.
ADULT ASSEMBLY IS REQUIRED.

⚠ WARNING

CHOKING HAZARD—SMALL PARTS.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: PLEASE SECURE THE PRODUCT WITH THE SUPPLIED WALL FIXING.

- IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
- PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE.
- REGULARLY CHECK THAT ANCHORS ARE SECURELY MAINTAINED.


CAUTION: FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE NOTE THE FOLLOWING:

• CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES (IF YOU ARE UNSURE, PLEASE SEEK PROFESSIONAL ADVICE FROM A QUALIFIED TRADESPERSON.)

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. SEEK IMMEDIATE MEDICAL ATTENTION.

4

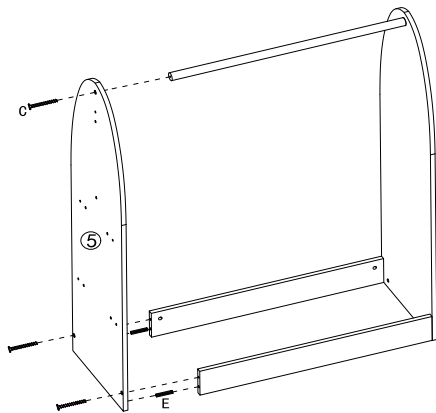


CX3PCS



EX2PCS

5

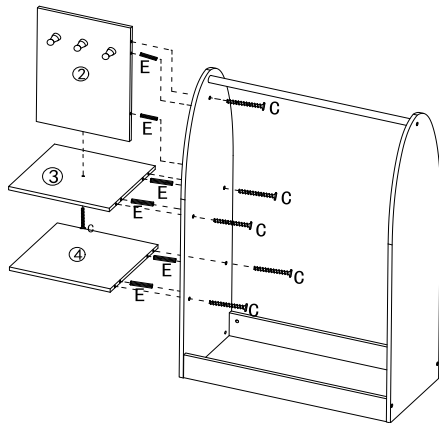

CX5PCS



EX6PCS

**CAUTION:**

HARDWARE CONTAINS SCREWS WITH SHARP POINTS.
KEEP UNASSEMBLED PARTS OUT OF THE REACH OF SMALL CHILDREN.
ADULT SUPERVISION IS RECOMMENDED.
ADULT ASSEMBLY IS REQUIRED.

**WARNING**

CHOKING HAZARD—SMALL PARTS.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING PLEASE SECURE THE PRODUCT WITH THE SUPPLIED WALL FIXING.

- IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
- PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE.
- REGULARLY CHECK THAT ANCHORS ARE SECURELY MAINTAINED.

CAUTION: FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE NOTE THE FOLLOWING:


 
- CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES (IF YOU ARE UNSURE, PLEASE SEEK PROFESSIONAL ADVICE FROM A QUALIFIED TRADESPERSON.)

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. SEEK IMMEDIATE MEDICAL ATTENTION

6

1. Insert **B** to the hole and make sure opening on **B** aim to **A**.
2. Assemble **②** to **①** and tighten screw **B** with screwdriver.
3. Assemble **③** to **①** and tighten screw **B** with screwdriver.

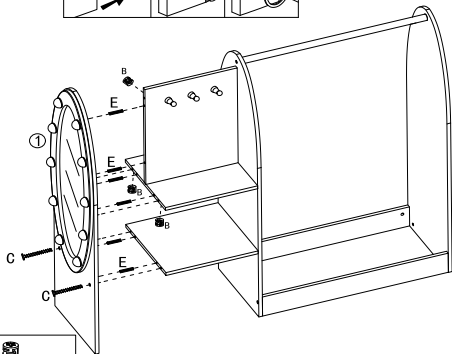

BX3PCS




CX2PCS



EX6PCS

7

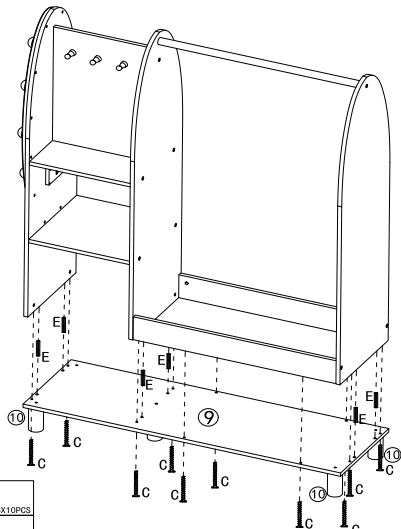

CX10PCS



EX6PCS

**CAUTION:**

HARDWARE CONTAINS SCREWS WITH SHARP POINTS.
KEEP UNASSEMBLED PARTS OUT OF THE REACH OF SMALL CHILDREN.
ADULT SUPERVISION IS RECOMMENDED.
ADULT ASSEMBLY IS REQUIRED.

**WARNING**

CHOKING HAZARD—SMALL PARTS.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: PLEASE SECURE THE PRODUCT WITH THE SUPPLIED WALL FIXING.

- IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
- PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE.
- REGULARLY CHECK THAT ANCHORS ARE SECURELY MAINTAINED.


 
CAUTION: FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE NOTE THE FOLLOWING:

CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES (IF YOU ARE UNSURE, PLEASE SEEK PROFESSIONAL ADVICE FROM A QUALIFIED TRADESPERSON.)

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. SEEK IMMEDIATE MEDICAL ATTENTION.

8

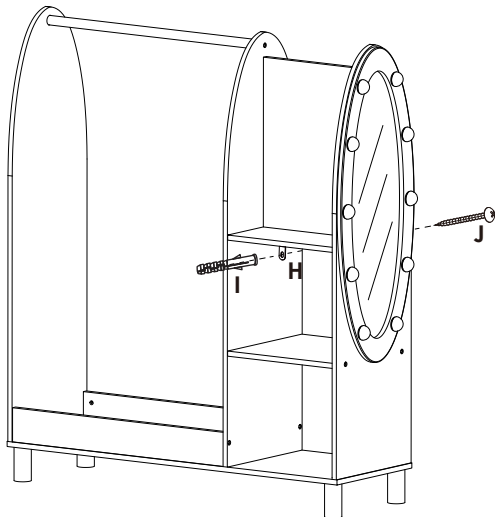

JX1PC



IX1PC

**CAUTION:**

HARDWARE CONTAINS SCREWS WITH SHARP POINTS.
KEEP UNASSEMBLED PARTS OUT OF THE REACH OF SMALL CHILDREN.
ADULT SUPERVISION IS RECOMMENDED.
ADULT ASSEMBLY IS REQUIRED.

**WARNING**

CHOKING HAZARD—SMALL PARTS.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

WARNING: PLEASE SECURE THE PRODUCT WITH THE SUPPLIED WALL FIXING.

- IT IS STRONGLY RECOMMENDED THAT THIS PRODUCT IS PERMANENTLY FIXED TO THE WALL.
- PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT OF WHAT FIXING DEVICE TO USE.
- REGULARLY CHECK THAT ANCHORS ARE SECURELY MAINTAINED.

CAUTION: FOR YOUR SAFETY WHEN ATTACHING THE ANCHOR FIXINGS, PLEASE NOTE THE FOLLOWING:

- CHECK ANY ELECTRICAL WIRES OR PLUMBING INSIDE THE WALL BEFORE DRILLING ANY HOLES (IF YOU ARE UNSURE, PLEASE SEEK PROFESSIONAL ADVICE FROM A QUALIFIED TRADESPERSON.)

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ and -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE NOT TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: DISPOSE OF USED BATTERIES IMMEDIATELY. KEEP NEW AND USED BATTERIES AWAY FROM CHILDREN IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. SEEK IMMEDIATE MEDICAL ATTENTION