

REMINGTON®

POWER PRO GROOMING KIT

**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE



To register your product go to
remington-products.com.au
remington.co.nz

2 YEAR WARRANTY

HC9000AU

IMPORTANT SAFETY INSTRUCTIONS FOR THE HAIR CLIPPER

When using an electric appliance, basic safety precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

CAUTION: Keep the power adaptor away from water.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

WARNING: To reduce the risk of burns, fire, electric shock or injuries please follow the below instructions.

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower. Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a bath or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using. Unplug this appliance before cleaning it.
- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Keep the appliance and the power cord away from edge of tables or counter tops and out of reach of children and persons with reduced physical, sensory or mental capabilities.

- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorised service centre for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the hair clipper while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance and then the adaptor to the outlet. To disconnect, turn all controls to OFF, then remove adaptor from outlet, then detach powercord from the hair clipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.


WARNING - KEEP THE APPLIANCE DRY

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

HC9000AU REMINGTON POWER PRO HAIR CLIPPER

Thank you for purchasing your new Remington® Power Pro Grooming Kit. Inside this manual you will find tips on using and caring for your hair clipper.

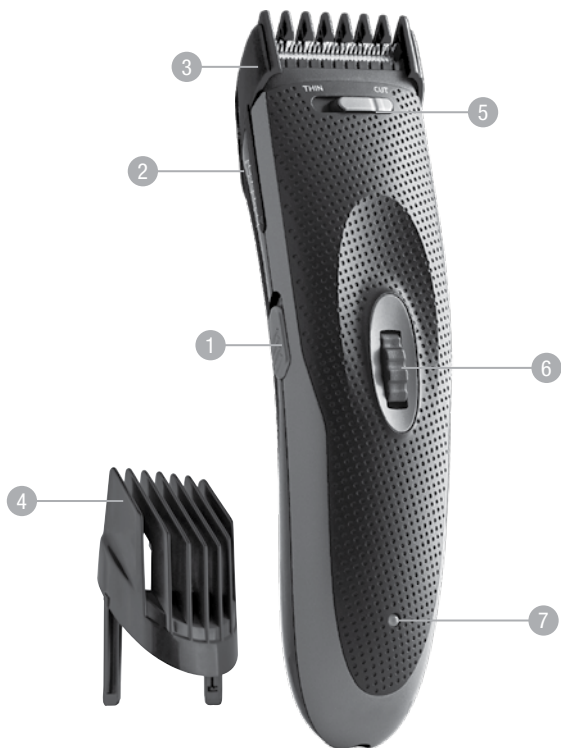

KEY PARTS

1. On/Off Switch
2. Comb Length Setting Indicator
3. Adjustable Comb (3-15mm)
4. Adjustable Comb (18-30mm)
5. Integrated Hair Texture Function
6. Comb Length Adjustment Wheel
7. Charging Indicator Light

Also Includes:

- Lubricating Oil
- Cleaning Brush
- Power Adaptor

ABOUT YOUR HAIR CLIPPER

HC9000AU SPECIFICATIONS

Power System	Cord/Cordless
Full Charge Time	16 Hours
Run Time	45 Minutes
Indicators	Charging
Worldwide Voltage	Yes

Power System

Cord/Cordless – can be used with or without the power cord.

Charging Indicator

Red light that glows when the hair clipper is being charged.

Voltage Type

Worldwide Voltage – automatically adapts to an outlet voltage between 100-240V.

NOTE: Some countries will require the use of a plug adaptor that is not included with your hair clipper.

CHARGING YOUR CLIPPER

Cordless Use

- Before using your hair clipper for the first time, charge it for 16 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains. The charging LED light will display on the clipper.
- If the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store.
- Fully recharge your hair clipper when you would like to use it again.
- It is not recommended to use this hair clipper directly from the power outlet when it has been fully charged, however, while using the hair clipper in cordless mode, if there is a noticeable drop in power, you can use the hair clipper directly from the power outlet.
- To preserve the life of your batteries, let them run out every six months then recharge for 24 hours.

Corded Use

- Connect the charging adaptor to the product and then to the mains.
- When the cord is connected to the mains, a charging LED light is displayed on the hair clipper.

CAUTION: Extended mains (corded) only use will result in the reduction of the battery life.

HOW TO USE

Before Starting to Cut

1. Inspect the hair clipper making sure that it is free from hair and dirt.
2. Ensure that the hair is thoroughly dry and tangle free.
3. The blades on your hair clipper should be oiled before every haircut.

Lubricating the Hair Clipper Blades

Simply place a few drops of oil on the teeth of the blades. Use only the light grade oil supplied or a suitable alternative like sewing machine oil. Only this type of oil is suitable due to the high oscillation speed of the blades on your Remington hair clipper. Do not use hair oil, grease or any oil mixed with kerosene or any solvent as the solvent will evaporate and leave the thick oil, slowing the blades.

If oil is not applied to the blades or only a small amount of oil is applied, this may cause cutting problems. Blades will wear prematurely and not cut properly if they are not sufficiently lubricated. There may also be a pulling sensation on the hair.

Instructions for Hair Cutting

NOTE: For even cutting, allow the trimmer comb/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum length trimmer comb, until you know how short you would like your hair to be.

NOTE: The comb guide lengths described for use in the steps below are an example only, if you want a longer or shorter hair cut you will need to adjust the comb guide lengths to suit your requirements.

Comb Settings

MARK	LENGTH SETTING	
	Comb 1 - Short	Comb 2 - Long
1	3mm	18mm
.	4.5mm	19.5mm
3	6mm	21mm
.	7.5mm	22.5mm
5	9mm	24mm
.	10.5mm	25.5mm
7	12mm	27mm
.	13.5mm	28.5mm
9	15mm	30mm

Step 1 - Nape of the Neck

1. Use 3mm or 6mm setting.
2. Hold the hair clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
3. Slowly lift the hair clipper, working upwards and outwards through the hair, trimming just a little at a time.

Step 2 - Back and Side of the Head

With the 9mm or 12mm setting in place, cut the hair at the back of the head.

Step 3 - Side of the Head

With the 9mm or 12mm setting in place, trim sideburns.

Step 4 - Top of the Head

1. With the setting of your choice, cut the hair on top of the head against the direction in which the hair normally grows.
2. For longer hair on top, use scissors. Lift the hair on top of the head with styling comb. Cut over the styling comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
3. Always work from the back of the head.

Step 5 - The Finishing Touches

1. Use the hair clipper without an attachment comb for close trimming around the base and sides of the neck.
2. To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed hair clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

CLEANING & MAINTENANCE

To ensure long lasting performance of your hair clipper, clean the blades and unit regularly.

NOTE: Ensure that the hair clipper is turned off and unplugged when cleaning.

After Each Use

1. Ensure the hair clipper is switched off and disconnected from the mains household power outlet.
2. Brush the accumulated hair from the blades. Do not submerge the hair clipper in water.
3. To clean the body of the unit, wipe with a damp cloth and dry immediately.
4. Gently brush the remaining hairs away from the hair clipper comb and hair clipper blade. Do not rinse the cutter assembly under water.

Every Six Months

At regular intervals the blade set should be removed and cleaned.

1. Ensure that the hair clipper is empty of power, is switched off and disconnected from the mains household power outlet.
2. Remove the comb attachment.
3. Hold the hair clipper in one hand so that the blades are at the top, and the front of the hair clipper is facing you.
4. Place your thumb of the opposite hand underneath the blades at the front of the unit, hold the back of the blade set with your fore finger and middle finger and firmly press upwards with your thumb. The blade set will detach from the hair clipper.
5. Brush the accumulated hair from the hair pocket and blades.
6. Replace the blade set by inserting the notch (on the inside at the bottom of the blade set) into the groove of the hair pocket and firmly push down with the palm of your hand until you hear an audible 'click' and the blade set is locked into place.

Storage

When not in use, unplug the hair clipper and store it out of reach of children in a safe dry place. Never wrap the cord around the hair clipper as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections.

TROUBLESHOOTING

The hair clipper does not work when turned on:

Hair clipper must be charged for a full 16 hours, or use hair clipper while plugged into wall.

Hair clipper cutters do not move:

The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning & Maintenance section on page 7.

Hair clipper does not hold charge:

Fully discharge the battery by running hair clipper until it stops; then follow recharging instructions in Charging Your Hair Clipper section on page 5.



THIS PRODUCT IS NOT SUITABLE TO USE IN THE BATH OR SHOWER.

This product conforms to radio frequency interference requirements
Any product purchased and used commercially carries a limited 90 Day Warranty.

IMPORTANT SAFETY INSTRUCTIONS FOR THE TRIMMERS

When using appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- To prevent accidents keep the appliance away from your eyelashes as well as clothes, brushes and wire.
- Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.
- Never insert the trimmer more than 6mm (1/4") into your nose or ear. Foreign objects should not come into contact with your ear drum.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use the trimmers with damaged or broken cutters, as injury may occur.
- Always store the appliances in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- Do not disassemble the detail trimmer cutter assembly.
- Do not submerge the units in water as damage will occur.
- This appliance is for household use only.

SAVE THESE INSTRUCTIONS

HC9000AU REMINGTON POWER PRO TRIMMERS

Thank you for purchasing your new Remington® Power Pro Grooming Kit. Inside this manual you will find tips on using and caring for your Detail Trimmer and Nose & Ear Trimmer.

Detail Trimmer



Nose & Ear Trimmer



KEY PARTS

Detail Trimmer

1. Detail Trimmer Head Attachment
2. On/Off Switch
3. Battery Compartment

Nose & Ear Trimmer

1. Nose & Ear Trimmer Head Attachment
2. On/Off Switch
3. Battery Compartment

Also Includes:

- 2 x AA batteries

INSERTING THE BATTERY

Your Remington® Power Pro Grooming Kit trimmers are each powered by one “AA” ALKALINE battery, which are included in your pack.

1. To open the battery compartment, turn the base of the unit approximately 1cm clockwise (to the right) and pull it off.
2. Insert the battery into the unit, positive end first.
3. Replace the base and turn it 1cm anti-clockwise (to the left) to lock it in place.

BATTERY CAUTIONS

- Using non-alkaline batteries will impair the unit's operating performance.
- The battery should not be left in the unit if it is not in use for long periods.
- To prevent battery corrosion, the unit should be stored in a dry environment.
- Dead batteries should be removed immediately and disposed of properly.
- Do not use rechargeable batteries with this appliance. The lower voltage in rechargeable batteries impairs the performance of the cutting unit.

HOW TO USE

To remove hair from the nose

1. Select the nose & ear trimmer.
2. Turn the trimmer on.
3. Insert the trimmer's cutting unit gently into the nostril.
4. Rotate the trimmer in a circular motion around the opening of the nostril.
5. For best cutting efficiency, gently move trimmer in and out of the nostril as you rotate the trimmer.
6. Do not insert the trimmer more than 6mm into your nostril.

NOTE: Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.

To remove hair from the ear

1. Select the nose & ear trimmer.
2. Turn the trimmer on.
3. Insert the trimmer's cutting unit gently into the outer ear canal opening.
4. Gently rotate the trimmer in a circular motion.
5. To trim hairs protruding from the surface of the area surrounding the outer ear canal, guide the trimmer around the edge of the ear.
6. Avoid inserting the trimmer more than 6mm into your ear canal.

Note: Do not apply excessive pressure as this damages the trimmer and may cause skin injury.

To trim sideburns

1. Select the detail trimmer.
2. Turn the trimmer on.
3. Gently guide the cutting unit to your sideburns holding the unit horizontally at a 90 degree angle to the sideburns.
4. Trim the sideburns moving the trimmer slowly and carefully, to ensure that you do not accidentally cut hairs that you do not intend to trim.

NOTE: It is not recommended that you use the trimmer to define or trim the eyebrows.

CLEANING & MAINTENANCE

Both your detail trimmer and nose & ear trimmer are designed to give you years of comfortable use. To ensure that you get optimal performance from your trimmers, follow these simple cleaning and lubricating tips:

- After each use, brush or blow accumulated hair from the cutting units.

Rinsing Your Trimmers

- The heads of your trimmers are washable and can be rinsed with cool or warm water. Simply twist the attachment head 1cm anticlockwise (to the left), remove the head &/or blade (nose & ear trimmer) and rinse them under the tap - **do not use hot water. Do not allow water into the body of the handpiece.**
- Afterward, shake excess water from the cutter head. Be sure to be careful when handling the nose trimmer blades as they are sharp.
- Replace the head in the same position as it was removed, turning it 1cm clockwise (to the right) until it locks into place.

Lubricating the Cutters

- After rinsing the attachment heads, apply a drop or two of lubricating oil or sewing machine oil to the cutting teeth &/or blades (nose & ear trimmer).
- Don't apply too much oil, or it may spray.
- Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.



THIS PRODUCT IS NOT SUITABLE TO USE IN THE BATH OR SHOWER.

This product conforms to radio frequency interference requirements
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

www.remington.co.nz

REMINGTON®

REMINGTON SERVICE HOTLINE

📞 Australia 1800 623 118 (toll free)

📞 New Zealand 0800 736 776 (toll free)

® Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries

Made in China to the Specifications of Spectrum Brands, Inc.

© 2018 Spectrum Brands Inc.

REV: 02/18

PART NO: T22-7000176

