

Size: 21 X 29.7cm

SET-UP INSTRUCTIONS FOR 6FT

SET-UP INSTRUCTIONS:

Assembling the Grim Reaper. Carefully remove contents from the box.

Step 1: Please use the Metal Support Rods "F" to connect the Right Foot "R" and the left Foot "L" together, which will complete the assembly of the Grim Reapers Support Base. Once the Support Base is assembled, insert the Right and Left Foot Metal Support Rods "A" into the top of the Grim Reaper's feet on the Support Base, as shown in Diagram "1". Once the Metal Support Rods are in place, attach the "Hip Rod" section "C" into the Support Rods, as shown in Diagram "1". Please make sure to align the "Hip Rod" section correctly, as shown in Figure "1-A". Please note the "Locking Pin" pictured in the blowup Figure "1-B" - once you have joined the two sections together, push in on the "Locking Pin" to connect the metal support. When disassembling the Grim Reaper, reverse the procedure.

Step 2: Attach the Grim Reaper's Body Connection Rod "D" into the Hip Section "C", as shown in Diagram "2". Once the metal stand is fully assemble, attach the Grim Reaper's Body Section "F" to the metal Support Rod "D", which is shown in Diagram "2".



Step 3: Once the Reaper's Body is attached to the Hip Section, the Grim Reaper's Head "G" can be attached to the Body Section (see Diagram "3" for reference). Make sure that the Grim Reaper's Head is securely attached to the Body before connecting the pair of Wire Connectors together. When connecting the Wire Connectors, make sure that each end aligns correctly, as shown in the blowup in Diagram "3".

Step 4: Once the Grim Reaper is assembled, the Reaper's Hood can be placed over the skull and secured in place with Hook and Loop tabs, as shown in the blow up between Diagram "3" and "4". The poseable wire arms and the costume can be adjusted to give the Grim Reaper a more sinister look.

Step 5: To assemble the Grim Rasper's Scythe, connect the 4-Support Rods together and then place the Scythe "B-2" into place, attach the scythe's other end into the "Scythe's Holder" is located on left foot, as shown in Diagram "5" and "4".

Step 6: The assembled Scythe can now be attached through the slot located in the Grim Reaper's Left Hand, as shown in Diagram "6".

Step 7: You can adjust the poseable wire arms and the costume in order to give the assembled character a more sinister look.

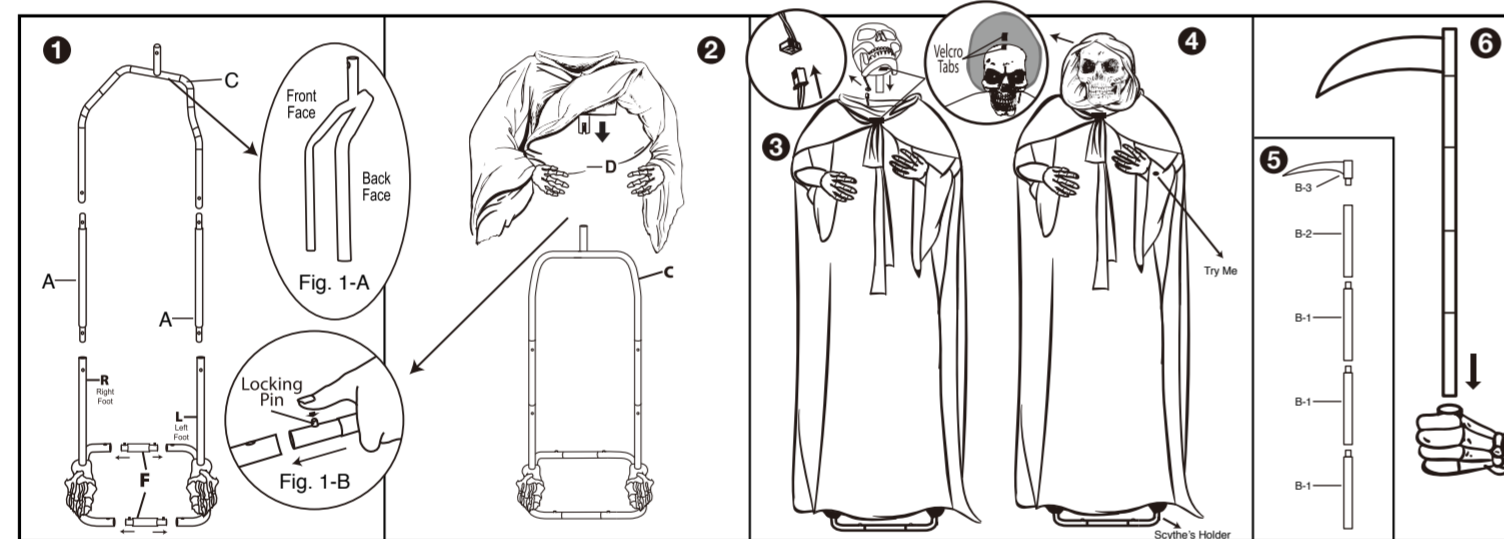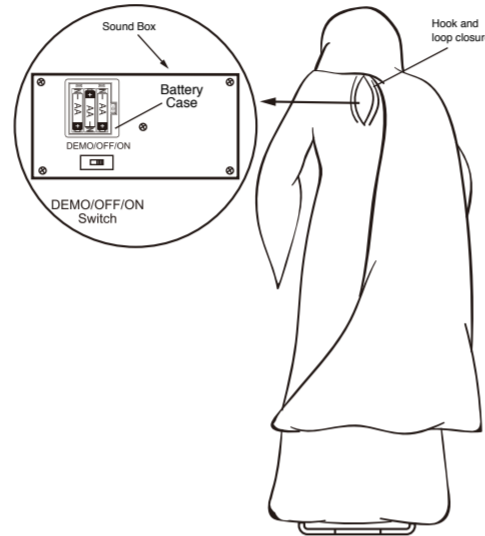

Battery Replacement & Item Function:

Battery-powered. Uses three (3) "AA" batteries (batteries included).

1. Remove battery case cover, battery case is located on the back of the upper body. Please Open the hook and loop closure and use a screwdriver to remove the safety screw and then remove the battery compartment cover. (as show in diagram "Back View")

2. Clean the battery contacts and also those of the device prior to battery installation.

3. Insert 3 "AA" batteries with correct polarity and replace cover and safety screw.

4. The DEMO/OFF/ON switch is located on the battery case. Place the switch into the "ON" position to activate the "Sound Sensor" and "Try Me" function. When activated, the unit will come to life. Place the Switch into the "DEMO" position to activate the "Try-Me" feature and press the "Try-Me" button to see and hear a short demonstration. Place the Switch into the "OFF" position and remove the batteries when the unit is not in use or is being stored.

5. Replace batteries if the movement becomes slow, LED become dim or sound is distorted or faint.

Warning-Battery:

1. Do not mix old and new batteries.

2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

3. Alkaline batteries are suggested for longer life.


4. Exhausted batteries are to be removed from the product.

5. Dispose of exhausted batteries with care.

6. Do not dispose of batteries in fire, batteries may explode or leak.

WARNING:
THIS IS NOT A TOY. FOR DECORATIVE PURPOSES ONLY.
NOT INTENDED FOR USE BY CHILDREN UNDER THE AGE OF 14.
DO NOT PLACE PRODUCT NEAR ANY HEAT SOURCE AND
FIRE SOURCE SUCH AS RADIATORS, STOVES, FIREPLACES, ETC.

CAUTION: Please remove batteries if their power is consumed or if the product is to be left unused for a long period of time.

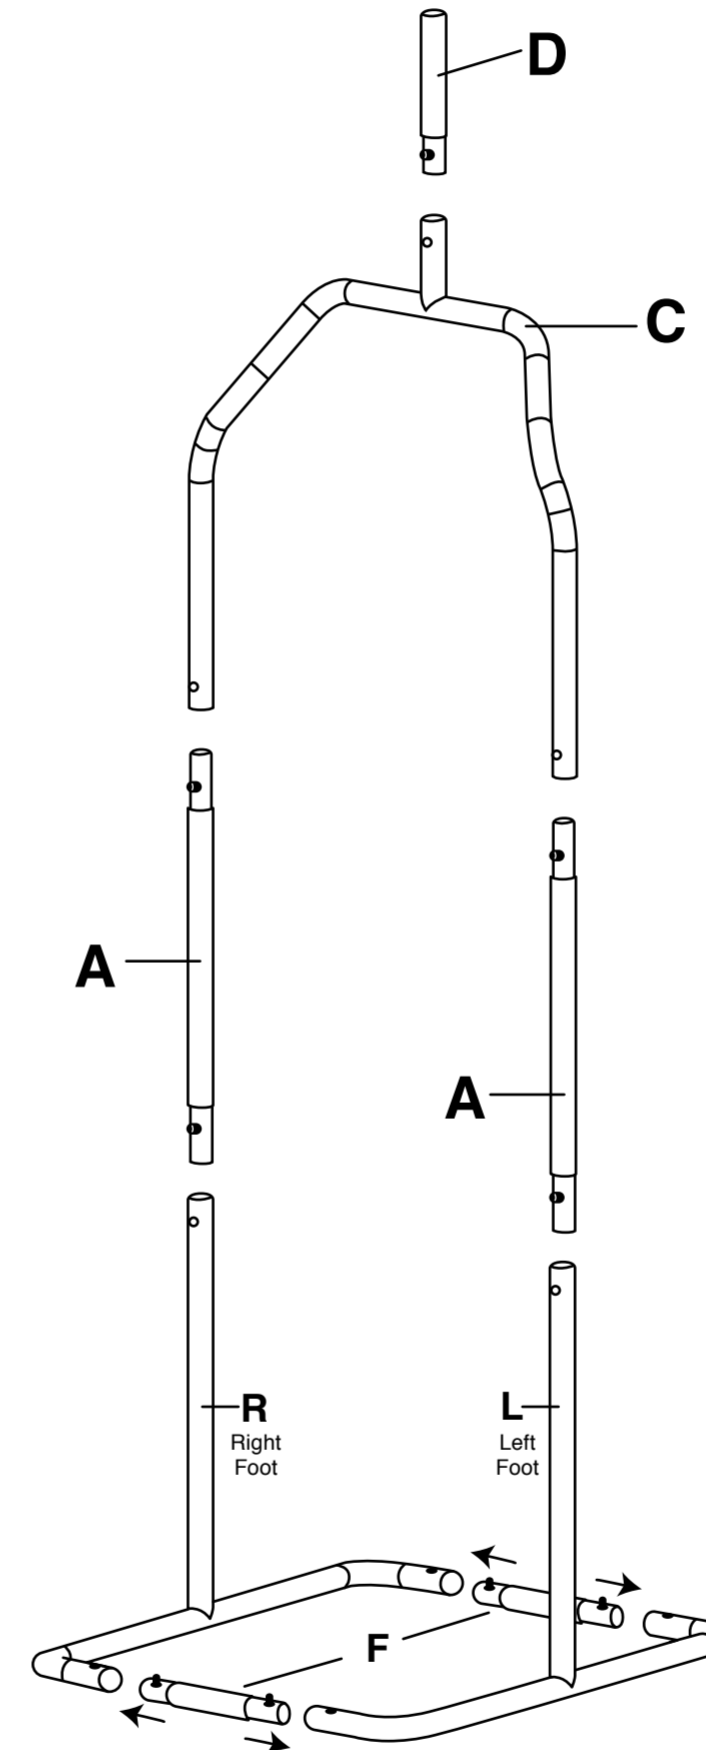

Part	Quantity
A	2
C	1
D	1
F	2
L	1
R	1