

anko

HOME SPEAKER RETRO

43056019

anko



Contents

1.Warning

2.Product Overview

-Overview of the Rear Panel

-Overview of the Top control panel

3.Get Started

-Connect power

4.Play

-Basic key play operations

5.USB play ability information

6.Connect with Bluetooth



7.Connect with AUX

8.Product information

9.Troubleshooting

10.Warranty

Warning

|  | CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN |  |
|--|---|---|
| The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be sufficient magnitude to constitute a risk of electric shock to persons. | CAUTION: TO REDUCE THE RISK OF SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | The exclamation point within an equilateral triangle is intended alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. |

Important precautions:

- 1.The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 2.Minimum distances 100 cm around the apparatus for sufficient ventilation.
- 3.The ventilation should not be impeded by covering the ventilation opening with items, such as news papers, table-cloths or curtains.
- 4.No naked flame sources such as lighted candles, should be placed on the apparatus.
- 5.When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 6.Working temperature: -10 °C ~ +45 °C.
- 7.The use of apparatus in moderate climates.
- 8.Attention should be drawn to the environmental aspects of battery disposal.
- 9.Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 10.Excessive sound pressure from earphones and headphones can cause hearing loss.
- 11.The internal battery is non-user replaceable.
- 12.Do not use this apparatus near the water.

 
2.Product Overview

Introduction

With this unit, you can:


- Enjoy audio from USB storage Devices, and other external device;

Overview of the Rear Panel

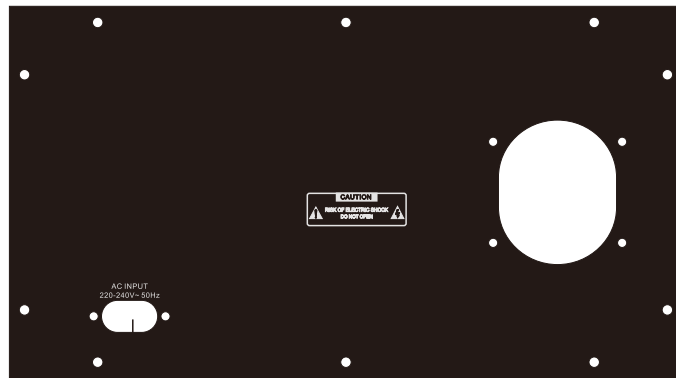

AC Power Input jack

 Overview of the Top control panel

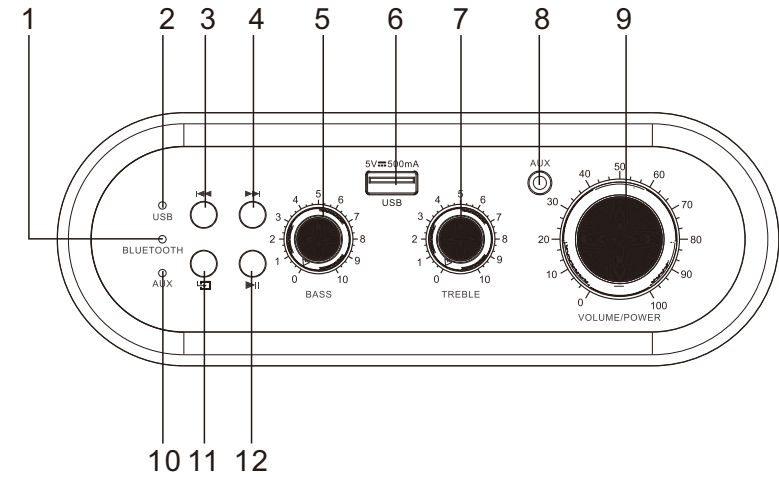

1. Bluetooth mode indicator light
2. USB mode indicator light
3. Previous button
4. Next button
5. Bass Volume Knob
6. USB Input jack
7. Treble Volume Knob
8. AUX Input jack
9. Power On/Off and Volume knob
10. AUX mode indicator light
11. Mode switching button
12. Play/Pause button

3. Get started

! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

 
Connect power

! Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on back or the underside of the unit.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.

Before you connect the AC power cord, make sure that you have completed all other connections



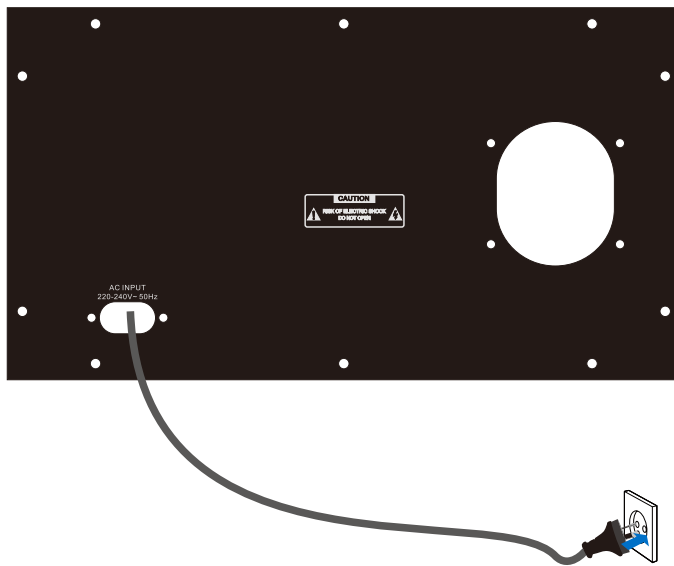




 







Connect the power cable to the wall socket:



4. Play

Basic key play operations

You can control play through following operations.

| Key | Function |
|--|--|
|  BLUETOOTH | Bluetooth mode indicator light The light will keep flash when switch to bluetooth mode and keep static when playing. |
|  USB | USB mode indicator light The light will keep flash when switch to bluetooth mode and keep static when playing. |
|   | Previous button Press this previous button for previous track when playing music on USB or Bluetooth mode. |
|   | Next button Press this next button for next track when playing music on USB or Bluetooth mode. |
|  | Bass Volume Knob Turn the bass volume knob to adjust the bass volume. |
|  | USB Input jack Insert the USB driver to USB jack to play music. |
|  | Treble Volume Knob Turn the treble volume knob to adjust the treble volume. |
|  | AUX Input jack Insert the AUX input cable to external device. |
|  | Power On/Off and Volume knob *Turn right direction to power on the speaker. *Turn this knob to adjust the master volume. |
|  AUX | AUX mode indicator light The light will keep flash when switch to bluetooth mode and keep static when playing. |
|  | Mode switching button Switching between Bluetooth/USB/AUX mode. |
|   | Play/Pause button Press this Play/Pause button to play or pause the music when playing music on USB or Bluetooth mode. |

5.USB play ability information

Compatible USB storage devices:

- USB flash memory (USB 2.0 or USB 1.1)
- USB flash players(USB 2.0 or USB 1.1)
- Memory cards (requires an additional card reader to work with this apparatus)

Supported for formats:

- USB or memory file format FAT32
- MP3 bitrate (data rate):32-320Kbps and variable bitrate
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders:maximum 99
- Number of tracks/titles:maximum 999
- File name in Unicode UTF8 (maximum length:32 bytes)

Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3.
- Unsupported the file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and don't play.

Play from USB

Make sure that the USB storage device contains playable audio in supported MP3 format.

1. Press ◀▶ key to select
2. Press ▶⏸ key to play or pause


Important:

USB socket is only for music playing, not support charging.

The MAX memory size of USB:32Gb


USB memory device should be formatted as FAT32.

6.Connect with Bluetooth

 
1. Press the  button on the Top Control panel switch to the BLUETOOTH CONNECT mode.
2. Open the Bluetooth on the external device (must have Bluetooth function), and the name "43056019" will show on the device, please try to connect it.
3. Once connected, you can hear a small sound from the speaker.
4. You can use the ◀▶ or ▶▶ key on the Top Control panel to control the tracks of the external device.

Note: no password needed for connecting.

7.Connect with AUX

- 1.Press the  button on the Top Control panel to switch to the AUX,
- 2.Connect an external audio source use a supplied AUX cable.
- 3.Once connected,turn on your external device music

Caution: Please turn off your party speaker before connect AUX cable in order to avoiding unexpected noise.

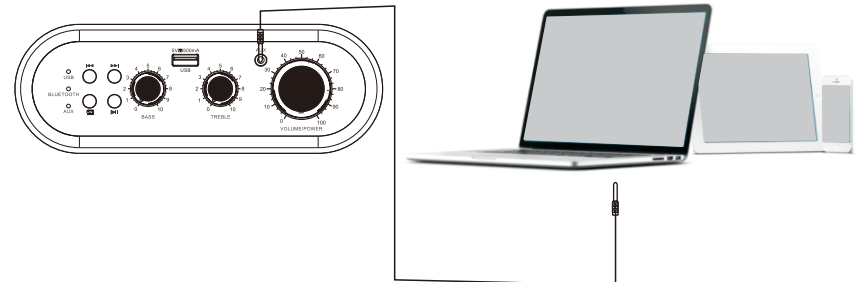

8. Product information

Specifications

| Amplifier | |
|----------------------------|---|
| Output power | 50W |
| Input Sensitivity | ≥500mV |
| Speaker | |
| Treble Speaker | 2 Inch x 2 |
| Bass Speaker | 4 Inch |
| General information | |
| AC Power | AC220-240V~ 50HZ |
| Package box inside include | Speaker, User manual, AUX Cable, AC Power cable |

9. Troubleshooting



Warning

- Never remove the casing of this speaker.

If you encounter problems when using this speaker, check the following points before requesting service.

No power

- Ensure that the AC power plug of the speaker is connected properly.
- Ensure that there is power at the AC outlet.

No sound or poor sound

- Adjust the volume.
- Disconnect the headphones.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

No response from the speaker

- Disconnect and reconnect the AC power plug, then turn on the speaker again.

USB device not supported

- The USB device is incompatible with the unit. Try another one.
- The USB device is incompatible with the speaker or the USB damaged.

Bluetooth can not search or connect

- If other devices are connected to the machine, please disconnect other Bluetooth devices and use the new device to search and connect again.
- Turn off the Bluetooth of your device, then turn on your device Bluetooth again, search and connect. Or turn off the speaker and turn on again and switch to Bluetooth mode.

Warranty

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.