

anko Bluetooth® Karaoke Speaker



Keycode:43056156

operation instruction



Avoids to use battery in following conditions:

- High or low extreme temperature during use, storage or transportation.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

 
Product feature :

- 6 LED lighting modes, Romantic colorful light
- Bluetooth® version 5.0 , compatible with all audio devices with Bluetooth® function, as MP3/4, mobile, computer, ipad...
- Built-in rechargeable lithium battery.

Button and interface :

Location of Controls

1. Adjustable Mic Stand
2. Mic Stand Holder
3. Handle
4. LED Indicator
5. [LED] Button
6. [Power] Switch
7. USB Charging Port
8. 3.5 mm Auxiliary (AUX) Input
9. Mic 1 Input
10. Mic 2 Input
11. Mic Volume Knob
12. Mic Echo Knob
13. Main Volume Knob

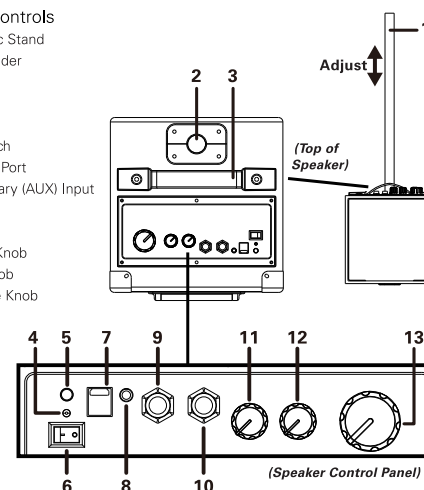

Charging the Speaker

 
Plug the micro-USB connector (smaller) of the included charging cable into the micro-USB port on the top of the speaker. Plug the USB connector (larger) into a USB power source, or into a **5V USB charging adapter** (not included) and plug into a wall outlet.

The LED indicator will **turn RED** while charging and turn OFF when fully charged. On low power, a tone will be periodically heard, indicating that the speaker needs to be recharged.

Powering ON/OFF

Make sure that the speaker has been charged.

- Flip the [Power] Switch to the ON position to power ON. A tone will be heard, and the speaker will enter Bluetooth pairing mode. It will automatically re-pair to any nearby, previously-paired device with Bluetooth enabled.
- Flip the [Power] switch to the OFF position to power OFF.

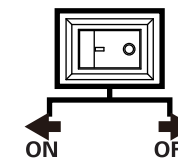

Playing Music

 
To play music on the speaker, you must be paired to a Bluetooth-enabled device or connected with an aux cable. See the **Bluetooth Pairing** and **Using with a Wired Device** sections of this manual.

Adjusting Volume

- To adjust overall volume, turn the Main Volume Knob on the top of the speaker, or use the controls on your connected device.
- To adjust microphone volume, turn the Mic Volume Knob.

Connecting with Bluetooth

1. Power the speaker ON. A tone will be heard, and the LED indicator will **quickly flash BLUE**.
2. Set your mobile device to search for Bluetooth devices. When it appears, select **BSSK1050BK** from the list of found devices.
3. After a successful pairing, a tone will be heard and the LED indicator will **slowly flash BLUE**.

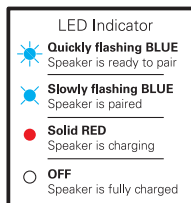

In Bluetooth mode, playback and volume can be adjusted by the controls on the top of the speaker, or by the controls on your paired device.

Using the AUX Input

Insert one connector of a 3.5 mm auxiliary cable (not included) into the 3.5 mm auxiliary input port on the top of the speaker.

Insert the other connector into the headphone jack or 3.5 mm AUX output port on your media-playing device. The LED indicator will **turn solid BLUE** and all Bluetooth pairings will be disabled when the AUX input is in use.

 
Using the Speaker Lights

Press the [LED] button to cycle through the light modes.

Setting Up the Stand

Insert the base of the included mic stand into the stand holder on the top of the speaker, as shown in the diagram at right.

Pull the body of the stand up or down to adjust to the desired height.

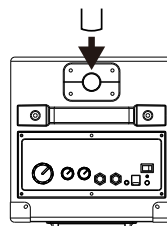

Using the Microphone

Plug the connector of the included microphone into the Mic 1 Input port on the top of the speaker. Slide the microphone into the microphone holder at the top of the mic stand.

You can plug a second microphone (not included) into the Mic 2 Input port on the top of the speaker.

Microphone Controls

- Slide the microphone's power switch to the ON or OFF position to power the microphone ON or OFF.
- Adjust microphone echo using the Mic Echo Knob.
- Adjust microphone volume using the Mic Volume Knob.

NOTE: In order to avoid loud feedback, keep the microphone pointed in the opposite direction of the speaker. When not using, turn the mic volume down or turn the microphone off.

Packing accessories:

1. Bluetooth® Speaker
2. USB charging cable
3. Adjustable Mic Stand
4. Microphone
5. Instruction manual

Warning

- **DANGER:** To reduce the risk of fire, do not immerse this product into water or under raining.
- **WARNING:** Please refer to the electrical compliance label before charging or operating the unit.
- **WARNING:** Product shall not be exposed to excessive heat such as direct sunshine, fire or under the wind shield.
- Do not place or store this product where it can fall or be pulled into a water source like a sink, tub, or pool while charging.
- If the product falls into water, unplug it immediately.
- Do not expose battery to extreme temperatures.
- Do not tamper or puncture battery.
- Do not use if the battery or any cords are damaged.
- Unplug your charger when not in use.
- Never try to repair this product yourself.
- When the unit is not in use, make sure it is correctly turned off and stored in a cool, dry place.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.