

# User Manual Air Compressor

Keycode: 43058150

This 12V compressor has been designed for inflating car, caravan, motorcycle tyres, sports and camping equipment. Please read the user instructions carefully and use the compressor only in accordance with these Instructions.

#### Safety cautions:


- Keep out of the reach of Children.
- Dispose of the wrapping material. Plastic foils and/ or bags may be dangerous toys for children
- Check the functionality of the device before each use.
- Do not exceed the maximum allowable pressure for the inflatable.
- Never leave the compressor unattended when working.
- Never use the compressor continuously for more than 5 minutes; let it cool down for 15~30 minutes. The compressor may overheat or get damaged if left running for too long.
- The gauge reading of pressure is approximate → check the pressure using a calibrated pressure gauge.
- Use the compressor only with 12V DC (e.g. 12V cigarette lighter socket in the car, 230V AC input / 12V DC output adapter, etc.).
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities,
  or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the
  appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.



- 1. Air hose with Valve nozzle
- 2. 12V DC adapter
- 3. ON/OFF switch
- 4. Pressure gauge
- 5. Extension inflate tube
- 6. LED light
- 7. Nozzle accessories



Note: The switch for LED light and air compressor has a different print. See Below.

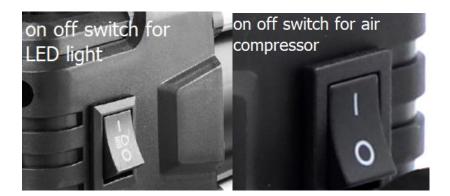

#### **Technical data:**

Power Source:	DC 12 Volt	Air hose length	60cm
Current consumption:	15 Ampere	Weight	1.8KGS
Max air pressure	150PSI	Dimensions	H13.7 x W23.0 x D9.0 cm
Extension inflate tube:	2 metre	Cable length	2.6 metre
Duration	10 mins		

### Use:

Inflating car, caravan, motorcycle tyres with equipment valves:

- 1) Clip the valve nozzle (1) onto the tire screw tooth valve.

  Need the extension tube? -Connect the black pipe with one end of the extension tube, and then connect the air nozzle at the end of the extension tube with the tire screw tooth valve.
- 2) Plug the 12 V adapter (2) in the 12V DC cigarette lighter socket in your car.
- 3) Press the ON/OFF switch (3), turn the compressor on.

- 4) While inflating, watch the gauge (4) closely and stop the motor when the manufacturer's recommended pressure has been achieved, turn the compressor off.
- 5) Unclip the valve nozzle and recheck the pressure using a calibrated pressure gauge.

## Inflating other inflatable objects:

The adapters supplied in the package have been designed for various purposes

- (e.g. Inflating balls, mats, etc.)
- 1) Choose appropriate accessories (7) and screw into the valve nozzle (1).
- 2) Plug the 12V adapter (2) in the 12V DC cigarette lighter socket in your car.
- 3) Press the ON/OFF switch (3), turn the compressor on.
- 4) While inflating, watch the gauge (4) closely and stop the motor when the manufacturer's recommended pressure has been achieved, turn the compressor off.
- 5) Remove the valve nozzle and the adapter

## **Cleaning and Storage:**

- Clean the device using only a slightly moist cloth. Do not use solvents or harsh detergents.
- Store the compressor in dry and dust-free environment.