 
 


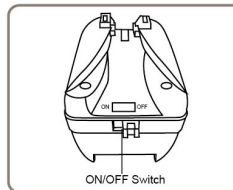


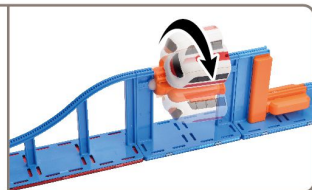

## MAGNETIC SKY TRACK

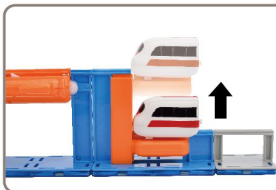

REQUIRES 2 X 1.5V AAA BATTERIES (NOT INCLUDED).

### Basic Component



2pcs



1pcs



1pcs



4pcs



2pcs



4pcs



2pcs



4pcs



6pcs



2pcs



4pcs



12pcs



1pcs



1pcs

PRODUCT MAY VARY FROM IMAGE SHOWN

**WARNING:** BATTERY INSTALLATION BY ADULT REQUIRED.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE PRODUCT WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

keycode: 43060191