

anko

Instruction manual

Wrist Fan

Keycode: 43067459

Safety instructions:

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products. To ensure the production works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Conditions near heater or high temperature service.
3. Conditions with direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.
5. This product shall be supplied by a power source not exceeding PS2 only.
6. To avoid being involved by the motor, please keep your hair away from the fan blade cover
7. KEEP FAN AWAY FROM HAIR AND JEWELLERY


Features



Package Include:

- 1 x Wrist Fan
- 1 x Micro USB cable
- 1 x User manual

Key Description:

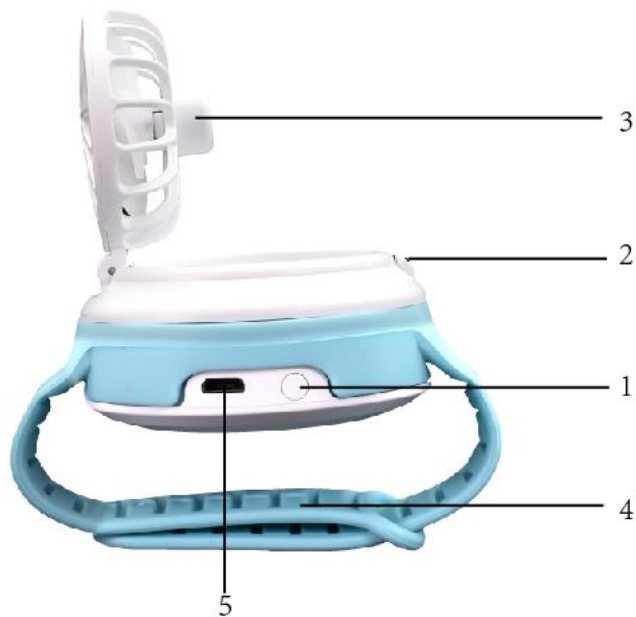

1: Power button:

- . 1st press: Power on, Low
- . 2nd press: Medium
- . 3RD press: High
- . 4TH press: Power off

2: Pop-up button

Press to pop up fan.

3: fan blades

4: Silicone watch band

5: Charging interface

Use:

1. Press the pop-up button before use.
2. After the fan pops up, press the power button on the right side.
3. The fan can be rotated left and right 90°
4. After use, press power button to turn off and lay the fan down.

Specification:

Product Size: 90*450*135mm

Power (W):5W

Voltage (V):DC5V 1A (Max)

Built in 300mAh battery

Working Time: 2-4 hours

Charging Time: 1.5 hours

Caution

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

12Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation