

anko

## Dog Kennel Wooden Pitch Roof




**Contents**


Ax2pcs



B

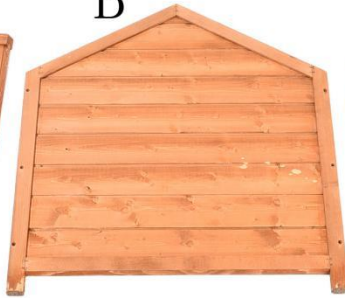

C

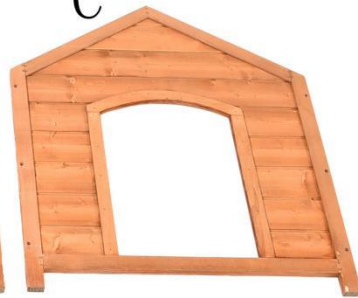

D





Ex2pcs



F




<p>G</p> 	<p>Long Screws X 12pcs</p>
<p>H</p> 	<p>Short screws X 12pcs</p>

## Assembly Instructions

### Step 1.

Align the top line of board A x 1 pc with B by following below images, then connect the two boards by using screws G x 3 pcs using a screwdriver (not included). Please follow the guiding holes on the board.

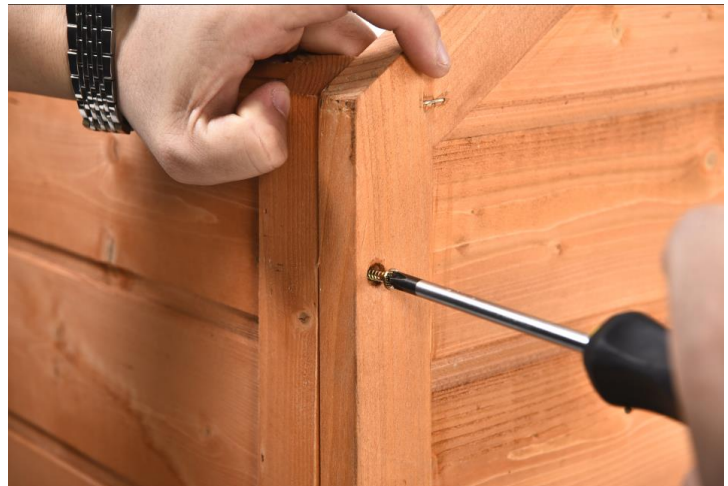


### Step 2.

Repeat step 1 to connect another side A x 1 pc and B by using screws G x 3 pcs.



### Step 3.

Align the top of board C with A (two sides), then connect the three boards by using screws G x 6 pcs with a screwdriver (not included). Please follow the guiding holes on the boards.

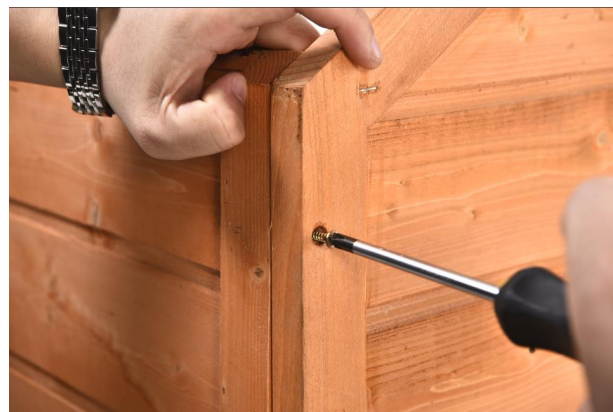

**Step 4.**

Insert the bottom board D.



**Step 5.**

Put on the lid E x 2 pcs, fix the lid E on board A, please make sure the two blocks on the lid E are properly stuck on the board A.



### Step 6.

Connect lid E x 2 pcs with board B and C by using screws H x 8 pcs and a screwdriver (not included). Please follow the guiding holes on the boards.



### Step 7.

Put on board F. Connect board F with lid E by using screws H x 4 pcs and a screwdriver (not included). Please follow the guiding holes on the board.



### **WARNING:**

*For pet use only.*

*Supervise your pet during use.*

*For your pet's safety, inspect regularly and remove if damaged.*

*Do not drag on the floor.*

*Do not sit or stand on this unit.*

*Do not lift when in use or with pet.*