

ACCESSORY ORDER

For replacement parts and accessories contact customer service

For help or to place an order on the phone
call Remington Customer Service:

- ① Australia: 1800 623 118 (toll free)
- ① New Zealand: 0800 736 776 (toll free)

REMINGTON[®]
EST. NEW YORK 1937

Remington is a Registered Trademark
of Spectrum Brands, Inc., or one
of its subsidiaries.

MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State: Postcode: DOB: | |

Contact No: Area Code: Ph:

Product Model number:

Is this the first Remington shaver you have owned/purchased? Yes No

Why are you returning this shaver?

Skin Irritation Shave is not close enough Prefer a rotary/foil shaver

Other:

REMINGTON®
EST. NEW YORK 1937

Spectrum Brands Australia Pty Ltd

Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA

Customer service in Australia: 1800 623 118
E-mail: consumer.enquiry@remington-products.com.au
Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817
Newmarket, Auckland 1149
NEW ZEALAND

Customer service in New Zealand: 0800 736 776
E-mail: info@remington.co.nz
Website: www.remington.co.nz

6. Shake off any excess water.
7. Leave the shave unit open to allow the shaver to dry completely.
8. Lubricate the shaver with a spray of Remington® ShaverSaver (SP4) on the foil and cutters.
9. Replace the head assembly, simply by pushing it on the shaver.

Cover shaver head with the protective head guard between uses. When removing the head guard or placing it back onto the shaver, do not apply pressure to the floating cutter surfaces, as you may damage them.

Lubricate

Remington® Shaver Saver (SP-4) lubricates, cleans and protects your shaver's foil and cutter assembly. The lubricant helps remove hair clippings while reducing wear. Spray on the foil and cutters after each shave to keep your shaver operating at peak performance.

Cleaning Cautions:

- Never submerge the shaver completely into water.
- Never clean the shaver or replace the cutters while it is plugged into an electrical outlet.
- Do not use any aggressive cleaning agents, as this may damage the shaver.

REPLACING YOUR HEADS & CUTTERS

It is very important to replace your foils and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months for optimal performance. Here are some signs of head and cutter wear, indicating that replacement is needed.

Signs that your foils and cutters need replacing:

- Irritation: As foils get worn, you may experience skin irritation. As the foils become excessively worn you may experience some skin irritation or redness.
- Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.
- Wear through: You may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

- Pull the foil assembly up to remove from the hair pocket.
- Insert new foil assembly in hair pocket until it snaps in place. Please contact Remington Service Hot line to purchase replacement blades

TO REPLACE THE CUTTERS

- Grasp cutter between thumb and fore finger and pull upward.
- Snap both new cutter assemblies into top of oscillator tips.

STORAGE

When not in use, always unplug the power adaptor from the power outlet. Never wrap the cord of the power adaptor around the unit as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the power plug. If the cord becomes twisted in use, periodically straighten it.

DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



This product is not suitable to use in a bath or shower.

The shaver conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON[®]
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

① Australia 1800 623 118 (toll free)

① New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2021 Spectrum Brands Inc.

Rev. 04/21

Part No. T22-0000280-B

Type: F3800



REMINGTON®

EST. NEW YORK 1937

DUAL FOIL-X SHAVER



USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

F3800AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.

- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug the power adaptor from the appliance before cleaning the appliance in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

F3800AU DUAL FOIL X FOIL SHAVER USE AND CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® DUAL FOIL- X Foil shaver. Inside this manual you will find tips on using and caring for your shaver.



KEY PARTS

1. Foils
2. Cutter assembly
3. Head release button
4. Hair pocket
5. Pop up trimmer (rear)
6. On/Off switch
7. Charging indicator

8. Power port

Also Includes:

- Cleaning brush
- Protective head guard
- Power adapter
- Storage pouch

F3800AU SPECIFICATIONS

Power System	Cordless (Rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	16 Hours
Cordless Shave Time	40 Minutes
Indicators	Green light when charging
Voltage Type	Worldwide
Replacement Part No.	SP-62IIAU
Power Adaptor	PA-04701A

HOW TO USE

ADJUSTING TO YOUR SHAVER

As with every shaver, your shave will improve over time. Allow up to four weeks of daily shaving to develop an effective shaving style and for your skin to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, if you are switching from a different method of shaving, or if you alternate between shaving methods.

GETTING STARTED


Before operating your shaver, remove the protective head guard, which protects the foils and cutter assembly. It is important to remove it correctly to avoid damaging the clips that hold it to the shaver.

1. Press lightly on the top of the protective head guard.
2. Lift the lower rear edge.
3. Pull the protective head guard away from the shaver. When the shaver is not in use, always keep the protective head guard on the shaver head and keep the trimmer in the OFF position.

CHARGING

Before using, read the important safety instructions in this manual.

1. Ensure the product is switched off. Connect the shaver to the adapter (Diagram A).
2. Connect to the mains (Diagram B) and charge for at least 24 hours when using for the first time (Diagram C). This first charge is important to the shaver's battery life.

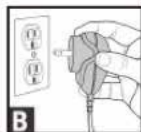

3. When plugged, the charging indicator will light up.
4. When empty, the battery should be charged for 16 hours, and will provide 40 minutes of shaving time.



CAUTION:

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

SHAVING

To Shave

1. Remove power adaptor from the shaver (Diagram A).
2. Press the power button to the ON position to activate the shaver for shaving.
3. Pull the trimmer release button to engage the trimmer, and use it to remove long hair first. Then push trimmer downward to lock it in when finished.
4. Use your free hand to stretch your skin so that the hairs stand upright. This encourages your facial hair to stand out, making it easier for them to enter the foil (Diagram D).
5. Hold the shaver so that the foils touch your face (Diagram E). Ensure that you hold the shaver at an angle where both foils are touching the skin. This allows the shaver to work the way it was designed for the closest shave with minimum wear.
6. After shaving turn the shaver off.



SHAVING TIPS

For A Better Shave

****Remington recommends that you use your new shaver daily for up to four weeks to allow time for your hair and skin to become accustomed to the new shaving system****

- Ensure your skin is dry and free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so that both heads are touching the skin with equal pressure.

- Shave with short, circular strokes. The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin in order to avoid damage to foil heads.

TRIM

To Trim

1. Pull trimmer release button to engage trimmer. (Diagram F)
2. Hold the trimmer at a right angle to your skin.
3. Trim long, difficult hairs and side burns. (Diagram G)
4. Close trimmer by pressing down. (Diagram H)



MAINTENANCE

CLEANING AND CARE

NOTE:

When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

CAUTION!

Cleaning your shaver

To ensure long lasting performance, it is important to clean your shaver regularly. We recommend you clean your shaver after each use. The easiest and most hygienic way to clean the shaver is by rinsing the shaver head after use with warm water.

Weekly

Clean under the assembly at least once a week:

1. Turn the shaver off.
2. Remove the head assembly from the shaver body (Diagram I).
3. Gently tap the shaver head on a flat surface to remove any loose hair particles, and rinse the shaver head under warm water (Diagram J). Never submerge your shaver under water.
4. Thoroughly clean the cutter and trimmer with a brush (Diagram J).
5. Never use the cleaning brush on the foils as damage may occur.

