

# ARCHERY BOW

Key Cody: 43077571

## Warning

- The product is not a toy. It is intended to be an introduction to archery.
- Adult Assembly Required. Do not shoot arrow at anything other than the target.
- Do not aim at people or pets.

## Part list



Upper bow arm

A x1pc



Low bow arm

B x1pc




Bowstring


C x1pc

## Assembly Instruction

Step 1. Insert the upper bow arm (Part A) into the lower bow arm (Part B). Ensure the two bended ends are in same direction.

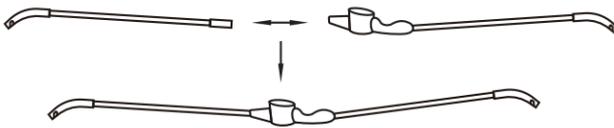


Step 2. Assemble the loop of bowstring (Part C) to one end of the bow around the groove, then make the bow stand vertically (reference image). Press the upper side of the bow to ensure the other loop of bowstring is assembled into the bow.

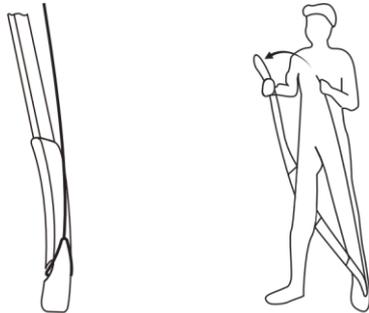

## Use Instruction

1. Keep standing facing the target board at a 90 degree angle and the distance within 5-10m while shooting.
2. Take the arrow to thread through the hole of bow, let the bowstring be nested into the groove of the arrow at the end. The angle should be at 90 degree between bowstring and arrow before stretching.
3. Hold the end of arrow firmly with finger before stretching backwards and shooting. Please reference below images.

Note: Arrow and target not included!

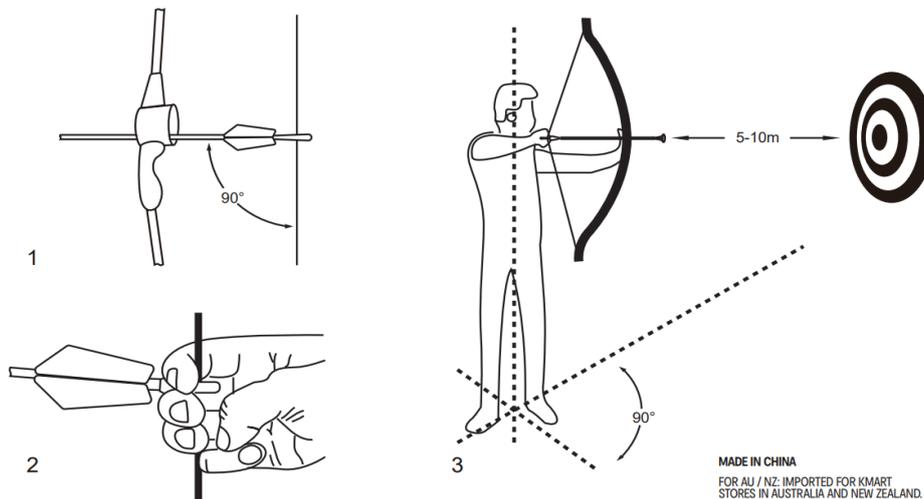

MADE IN CHINA  
FOR AU / NZ: IMPORTED FOR KMART  
STORES IN AUSTRALIA AND NEW ZEALAND.