


# ASSEMBLY INSTRUCTIONS


Keycode: 43094332



Pic 1

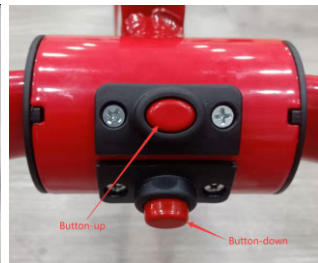

Pic 1-1

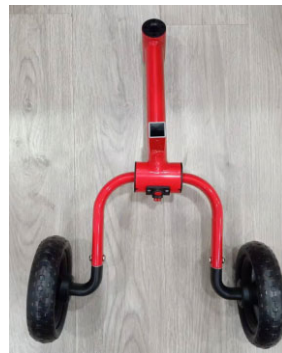

Pic 2



Pic 3



Pic 4

1. Pull the rear tube(pic1), until the button-up out(pic1-1), pic 2 is the expanded frame.

2. Install the front fender and insert front fork to the main frame(pic3); press quick release to insert pedals(the same with disassembling pedals.)(pic4)



Pic 5



Pic 5-1



Pic 5-2

3. Install the push bar, tighten the rotary knob(pic5-1), open the lock lug to adjust the height, then tighten it(pic5-2)



Pic 6



Pic 7

4. Insert seat assembly(pic7), with adjusting spring pin for height; pull down the angle adjuster(pic8) to adjust the seat angle to fit for different mode



Riding Mode 1



Riding Mode 2



Glide Mode

### Glide Mode



(pic 1)



(pic 2)

1. Remove the screws of pic 1, and flipped the wheels, tighten the screws again, transform to glide mode( pic 2)



Quick Release

(pic 3)



(pic 4)

2. Press the quick release button, Take out the small handlebar(pic 3), Insert the pedals(pic 4)

**WARNING : Choking hazard - contains small assembly components with functional sharp points and edges.**

**WARNING : Requires adult assembly only. Use only under adult supervision**

**WARNING : Maximum weight 20kg. Always wear an approved safety helmet, knee and elbow pads when riding. This product is not designed for road use, noe permitted for use on public roads or highways. Please remove all packaging attachments before giving this toy to a child. Adults should check regularly to ensure the item is assembled correctly to Prevent collapsing during use.**

## **Warning and Notice:**

1. This trike is only suitable for children aged 18-60 month old.
2. An adult must read these instructions carefully before use, otherwise it might compromise the child's safety.
3. Please retain this instruction sheet permanently for future reference.
4. This trike should not be used near fire, heat, or water.
5. Assembly should be done by an adult.
6. Adult supervision is required when using this trike.
7. Not to be used on the street or roadway.
8. Maximum weight limit is 20kg.
9. Please ensure the safety lock is installed correctly for each use.

## **Warning and Maintenance:**

1. Inspect the safety lock prior to each use.
2. Do not ride the trike in any extreme weather conditions.
3. The rider should wear a helmet and protective gear when using the trike.
4. The rider needs to pedal for the trike to run.
5. The parent push bar is a moving tool, it's not suitable for steering.

**This product meets the standard of Consumer Protection Notice No. 14.**