

# anko

**Toaster**

**TA5011C-SA**

**User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## **IMPORTANT SAFEGUARDS**

**When using electrical appliance. Basic safety precautions should always be followed including the following:**

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label on the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquids.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If the supply cord is damaged, it must be replaced by qualified electrician to avoid a hazard or the product must be disposed.
8. Do not let the cord hang over edge of table or counter or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.

**CAUTION: The bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. The toaster should be attended when in use.**

13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation
15. Be sure to take the bread out carefully after toasting so as to avoid injuries
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.

**18. Warning: if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.**

19. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

20. Don't use the appliance outdoors.

21. This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

22. The surfaces are liable to get hot during use.

23. The door or the outer surface may get hot when the appliance is operating.

24. For cleaning, please refer to "CLEANING AND MAINTENANCE" section.


## **WARNING!**

**Never operate toaster on its side. To prevent damage to toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients. Adding any food substances to the bread, muffins or crumpets can cause an electric shock and / or fire. This toaster is for toasting of bread, crumpets and muffins only.**

**CAUTION: The bread may burn, therefore toasters must not be used near or below curtains and other combustible materials. The toaster should be attended when in use.**

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# KNOW YOUR TOASTER

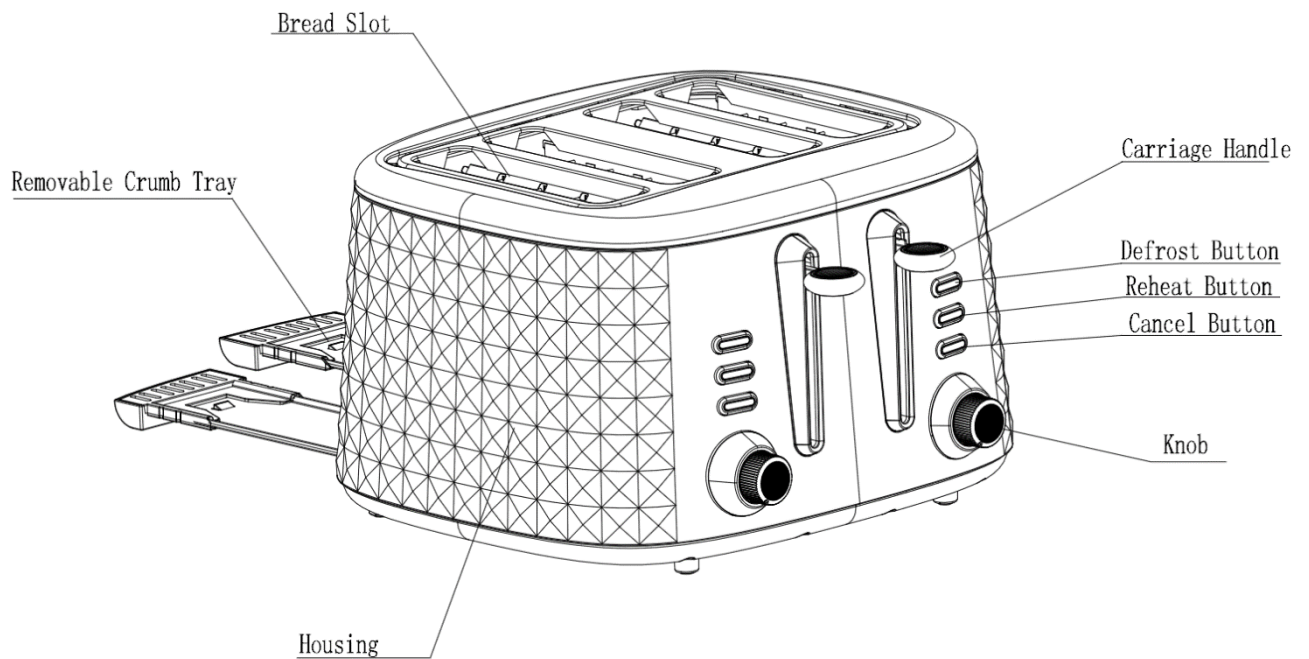

## FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, usually it will emit the odor for the first use. It is normal and will not occur after several times. For the first use, it is suggested to operate according to the below steps, except without bread, then let the toaster cool down and begin toasting the first slice.

## USING YOUR TOASTER

1. Put bread slice into the bread slot, which can be inserted two slices at most every time.
2. Plug the power cord into the outlet.
3. Set colour control knob to your desired setting. There are 7 browning levels, the lowest “1” is for light and the highest “7” is for dark. The bread slice can be toasted to golden colour at the middle position.

***NOTE: 1). Toasting colour for one slice is darker than that for two bread slices at the same level.***

***2). If toasting continuously, toasting colour for the latter bread is darker than that for the former bread at the same level.***

4. Lower carriage handle down vertically until it is latched in place. The indicator on the **Cancel** button will be illuminated, and the appliance will begin toasting.

***NOTE: The carriage handle can only be latched when the appliance is connected to mains power.***

5. Once the bread has been toasted to the preset colour, the carriage handle will automatically pop up.

***NOTE: During toasting, you may also observe the toasting colour. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never lift carriage handle to cancel toasting.***

6. If you want to toast frozen bread, set colour control knob to your desired colour, and then lower carriage handle down vertically until it is latched in place. Then press the **Defrost** button and the indicator of **Defrost** button will be illuminated. In this mode, bread will be toasted to your desired colour.

7. If you want to warm cold toasted bread, lower the carriage handle vertically until it is latched in place. Then press the **Reheat** button and the indicator of **Reheat** button will be illuminated. In this mode, toasting time is fixed. The carriage handle will automatically spring up when the reheating process is completed.

## **CAUTION**

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.
6. In order to achieve uniform colour, we recommend that you should wait minimum 30s between each toasting so that colour control can reset automatically.

## **CLEANING AND MAINTENANCE**

1. Before cleaning, unplug from the appliance from mains power and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated breadcrumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or before storing, the power cord may be wound under the bottom of toaster.

## **TECHNICAL SPECIFICATION**

Voltage: 220-240Va.c. 50-60Hz

Power: 1450-1750W

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.