

anko

Cordless Water Kettle

KE3046-SA

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions before use.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (indicated on the underside of the kettle & base) corresponds with the voltage in your home.
3. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
4. Do not place on or near a hot gas, electric burner or in a heated oven.
5. Do not operate the appliance without any water in it to avoid damaging the heat elements.
6. Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and avoid damage or injury.
7. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
8. While water is boiling, or just after the water has been boiled, avoid contacting with steam from the spout.
9. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
10. Be careful when refilling when the kettle is hot.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. The outside surface of the kettle may get hot during use, please take care when using the kettle. Do not touch the hot surface. Use the handle on the kettle.
14. The power base provided is for use with this kettle only.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy.
17. The kettle is for household use only. Do not use outdoors.
18. The use of accessories, which are not supplied with the appliance manufacturer, may result in fire, electric shock or personal injury.
19. Unplug the kettle from the mains power outlet when not in use and before cleaning. Allow the kettle to cool completely before putting on or taking off parts, and before cleaning the appliance.
20. To disconnect, switch the power switch to “OFF,” then remove the plug from the mains power outlet socket.

21. If the supply cord is damaged, DO NOT use. For electrical safety, any repairs to the product should only be carried out by a qualified electrician only or the product must be disposed.
22. Do not use the appliance for other than intended use.
23. The kettle must only be used with the power base provided.
24. If the kettle is overfilled, boiling water may spill out.
25. If the kettle lid is damaged do not use. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles or whilst the water is still hot.
26. This appliance is intended to be used in households and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
27. Never fill in water more than the maximum acceptable water level.
28. Avoid water pillage on the connector.
29. Misuse may lead to serious injury.
30. Heating element surface is subject to residual heat after use.
31. The appliance must not be immersed.


WARNING: Do not remove the lid whilst the water is boiling.

32. CAUTION: Position the lid so that steam is directed away from the handle.
33. CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

CAUTION: Always use the kettle on a flat stable surface. Do not operate the kettle unless there is water above the minimum water level mark. Do not move whilst the kettle is switched 'ON'.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

KNOW YOUR ELECTRIC CORDLESS KETTLE

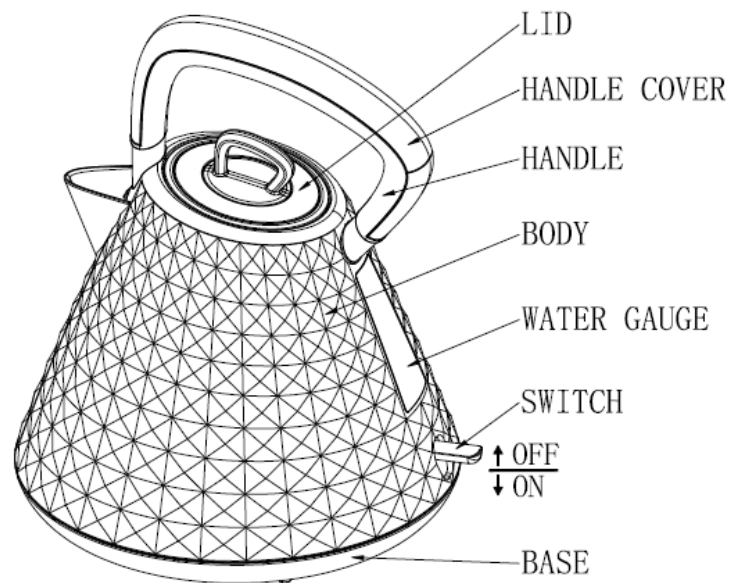

BEFORE USING YOUR ELECTRIC CORDLESS KETTLE

If you are using the kettle for the first time, it is recommended to clean the kettle before use by boiling the kettle with MAX. capacity of water once, and then discarding the water and rinse it again with fresh water from the tap. Wipe the surface with a damp cloth.

NOTE: The MAX capacity of kettle is 1.5L.

USING YOUR ELECTRIC CORDLESS WATER KETTLE

1. Place the kettle on a flat stable surface.
2. To fill water into the kettle, remove it from the power base and open the lid by lifting up the lid. Fill with the desired amount of water to the kettle. Always fill the kettle between the MIN. (0.5L) and MAX. (1.5L) fill marks. Too little water will result in the kettle switching OFF prematurely before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly pushed down in place before connecting into a power outlet socket.

3. Position the kettle on the power base.
4. Connect the supply power cord plug into a mains power outlet. Press the power switch down and its indicator will light up, and then the kettle starts to boil the water. The kettle will switch OFF automatically and the indicator will turn OFF once the water has boiled. To

re-boil the water again, wait for 30 seconds. This will allow the thermostat to reset, before pressing the power switch again to re-boil the water. You may shut OFF power to the kettle by just lifting the kettle from the power base at any time to stop the boiling process.

NOTE: Ensure that switch is free of obstructions and the lid is firmly closed. The kettle will not turn OFF if the switch is constrained or if the lid is opened.

5. Lift the kettle from the power base and then pour the water carefully.

NOTE: Proceed with caution when pouring the water from your kettle as boiling water may result in scalding. It is important not to open the lid while the water in the kettle is hot.

6. The kettle will not re-boil until the switch is pressed again. The kettle may be stored on the power base when not in use.

NOTE: Always disconnect from mains power outlet socket when not in use.

BOIL-DRY PROTECTION

Should you accidentally let the kettle operate without water, the boil-dry protection circuit will automatically switch OFF power to the kettle. If this occurs, allow the kettle to cool down for few minutes prior to filling with cold water.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the mains power outlet and allow it to cool down completely before cleaning.

1. Never immerse the kettle body, power cord or power base in water, or allow moisture to come in contact with these parts.

2. Wipe the kettle body with a damp cloth, never use abrasive cleaners.

CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent damage to the glossy surface.

3. When not in use or during storage, the power cord should be wound under the power base.

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle and this may cause it to operate less efficiently. You can use commercially available descaling solution by following the instructions supplied with the

product. Alternatively, you may follow below instructions using white vinegar.

1. Mix 3 cups of white vinegar with 1 cup of water in a separate container. Pour the mixture into the kettle until it covers the bottom of the kettle completely, not more than MIN level mark on the kettle. Leave the solution in the kettle overnight.
2. Discard the mixture in the kettle. Fill the kettle with clean water to MAX. water level, boil and then discard the water. Repeat this several times until the odour of vinegar has been flushed. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

TECHNICAL SPECIFICATION

Voltage: 220-240Va.c. 50-60Hz

Power: 1850-2200W

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.