

INSTRUCTION MANUAL

43099856

[KMT084]

5107_MAN_43099856 P-17_Speaker_v6

Artwork Proof Date: 05.11.2021
Number of artboards: 1

 
PAPER:
80gsm
Bright white uncoated paper

PRINT COLOURS:

BLACK

C:0 M:0
Y:0 K:100

PRINT FINISH:
Double sided
Folded in the centre
148.5 x 210 Folded Size

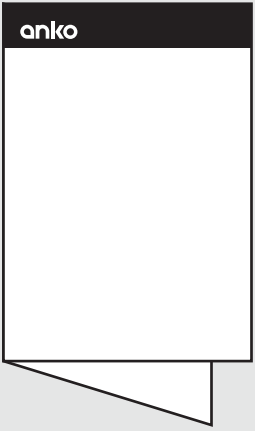

CHANGE LOG CREST INTERNAL USE ONLY

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.
IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au
THANK-YOU.

© The Crest Company 2020. All rights reserved.

anko

Gaming 2.1 RGB Speaker



Operating Instructions

- Includes:
- › Bluetooth® gaming speaker
 - › audio cable
 - › user manual



43-099-856

Bluetooth name is KM43099856

Specifications:

- | | |
|------------------------------------|---|
| Model No: 43099856 | Impedance: 4 Ohm ± 15% |
| Version: Bluetooth 5.0 | Sensitivity: 65dB ± 3dB |
| Working Distance: 10 Meters | Frequency Response: 20Hz – 20kHz |
| Output: 15W + 5W x 2 | Powered by AC plug |
| Driver Size: 5"×3"×2 | |

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

 
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.




WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

5107/6

Function overview:

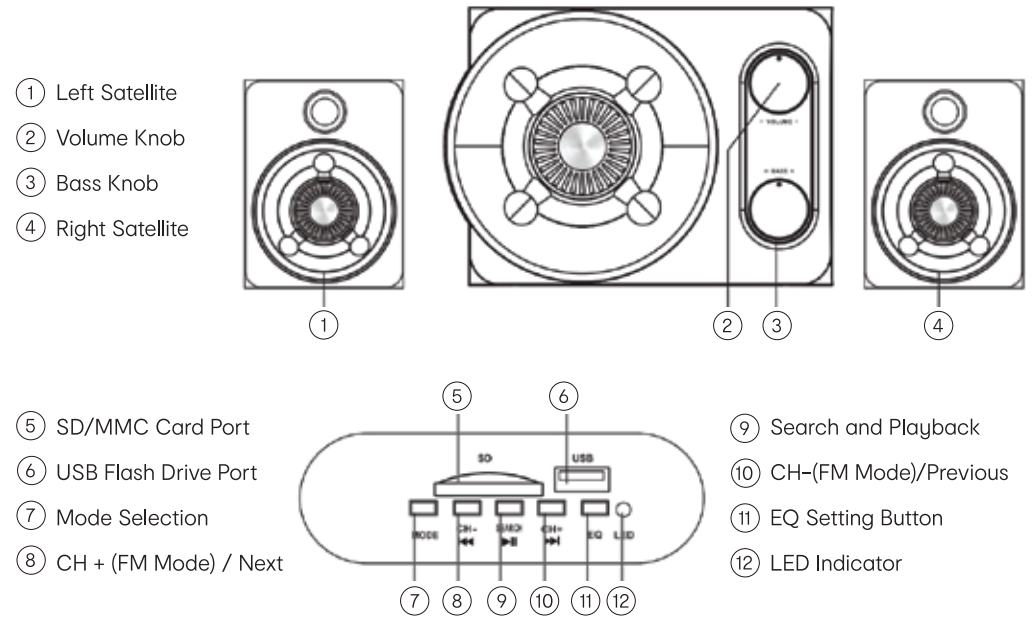

Wiring Diagram

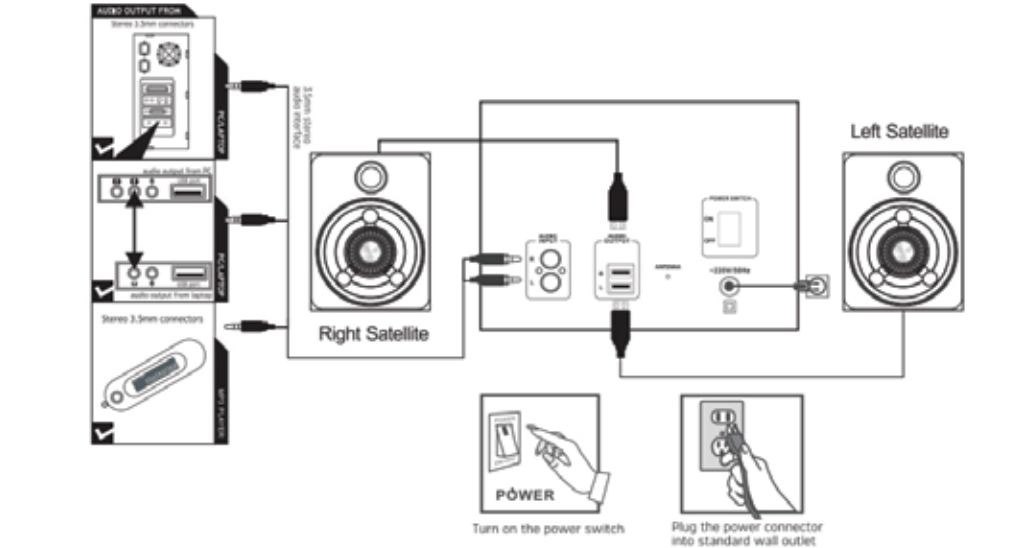 

How to use this speaker:

- Mode Selection**
- › The speaker enters SD/MMC card mode by default when powered ON. Press "Mode" button to switch mode: SD/MMC card mode – USB flash driver mode – FM Mode– Bluetooth Mode–3.5mm AUX in Mode.
 - Note: 5-IN Mode sequences when all the ports are plugged in.
 - The speaker will detect USB flash drive first if the USB flash drive and SD/MMC cards are all plugged in.
- SD/MMC card Mode**
- › LED indicator will flash when Insert SD/MMC card into card port. It will play audio track automatically.
 - › Press **▶▶** button for next track or music, press **◀◀** button for previous track or music; Adjust volume knob to increase/decrease volume. Control bass level by adjusting the bass knob.
 - Note: Support SD/MMC card (Not Included) up to 32G. TF or Micro SD (Not Included), shall be required with SD card adaptor (Not Included).

- USB Flash Drive Mode**
- › LED indicator will flash when you insert the USB flash drive into USB port. It will play audio track automatically.
 - › Press **▶▶** button for next track or music, press **◀◀** button for previous track or music. Adjust volume knob to increase/decrease volume. Control bass level by adjusting bass knob.
 - Note: Support USB 2.0 USB flash driver (Not Included) up to 32G.

- FM Mode**
- › LED indicator light will turn on after switching to FM mode. Press and hold "SEARCH" button to search and save all scanned FM channels, indicator light will flash when searching.
 - › Press **▶▶** button for next channel, press **◀◀** button for previous channel. Adjust volume knob to increase/decrease volume. Control bass level by adjusting bass knob.
 - Note: The strength of FM signal is depend on the received signal level within your area. Some rural areas are unlikely ever to be effectively covered. Weak signal strength can also be caused by destructive interference of the signals from local towers in urban areas, or by the construction materials used in some buildings causing rapid attenuation of signal strength. Large buildings such as warehouses, hospitals and factories often have no usable signal further than a few meters from the outside walls.

- Bluetooth Mode**
- › Press "Mode" button to switch to Bluetooth mode, LED indicator light will flash Red & Blue, indicating it is ready to pair with a Bluetooth device.
 - › In the Bluetooth menu on the media device, search for "KM43099856" and connect. Type Password "0000" or "1234" if password requested.
 - › You will hear sound prompt once the Speaker is successfully paired and connected. When playing music, the indicator light will flash slowly.
 - › Press **▶▶** button for next song, press **◀◀** button for previous song. Adjust volume knob to increase/decrease volume. Control bass level by adjusting bass knob.

- AUX-in Mode**
- › Use a 3.5mm Aux-in cable to connect your device through audio cable. Choose the music from your music list from your media device and play.
 - › Adjust volume knob to increase/decrease volume. Control bass level by adjusting bass knob.

- EQ Function**
- › Press EQ button to switch equalizer setting. Provided up to 6 different EQ "NORMAL-POP-PLCK-JAZZ-CLASSIC-COUNTRY"
 - Note: EQ switch function works under USB Flash Driver mode, SD/MMC card mode and Bluetooth Mode. AUX in mode is not able to use EQ setting function.