

# KMT说明书 折页 128g双铜 尺寸: 89\*127mm

anko

## Bluetooth Speaker Operating instructions

Includes:  
• Bluetooth Speaker  
• Charging cable



### 12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [kmart.com.au](http://kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

#### WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- This product shall not be connected to power supply source exceeding PS1 . Rated 5V d.c. 1A .
- Marking information is located at bottom of the unit.
- Please note the speaker working temperature is : 0-40 C .

### Function overview:

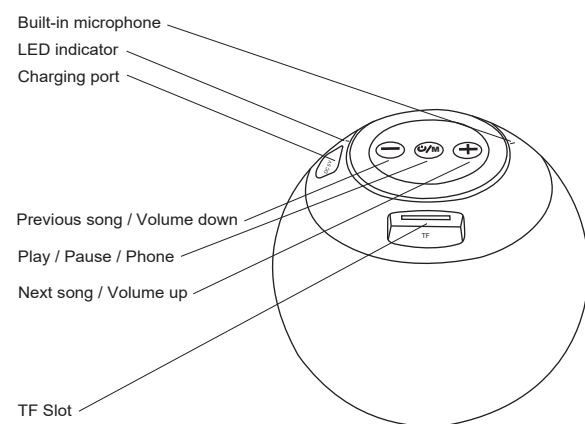

### How to use these earphones:

#### Specifications:

Model No: 43099917

Bluetooth version: V5.0

#### Function Operation

Play / Pause: Press MF button

Volume up / down:

Long pres ⊕/ ⊖ button

Answer / hang-up: Press MF button

Previous / Next :

Press ⊖ / ⊕ button quickly

#### Power ON / OFF

Long press the MF button to power on /off.

#### TWS Pairing

When the two speakers are turned on , double click the ⊕ button

#### Pairing the Speaker with Bluetooth® devices

- Go to Bluetooth Settings on your Bluetooth device (phone, tablet, etc.)
- Turn the Bluetooth ON on your device
- Turn on the speaker , it's ready for pairing when the LED indicator flashes blue quickly.
- On your Bluetooth Device, select the pairing name : **anko 43099917** on the list of available devices . The LED indicator will turn solid blue and you will hear a voice prompt once connected . (Trouble shooting tip: if the speaker do not connect to your device, turn the speaker OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process).

name : **anko 43099917** on the list of available devices . The LED indicator will turn solid blue and you will hear a voice prompt once connected . (Trouble shooting tip: if the speaker do not connect to your device, turn the speaker OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process).

**Note : Please enter the word "0000" and click OK if necessary.**

**Bluetooth Speaker will automatically connect back to the last connected device . so after restarting, it will automatically connect back to the previous device without re-pairing.**

#### Phone calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call.

To answer the call, press MF buttons;

To end a call, press MF buttons again.

To decline an incoming call, press and hold MF button for 2 seconds.

#### Playing music

Press MF button once to pause playing , press MF button once again to resume playback. Press the ⊖ button shortly to play previous track , long press the ⊖ button to turn down volume ; Press ⊕ button shortly to play next track , long press ⊕ button to turn up the volume .

#### TF Card Playing

Insert TF card when the speaker is ON and the voice prompt alerts , you can play the music from your TF card.

#### Battery Charging

- Use the standard Micro USB cable for power charging.
- The LED indicator will flash Red while charging and will turn OFF when fully charged. (Note: Before using for the first time, we recommend you fully charge the battery. A full charge takes around 2 hours).
- When fully charged, unplug the charging cable from the power socket.

**Note: When the battery power is less than 3.4V, it is in low battery mode, and it will automatically turn off after voice prompt . Do not restart at this time, please charge in time .**

**Charging voltage:** 5V d.c

**Support profiles:** A2DP, AVRCP, HFP

**Working Distance:** 10 meters

**Music Time :** up to 3 Hours

**Talk time:** up to 3 Hours

**Standby time:** More than 200 Hours

**Charge time:** 1.5-2 hours

**Cable length:** 30 cm

**Pairing window time:** 10 minutes

**Non-play automatic power save mode:** after 30 seconds the speaker will enter power save mode and then automatically switch off when the low battery alarm sounds.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.