


# anko

**Smokeless Grill  
SK1 Deluxe model  
User Manual**

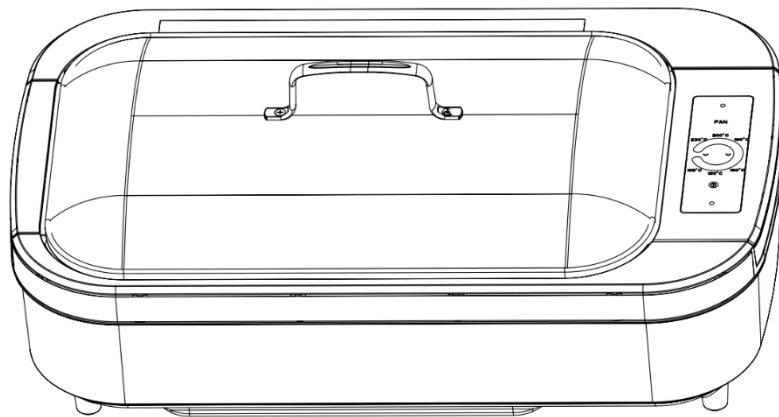

**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**


# IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



## **READ ALL INSTRUCTIONS BEFORE USE.**

1. Read all instructions before using this appliance.
2. This smokeless grill is only intended for household indoor use. Any outdoor use or commercial use is not recommended.
3. Never immerse the base unit, which contains electrical components and heating elements in water or any other liquid. Do not rinse it under the tap.
4. For electrical safety, if the supply cord is damaged it must be replaced by a qualified electrician or the product must be disposed.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Any accessory not provided with the appliance should not be used, it may cause electric shock, injury or damage to property.
8. It is not safe to disassemble or repair this appliance when it does not work as normal. Any repairs to the product should be done by a qualified electrical person only.
9. To prevent suffocation of young children, remove and discard any protective film and bags fitted over the appliance and its accessories.
10. If you find the appliance or its accessories and power cable is broken or damaged, do not use.
11. Regularly inspect the appliance, the power cord and plug. Do not use it if there is any sign of damage to the power cord or plug.
12. To prevent electrical shock, never immerse the power plug and cord in water or any other liquid.
13. The appliance is intended for use on a heat resistant countertop only, ensure the surface is level, stable, clean and dry.
14. Do not use this appliance on or near combustible materials, such as tablecloths and curtains etc.
15. Before using the appliance, use a dry cloth to wipe the grill.
16. Use extreme caution when handling hot food and hot surfaces to avoid injury. Must use protection gloves or mittens and heat-resistant tongs for hot food.
17. Never place the appliance on or near hot gas, ceramic, induction, or electric burners. Doing so can cause damage, injury and will void your warranty.
18. Do not let power cord hang over edge of table or counter. Never let power cord touch hot surfaces or sharp objects.
19. Do not operate the appliance or plug/unplug in the power cord with wet hands. Otherwise, it may cause electric shock or injury.
20. This appliance is not intended to be operated by means of an external timer switch or separate remote-control system.
21. During using the appliance, if it emits black smoke, unplug it immediately and wait for smoking to stop before removing the contents.

22. The glass lid gets very hot during operation. Always use oven mittens when handling.
23. Always provide adequate space above and around the appliance for proper air circulation. Suggested at least 20cm from the wall or other appliances. Do not place anything on top of the appliance.
24. When cooking, the internal temperature of the appliance is very high. NEVER place your hands inside it to avoid personal injury.
25. Always attach plug to the appliance first, then plug the cord in the wall outlet. Conversely, turn off the appliance first before removing the plug from wall outlet.
26. Always unplug the appliance after use and let it cool for approximately 30 minutes before handling, cleaning or storing.
27. **NEVER leave the appliance unattended or use it for any purpose other than described in this manual.**
28. **NEVER operate the appliance without the grill plate.**
29. **NEVER place the lid on the appliance without the grill plate.**
30.  **Caution, hot surface. Care must be taken. The surfaces are liable to get hot during use.**
31. For cleaning, please refer to CLEANING AND STORAGE section.


**WARNING: To prevent risk of severe personal injury and/or property damage, use extreme caution when cooking.**

## **CAUTION!**

- **Never touch the inside of the appliance while it is operating.**
- **You can shut off the appliance by pressing the power button any time during cooking.**
- **Do not operate the appliance without the grill plate.**
- **Do not place lid on the appliance without the grill plate.**

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# KNOW YOUR SMOKELESS GRILL

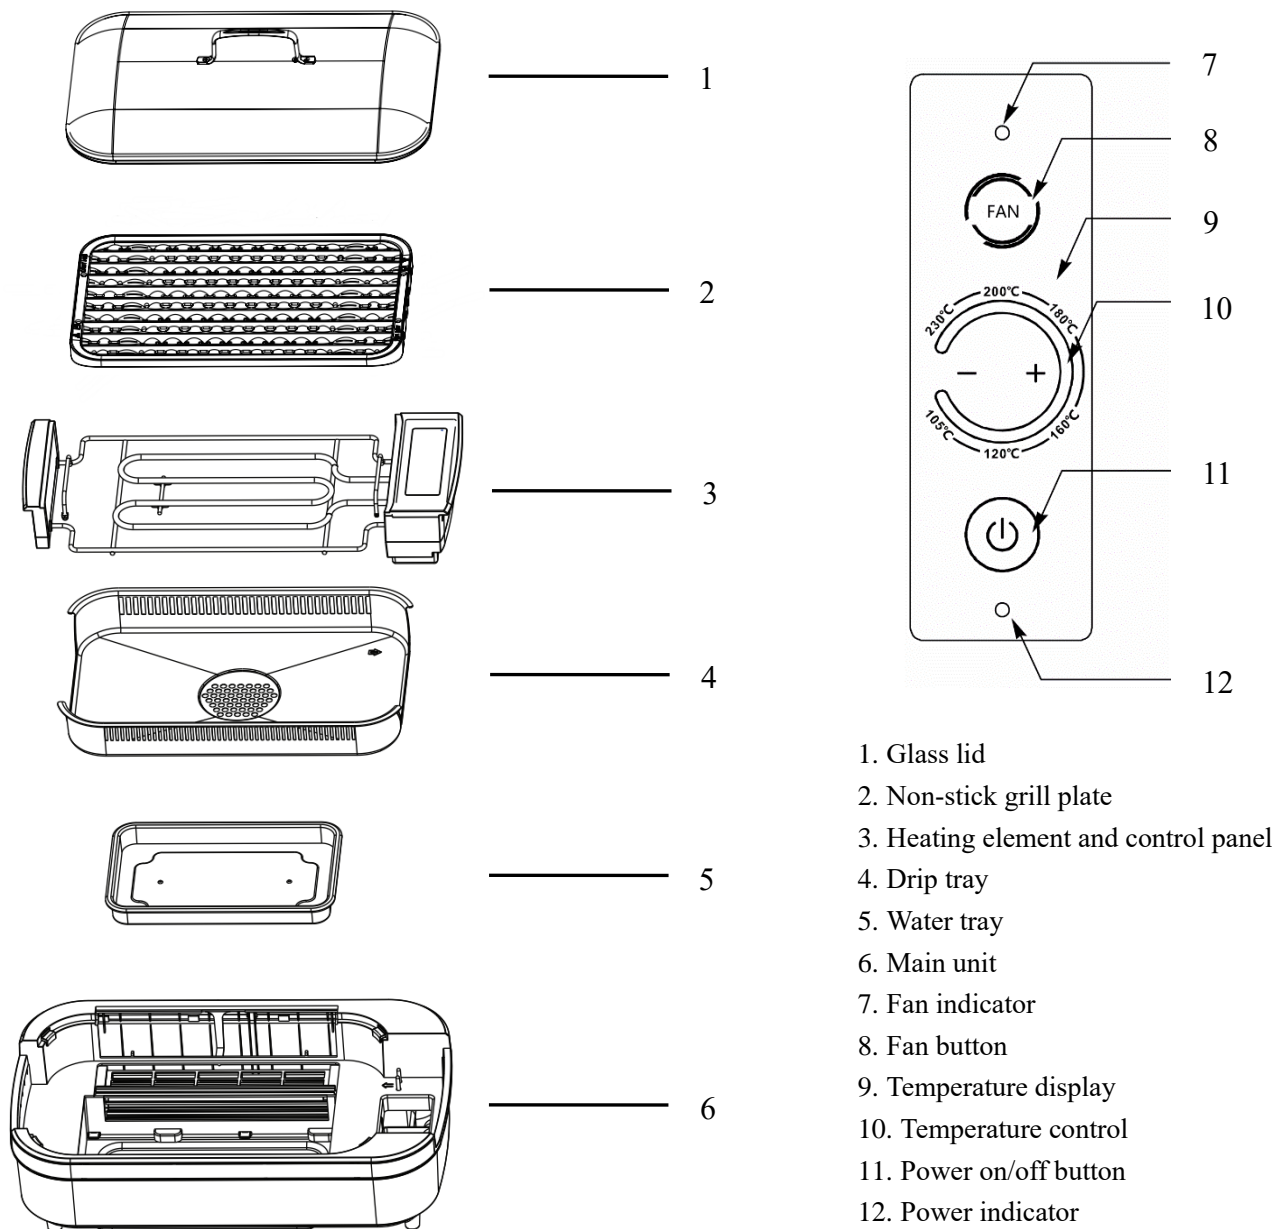

## HOW TO USE THE CONTROL PANEL

- Plug the Power Cord into an outlet. The red power indicator will blink.
- Touch the power on/off button, the red power indicator light will stay lit.
- Touch the fan button. Fan will run, and fan indicator will light up.

**NOTE: Fan should be kept running throughout the grilling process to prevent grease build up.**

- Touch  $+/-$  button on the temperature control to adjust the cooking temperature from  $105^{\circ}\text{C}$  to  $230^{\circ}\text{C}$ .

NOTE: You may raise or lower the cooking temperature at any time during the cooking process. To keep food warm, set the temperature between  $105^{\circ}\text{C}$  and  $120^{\circ}\text{C}$ .

- When you finished grilling, press the Power and Fan Buttons to shut down the Unit. Unplug the Power Cord and allow unit to cool fully before disassembling and cleaning.

**IMPORTANT! Do not place the appliance on non-heat-resistant surface. Do not place or use the appliance on a laminated / Vinyl bench top. To prevent heat damage, placing the appliance on an insulated heat pad is recommended. If you are unsure if the benchtop surface is suitable DO NOT USE.**

**IMPORTANT! Please make sure that your appliance is received with the right components shown above. Check everything carefully before use. If any parts are missing or damaged, do not use. Return the product to Kmart for replacement.**


## **INTRODUCTION**

This appliance has been designed and engineered to reduce the smoke and visible vapors usually associated with grilling to a minimum. Delivers outdoor results indoors.

## **BEFORE FIRST USE**

**Note:** When using the appliance for the first time, carefully remove all internal and external packaging, protective film and accessories.

- Make sure the grill is not connected to mains power.
- Clean the main unit with a damp cloth or sponge. Wipe dry with a soft dry cloth.


 **WARNING! Do not immerse the main unit and heating element in water or any other liquids to clean.**

- Wash the other parts with soapy water. Dry all components thoroughly before use.
- Heat up Unit for a few minutes to burn off any residue.

## **PREPARE FOR USING SMOKELESS GRILL**

- Place the appliance on a stable, level, horizontal and heat resistant surface.

**IMPORTANT! Do not place the appliance on non-heat-resistant surface. Do not place or use the appliance on a laminated / Vinyl bench top. To prevent heat damage, placing the appliance on an insulated heat pad is recommended. If you are unsure if the benchtop surface is suitable DO NOT USE.**

 **Warning! The appliance will get extremely hot during use. Special care should be taken to avoid personal injury.**

## COOKING WITH YOUR SMOKELESS GRILL

1. Place the appliance on a stable, level horizontal and heat-resistant surface. Put the water tray at the bottom inside the appliance. Add 2 cups of water to the water tray.
2. Put the drip tray into the appliance. Make sure the arrows on the drip tray point to the control panel.
3. Put the heating element and the control panel in the appliance.
4. Put the grill on the heating element.
5. Plug the power cord into the appliance and socket.
6. Press the power button and temperature button to heat up the grill plate for a few minutes to burn off any residue.
7. Prepare and season your food per your favorite recipe. You can spray or wipe the grill plate with cooking oil if necessary.
8. Select the cooking temperature, add the food, and put the lid on the appliance. Then grill the food to your requirements. You can turn the food if needed.

### NOTES:

To remove the grill plate from the appliance, hold the two handles on each side of the plate. Pull straight upward to remove the plate from the appliance. Remove the grill plate only when the appliance has cooled down completely.

 **Warning!** Do not cut food on the grill plate with sharp utensils, such as forks or knives, which will scratch the surface of the grill plate.

**CAUTION!** The appliance and accessories are extremely hot! Always use oven mitts. Handle with care to avoid injury.

## CLEANING AND STORAGE

- Clean the appliance after each use.
- Remove the power cord from the mains power outlet socket and ensure the appliance is thoroughly cooled down before cleaning.
- Disassemble the grill plate, drip tray, water tray and base unit.
- Clean the main unit and power cord with a damp cloth or sponge. Wipe dry with a soft dry cloth.
- Wash the other parts with soapy water. Dry all components thoroughly before storage.

**WARNING!** Never use abrasive cleaning materials.

- Make sure all components are clean and dried thoroughly before storing.
- Store the appliance in a clean and dry location.

## TECHNICAL SPECIFICATION

Voltage: 220-240V~ 50-60Hz

Power: 1500W

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.