

# Assembly Instructions

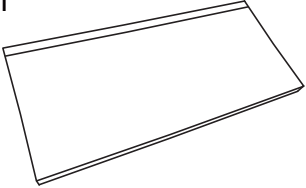
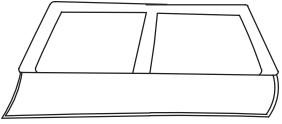


 
 


 
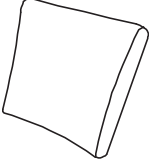


43101276 HARRISON SOFA TAN

**CARE INSTRUCTIONS:** WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE ABRASIVE MATERIAL AND SOLVENTS. SPOT CLEAN IF NEEDED. STORE IN A DRY PLACE. CHECK AND TIGHTEN ALL PARTS REGULARLY. FOR INDOOR AND DOMESTIC USE.

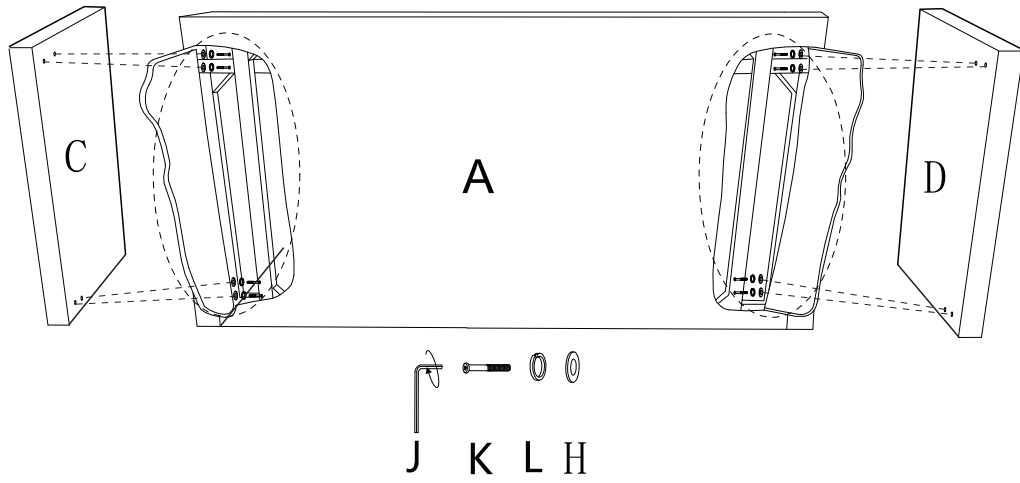
**WARNING:** DO NOT STAND ON THE SOFA. USE ONLY ON A FLAT SURFACE. DO NOT SIT ON THE ARMRESTS. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

**MAXIMUM SAFE LOAD: 200KG.**

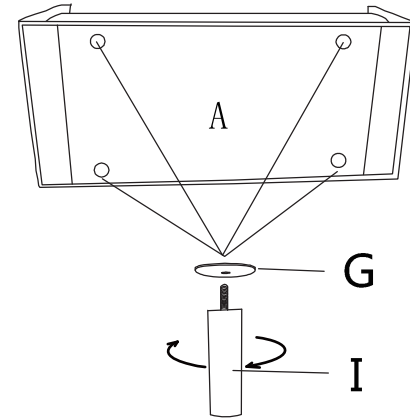
## Hardware list

AX1 	BX1 	IX4 	JX1 
CX1  (L)	DX1  (R)	KX8 	LX8 
EX2 	FX2 		
GX4 	HX8 		

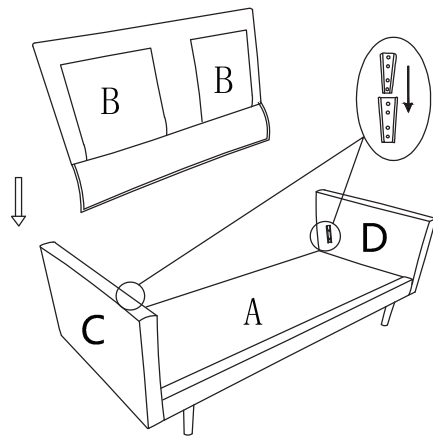
STEP 1



STEP 2



STEP 3



STEP 4

