# **INSTRUCTION MANUAL**

# 43105120 / 43105144

43105120 / 43105144\_Portable Speaker TWS Earphones\_IM-V

Artwork Proof Date: 29,11,2021

#### PAPER:

80gsm

Bright white uncoated paper

#### **PRINT COLOURS:**



C:0 M:0




C:0 M:0

Y:0 K:100 Y:0 K:70

#### **PRINT FINISH:**

Double sided Folded in the centre

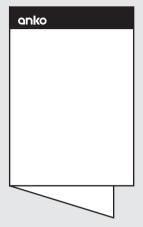

LASER All rights reserved.

285mm

#### **Speaker Operation**

#### CHARGING

- > This Speaker is powered by a rechargeable Li-ion battery.
- > Please use provided micro USB cable for charging.
- ▶ Plug the micro USB connector to the charging port of speaker, and the USB A connector of other end into a power bank, wall charger or other 5V device.
- > Speaker indicator flashes blue when charging & and remains on when fully charged.
- > Charging time 1-2hrs

#### PAIRING

- Press and hold the Power button until the LED flashes rapidly, indicating it is ready to pair with a Bluetooth device.
- ▶ In the Bluetooth menu on the media device, search for "KM43105120-SPEAKER" or "KM43105144-SPEAKER" and connect. Type "0000" or "1234" if password requested.
- Once the speaker is successfully connected, indicator remains on and you can now play music through the speaker. When playing music, the indicator light will flash slowly in blue.

#### 12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation

WARNING > Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. > Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet, liquids can cause serious damage. Do not handle your device with wet hands.


# anko

# Bluetooth® Speaker with TWS Earbuds

**User Manual** 

#### **Package Contents**

- Wireless speaker x 1
- > Wireless TWS earbuds x 1 pair
- Charging Cable (Micro USB Cable) x 1
- User's Manual x 1

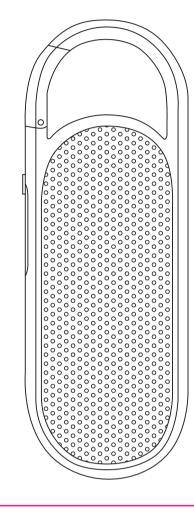


43105120 / 43105144

# Specification

- > Bluetooth name of Speaker: 43105120/43105144-SPEAKER
- > Bluetooth name of Earbuds: 43105120/43105144-EARBUD
- Input power: 5V 500mA
- > Working current: 100mA
- > Bluetooth version: V5.0
- > Effective distance: 10 meters
- Working frequency: 2.402GHz~2.480GHz
- Audio range: 20~20Khz
- > Earbuds playing time: 2-3h
- > Speaker playing time: 1-2h

# Quick start guide

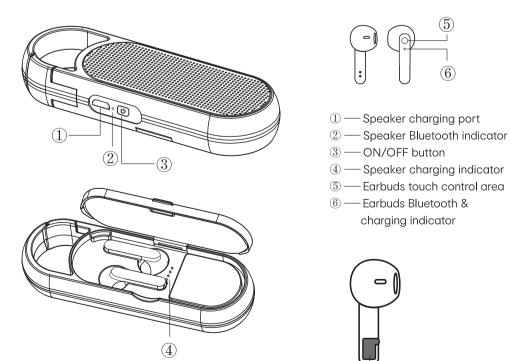

\* Please remove protection sticker from earbuds before first use.

# Earbuds operating

Function	Operating
Power on	<ul> <li>Automatically turn on when taken out of charging box</li> <li>Press &amp; hold touch area for 3 seconds</li> </ul>
Power off	<ul> <li>Automatically turn off when put into charging box</li> <li>Press &amp; hold touch area of either L/R for 5 seconds</li> <li>Automatically turn off if not connected for 5 minutes</li> </ul>
L/R pairing	<ul> <li>Left and right earbuds will automatically pair up when turned on; if not, double click either side of the earbuds.</li> <li>When paired up, left earbud flashes red and blue alternatively, and right earbud flashes blue every 5s</li> </ul>
Bluetooth connection	Find KM43105120–EARBUD or KM43105144–EARBUD on the Bluetooth list of your device and connect; put in "0000" or "1234" if password is requested
Skip to previous track	Double-click left earbud
Skip to next track	Double-click right earbud
Decrease volume	Triple-click left earbud
Increase volume	Triple-click right earbud
Play/Pause	Press either left or right earbud
Activate voice assistant	Press and hold either left or right earbud till you hear a "Di" sound
Answer call	Press either left or right earbud when call incoming
Hang up call	Press either left or right earbud during a call
Reject call	Press and hold either left or right earbud for 2s when call incoming
Charging	> Put earbuds back into charging case, LED indicator
	stays red and turns off when fully charged.
	It takes 1h to charge. A fully charged case (speaker) can re-charge the earbuds 3 times.

\* When you hear earbuds beeping regularly that means the battery is low and you need to place them in the charging case to recharge.

0mm