

# anko

## Instruction Manual

### PARTY SPEAKER WITH STRAP

Keycode: 43105168



To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

#### **Caution:**

- >This product shall not be connected to power supply source exceeding PS1. 5V d.c. 1.3A.
- >Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- >Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- >Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- >Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- >A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

#### **Specifications:**

Water resistant IPX6

Bluetooth version: V4.2+BR

Bluetooth connecting range: 10m

Product size: 283(L) \*123(W) \* 126 (H) mm


Play time: up to 5 hours (50% volume)

Rechargeable lithium battery

### Package Contents:

- 1x Portable Bluetooth speaker
- 1x Charging cable
- 1x Audio cable
- 1x Shoulder strap
- 1x User manual

### Product Details:

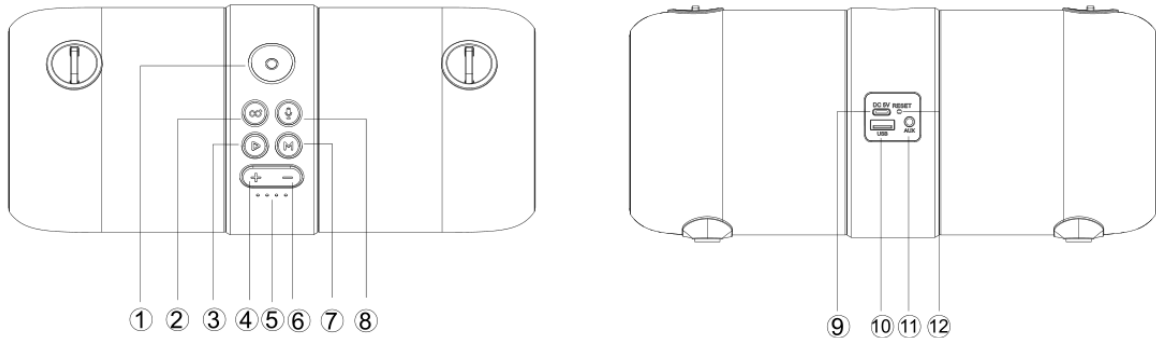

1. Power On/Off      2. TWS Button      3. Play/Pause      4. Forward/Volume Up  
5. Battery Indicator      6. Backward/Volume Down  
7. Mode Button (turn the modes to Bluetooth, USB disk, FM radio and AUX-IN)  
8. Voice assistant (Siri or Google Assistant)  
9. Charging Jack      10. USB Port      11. AUX Port      12. RESET Jack

### Power On/Off

Long-press the **Power button** to turn the speaker on, short-press the **Power button** to turn off.

### Bluetooth:

- Turn the **Power button** to "ON", the speaker enter Bluetooth mode automatically.
- Activate Bluetooth of mobile phone and search for device name "**KM43105168**" then connect it.
- Long-press **Forward** or **Backward button** on the device to select Next/Previous songs.
- Short-press **Forward** or **Backward button** to adjust the device's volume up and down.
- Short-press **Play/Pause button** on the device to play/pause the music.
- Long-press **TWS button** to disconnect Bluetooth connection, then make Bluetooth connection with other mobile phone.

### TWS Function:

- Turn on two identical speakers, both under Bluetooth mode, only need to set one of the units.
- Short-press **TWS button** to pair, a tone will be audible and **TWS button** will keep lighting after paired successfully, then you could play music by the two paired Speakers.
- Short-press the **TWS button** again to exit the TWS connection.

### **Playing music from USB disk:**

- Insert USB flash disk into slot, the speaker will play the stored music automatically.
- Long-press **Forward** or **Backward button** to select Next/Previous songs, short-press to adjust the volume up and down.
- Short-press Play/Pause to play or pause.

**Note:** Under Bluetooth playing mode, insert USB disk will disconnect the Bluetooth and switch to play the USB disk. You can short-press the MODE button to switch to Bluetooth mode again.

### **FM Radio:**

- Short-press the **MODE button** to enter radio state.
- Long-press **Play/Pause button** to auto search FM channel and store it automatically. Short-press **Play/Pause button** to mute the speaker.
- Long-press **Forward** or **Backward button** to change the stored FM channel, short-press to adjust the volume up and down.

### **AUX-IN:**

- For MP3/MP4 players or other compatible music devices, use audio cable (included) to connect from the device's "Line Out" to the "Aux In" of this device.
- When using the audio cable to connect the device in the playing mode, it will auto-switch to the AUX mode.

### **Answering/End call:**

Short-press **Play/Pause button** to accept the call or long-press **Play/Pause button** to reject the call.

### **Activating Voice Assistant:**

Short-press **Voice assistant button** to activate voice assistant SIRI or GOOGLE ASSISTANT with your connected mobile phone.

### **RGB Lighting**

When the speaker is turned on, the RGB light is on automatically, long-press the **Mode button** to switch the RGB light on and off.

### **Reset Functionality:**

If the speaker does not turn off or respond, short-press the **RESET jack** with a small round pin to reset the speaker.

### **How to charge:**

- Charge the speaker via a standard 5V/1.3A USB adapter (Not included).
- Charging time: approx. 5 hours, after full charging, battery indicator keep lighting.
- There will be a tone to remind you to charge when the battery is low.

**Note:** This speaker does not have power bank function, it is forbidden to use it to charge other devices or connect to other devices via the USB port.

**IMPORTANT:**

- When playing music during charging, put the volume to middle, as for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.
- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

**IPX6 Water resistant:**

Close all the cover when using in outdoor area. Do not charge the speaker during use in outdoor environment

**12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](https://www.kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.