

# anko

## Instruction Manual

### PARTY SPEAKER BOOM

Keycode: 43105182



To ensure correct operation and avoid damage, please read this user manual carefully before using this product.

#### Caution

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result on an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion of the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

#### Specifications:

Water resistant IPX5

Bluetooth version: V5.1+BR+EDR

Bluetooth connecting range: 10m

Rechargeable Lithium Battery


Product size: 356(L) \*134(W) \* 178 (H) mm

Play time: up to 4 hours (50% volume)

#### Package Contents:

- 1xPortable Bluetooth Speaker
- 1xCharging cable
- 1xAudio cable
- 1xUser Manual

### Product Details:

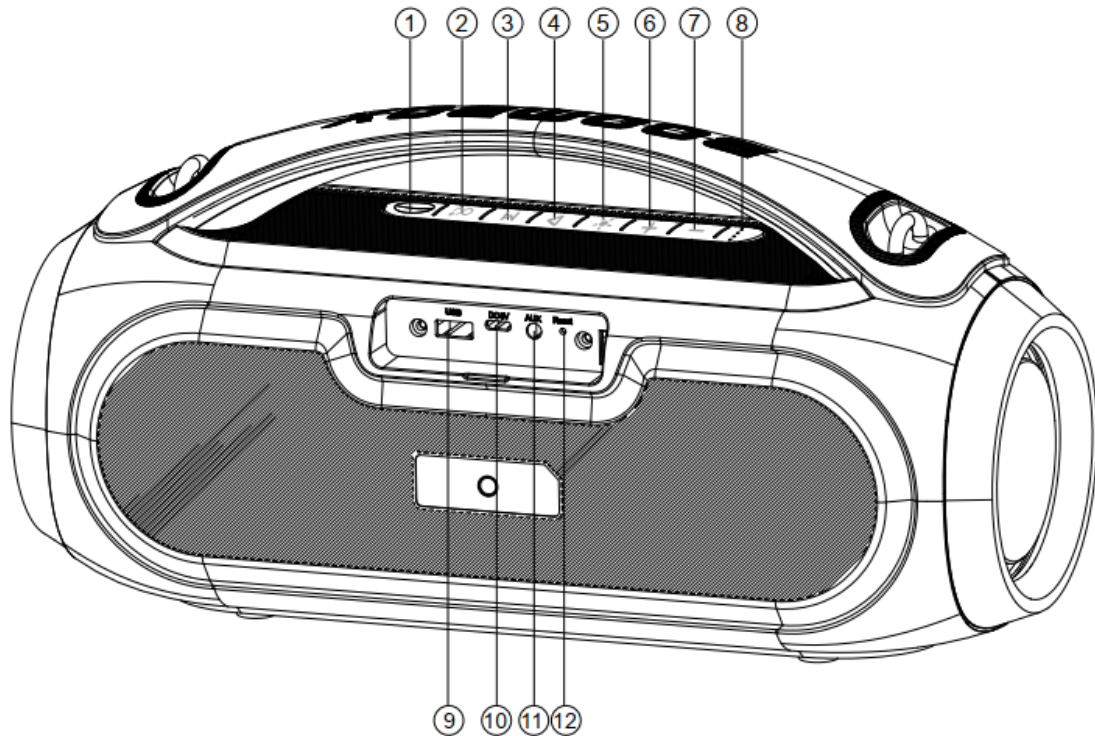

1. Power On/Off
2. TWS Button
3. Mode Button (switch among Bluetooth, FM radio, USB and AUX modes)
4. Play/Pause
5. Running Light
6. Forward/Volume Up
7. Backward/Volume Down
8. Battery Indicator
9. USB port
10. USB-C charging jack
11. AUX Input
12. Reset Jack

### Power On/Off:

Long-press the Power button to turn the speaker on and off.

### Bluetooth:

- Turn the **power button** to “ON”, the speaker enter Bluetooth mode automatically.
- Activate Bluetooth of mobile phone and search for device name **“KM43105182”** then connect it.
- Long-press **Forward** or **Backward button** to select Next/Previous songs.

- Short-press **Forward** or **Backward button** to adjust volume up and down.
- Short-press **Play/Pause button** on the device.
- Long-press **TWS button** to disconnect the Bluetooth connection with the mobile device.

#### **TWS Function:**

- Turn on two same model speaker, both speaker under Bluetooth mode.
- Short-press the **TWS button** to pair, after paired successfully, the TWS button will keep lighting, you could play music by the two paired speakers to create more powerful surround sound effect.
- Short-press the **TWS button** again to exit TWS mode.

#### **FM Radio:**

- Press the **MODE button** to FM state.
- Short press **Play/Pause button** to mute the speaker, long press **Play/Pause button** to auto search the FM Channel and store it automatically.
- Long press **Forward or Backward button** to change the stored FM channel.
- Short press **Forward or Backward button** to adjust the volume.

#### **Playing music from USB disk:**

- Insert USB flash disk into slot, the music will be played automatically.
- Long press **Forward or Backward button** to select songs, short press to adjust the volume up and down.
- Press **Play/Pause button** to play or pause.

Notes: Under any playing mode, when insert a USB disk to the speaker, it will switch to play the USB disk.

#### **AUX-IN:**

- Connect 3.5mm audio cable (included) to connect from the device's "Line Out" to the "Aux In" of this device.
- When using the audio cable to connect the device in the playing mode, it will auto-switch to the AUX mode.

#### **Running Light**

The running light is on when speaker powered on, short-press the **Running Light button** to turn the three different light modes and turn it off.

#### **Reset Functionality:**

If the speaker does not turn off or respond, user can short-press the Reset jack with a small round pin to reset the speaker.

#### **Water resistant:**

Close all the cover when using in outdoor area. Do not charge the speaker during use in outdoor environment.

**How to charge:**

- This product shall not be connected to power supply source exceeding PS1. 5V D.C. 1.3A.
- Charge the speaker via a standard USB 5V/1.3A adapter (Not Included)
- Charging time: approx. 4.5 hours, after full charging, battery indicator is off.
- There will be a tone to remind you to charge when the battery is low.

**Note:** This speaker does not have power bank function, it is forbidden to use it to charge other devices or connect to other devices via the USB port.

**IMPORTANT:**

- When playing music during charging, put the volume to middle, as for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.
- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

**12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.