


LASER TRAP ALARM

HOW TO PLAY

1. Select the light sensitivity switch on the bottom of the receiver.

When in a bright place, select the sun icon. 

When in a dark place, select the moon icon. 

2. Press the ON/OFF button on the receiver to turn on the receiver

and slide the ON/OFF switch located on the bottom of the transmitters to the ON position. The LED light will light up.

3. Align the LED beam of the transmitters to the LED receiving lens of the receiver by adjusting the arm's angle of the transmitter and receiver.

4. The LED light on the receiver will extinguish when the beam is aligned. The receiver will be activated with a beep sound after three seconds, and the LED light on receiver will keep flashing. This means that the calibrating is successful.


5. Once the laser trap alarm is set up, the alarm if triggered will make sounds for 5 seconds when anything interrupts the beams. Press the ON/OFF button of the receiver to stop the alarm, then press it again to re-set the alarm.



Tip: Holding a white card or paper in front of the receiver will help you align the LED beam with the LED receiver lens more easily. For a better experience, set up the device in a darker area.

Attention: Remove batteries after you have finished using your product.

BATTERY INSTALLATION

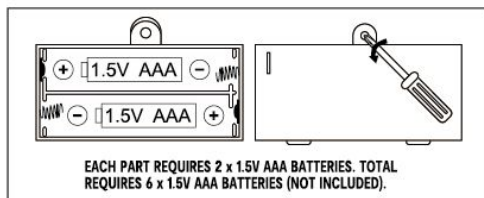

**PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.**

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

KEYCODE: 43105793

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.