 


AGES 3+ YEARS

MY FIRST ROBOT

MANUAL

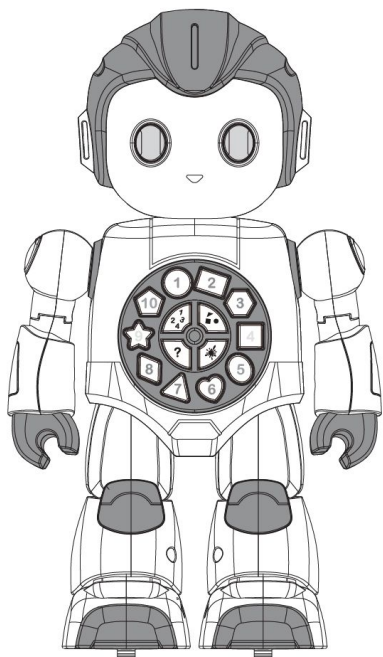

-1-

PACKAGE CONTENTS

 
- Robot
- User's Manual

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.

1. Do not use your robot near water. Clean using a soft cloth or paper towel.
2. Do not place your robot on any wet surfaces.
3. Do not allow children under the age of three to play with robot.
4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your robot to excessive trauma.
9. Your robot is not intended for commercial use.

ROBOT

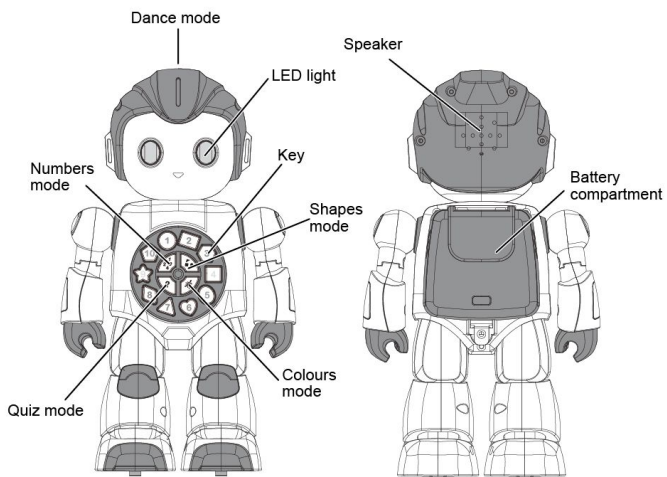


-2-

INSERTING BATTERIES

Robot

1. Unscrew to open battery cover, insert 3 X 1.5V AA batteries.
2. Replace battery cover.

 Attention: remove batteries after you have finished using your product.

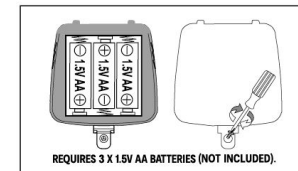

HOW TO PLAY

NUMBERS MODE

Press the numbers mode button to enter the numbers mode, then press on a key and the robot repeats the corresponding number.

SHAPES MODE

Press the shapes mode button to enter the shapes mode, then press on a key and the robot repeats the corresponding shape.

COLOURS MODE

Press the colours mode button to enter the colours mode, then press on a key and the robot repeats the corresponding colours.

QUIZ MODE

Press the quiz mode button to enter the quiz mode, the robot will ask you questions, you need to find the corresponding numbers, shapes and colours to answer the questions.

DANCE MODE

Touch the top of the robot's head to enter the dance mode, then the robot will sing and dance. Touch the top of the robot's head again, the robot will stop singing and dancing.

SLEEP MODE

The robot goes into sleep mode automatically when not in use but wakes up as soon as you press any button.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PLEASE KEEP THE PACKAGING AND INSTRUCTION MANUAL FOR FUTURE REFERENCE.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED.
DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

KEYCODE: 43105960

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

-3-