 


AGES 3+ YEARS

ROLLING ROBOT

MANUAL

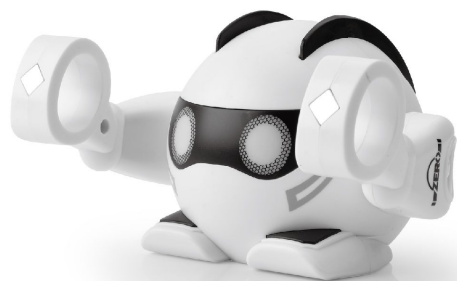

PACKAGE CONTENTS

 
- Rolling Robot
- User's Manual

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.

1. Do not use your robot near water. Clean using a soft cloth or paper towel.
2. Do not place your robot on any wet surfaces.
3. Do not allow children under the age of three to play with robot.
4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your robot to excessive trauma.
9. Your robot is not intended for commercial use.

ROBOT

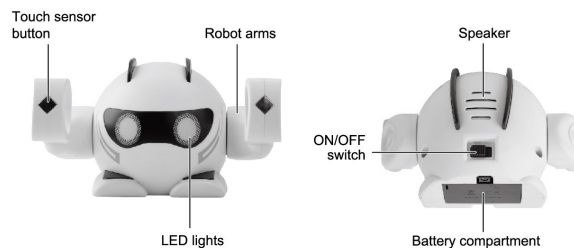


INSERTING BATTERIES

Robot

1. Unscrew to open battery cover, insert 3 X 1.5V AAA batteries.
2. Replace battery cover.

 Attention: remove batteries after you have finished using your product.

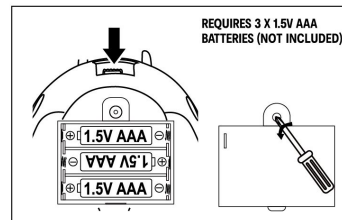

POWERING ON YOUR ROBOT

Once you have inserted batteries into your robot, you can go ahead and power on your robot. To do so, slide the ON/OFF switch located on the rear of the robot to the ON position. (The LED light of the eyes will be on, and the arms will roll with music). When you have finished playing with your robot, slide the ON/OFF switch to the OFF position.

NOTE: Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

TOUCH SENSOR

Touch the sensor button (metal piece) with both hands at the same time, and the robot will stop rolling and playing music.

Touch the sensor button (metal piece) back and forth with both hands to play a tune and make the robot roll back and forth.



VOICE WAKE-UP ACTIVATION FUNCTION

When the robot is in a quiet environment for a period of time, it will enter the standby mode. Clap your hands to wake up your robot.



PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.
PLEASE KEEP THE PACKAGING AND INSTRUCTION MANUAL FOR FUTURE REFERENCE.

KEYCODE: 43105991

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED.
DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.