

6+  
YEARS


# 2.4G RC STUNT RACE CAR

## INSTRUCTIONS



### Remote control battery installation:


1. Unscrew to open the battery compartment.
2. Insert batteries into the correct + and - polarities.
3. Close the cover.

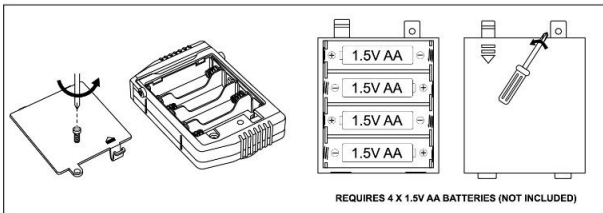

### Lithium battery charge instructions:

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.


1. Turn off vehicle and turn on the remote control.
2. Open the charging cover to take out the charging plug. Connect the charging plug with the vehicle charging interface as shown.
3. The charging indicator on the remote control will light up and will be solid when charging. (When the charging indicator light flashes during charging, it indicates that the remote control battery is not sufficiently charged). Once the indicator light turns off, the vehicle is fully charged. Unplug the charging plug from the vehicle.

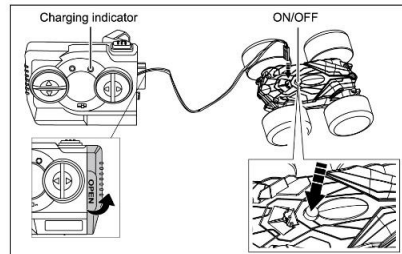


### How to use simultaneously:

1. Turn on the vehicle, then turn on the transmitter.
2. When the vehicle is functioning, that means they are matched.
3. If you have more than two vehicles, please pair one by one. When the second vehicle is pairing, please always keep the first vehicle and transmitter on.
4. Please turn off both the vehicle and transmitter and re-start all pairing processes if you are changing to play with another 2.4GHz transmitter.

### Remote control :

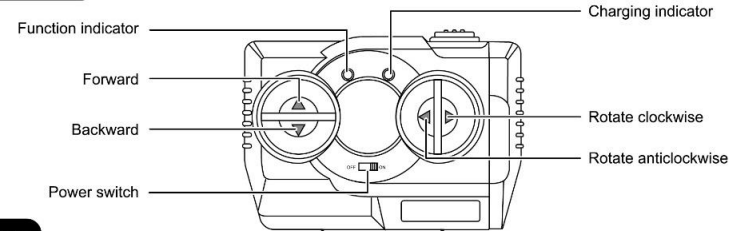

### How to play:

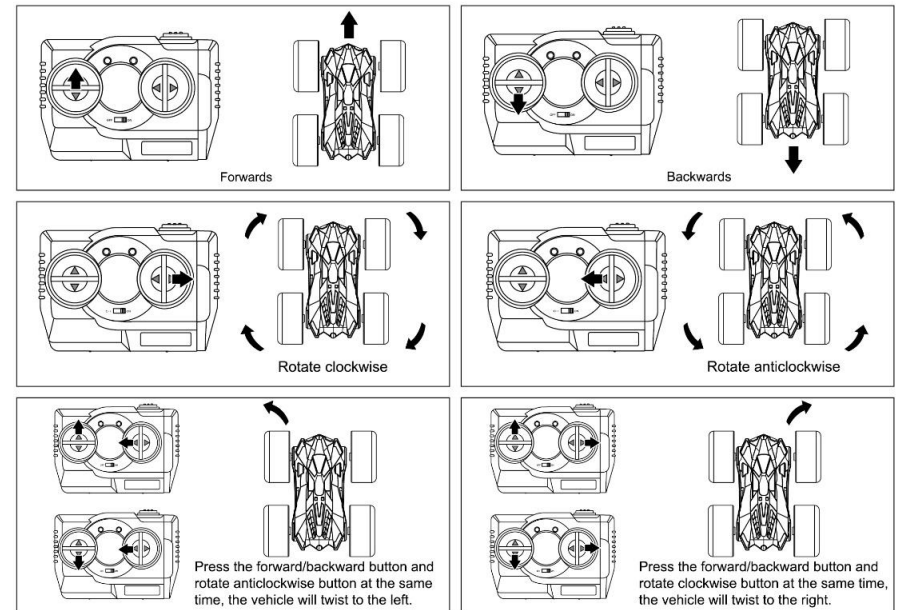

### How to flip over:

Press and hold the forward button or backward button, when the vehicle hits an obstacle at high speed, the vehicle will flip over. Press and hold the forward button, when the vehicle runs at high speed, quickly press the backward button for the vehicle to flip over.

**Note:** It is not recommended to drive the vehicle on carpet when you perform the flip function or spin function.

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

**WARNING:** CHOKING HAZARD-SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YRS.

2.4GHz



**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**KEYCODE: 43106035**

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS, AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**PERFORMANCE TIPS:** DO NOT DRIVE THE VEHICLE THROUGH WATER. DO NOT DRIVE THE VEHICLE INTO ANY HARD OBJECT. PRODUCT MAY VARY FROM THE IMAGE SHOWN. PLEASE KEEP PACKAGING FOR FUTURE REFERENCE. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.