


PAPER:
80gsm
Bright white uncoated paper

PRINT COLOURS:
BLACK
C:0 M:0 Y:0 K:100

PRINT FINISH:
Double sided
Folded in the centre

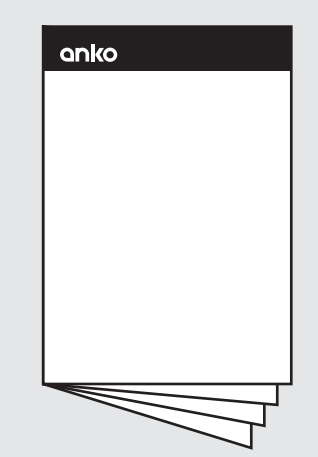

LASER All rights reserved.

5

Be sure to keep the arm in horizontal position during adjustment. Or else, it would be difficult to adjust the mount.

If the monitor droops after installation, adjust the force to the "+" arrow direction.
If the monitor automatically rises after installation, adjust the force to the "-" arrow direction.

Use a hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still in any position.

6

Use a hex wrench to adjust the damp for tilting. Turn counter-clockwise to reduce damping and clockwise to increase damping.

Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.

— 07 —

anko

Dual Gas Lift Monitor Arms Installation Manual

43108138

15°-27°	Load 2-6.5kg	VESA 75x75, 100x100
-90°/85°	Swivel 180°	Rotation 360°

WARNING

- ⚠ Prior to the installation of this product, the installation instructions must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.
- ⚠ Do not install on a structure that is prone to vibration, after movement, uneven or chance of impact. Reinforce the structure as required before installation.
- ⚠ The desk clamp can support a maximum thickness of 9 cm. Check the desk edge before installation.
- ⚠ Pay attention to the weight capacity of the mount. Exceeding the limitation can result in disfunction or even serious personal injury and property damage.
- ⚠ Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.
- ⚠ Do not push, pull fiercely. Do not pull the clamp oppositely from the desk. Never shake the base. Ensure the unit is used only on a flat surface. Do not use this unit unless all bolts and screws are firmly secured. Check and tighten all parts regularly. Not a toy, not for children to play with.

PRODUCT DIMENSIONS

— 01 —

OR 4

Recessed surface installation:
Put spacers between headplate and monitor. Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.

3 Recessed surface installation:
Put spacers between headplate and monitor. Install the lower two screws and fasten the upper two screws.

— 06 —

4

Flush surface installation: Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.

3 Flush surface installation: Install the lower two screws and fasten the upper two screws.

— 05 —

TOOLS REQUIRED THAT ARE NOT INCLUDED

PARTS INCLUDED

A	M4x12 (x8)	M4x30 (x8)
B	S=4mm (x1)	S=5mm (x1)
C	M6x12 (x3)	
D	(x1)	(x1)
E	(x2)	

— 02 —

1

DONT GET HURT!!!
The Gas Spring Arm has been preset for a 6.5kg monitor. Please hold the folded arm tightly and open it slowly when removing it from the packaging.

Remove the cable tie and take care to allow the rebound slowly. Beware of sudden spring-back of the arm.

Grommet installation

2

Loosen the two screws on the base, pass it through a hole in the desk or clamp and tighten to flat table edge, screw in the two screws that you have just loosened.

— 03 —

Desk Clamp installation

OR 2

Attach the desk clamp to the aluminum base.

3

Adjust the desk clamp height using different hole position. Ensure 2 screws used for fixing.

Tighten clamp using clamp screw until mount is securely fastened to desk. Ensure the desk area which is held by clamp is even and flat.

— 04 —

260mm

180mm