 



TEEPEE PLAY TENT ASSEMBLY INSTRUCTIONS

A. Top pole 4 pcs




A

D. Teepee fabric 1pce.

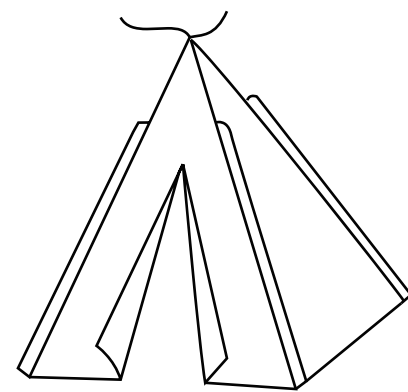

D

 B/C. Bottom pole with Plastic connectors 4 pcs



B C

E. String cord 1pce.



E


PLEASE READ ALL INSTRUCTIONS CAREFULLY. ENSURE YOU HAVE ALL PARTS BEFORE STARTING TO ASSEMBLE THE TEE PEE PLAY TENT.

WARNING: KEEP AWAY FROM ALL FLAME AND HEAT SOURCES.
NOT INTENDED TO BE USED AS A RECREATIONAL TENT.
FOR PLAY PURPOSES ONLY.
ADULT SUPERVISION RECOMMENDED FOR YOUNG CHILDREN.

1) Insert the Top Pole (A) into the plastic connectors (B) like below.




A

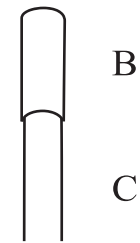


B

C


2) Slide poles into sleeves, one by one making sure that the holes are positioned poles are at the top of the teepee.

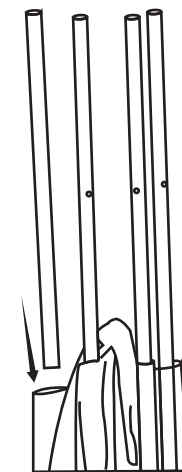


3) With the white loose string, loop though each holes in order.

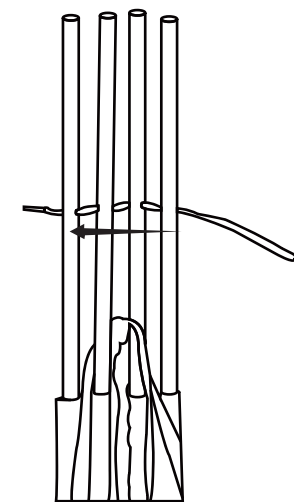


4) Pull the string taut. With the string attached to the tent, tie this around the whole string in between the second and third pole.

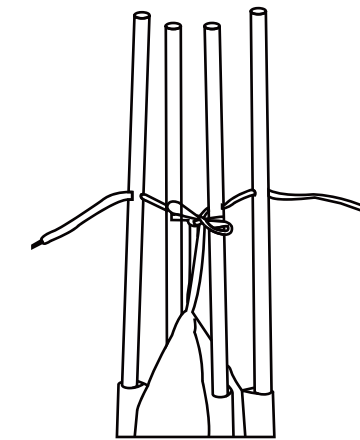


5) Spread the bottom corners out until they are fully extended.

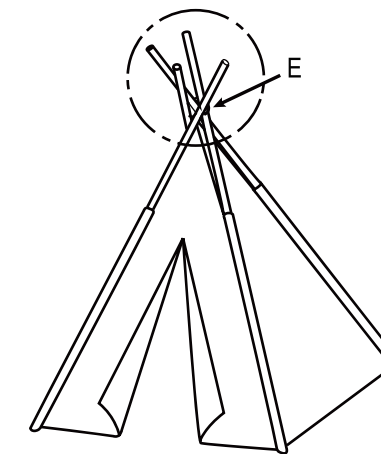

6) Last tie the white string into a knot to secure poles.

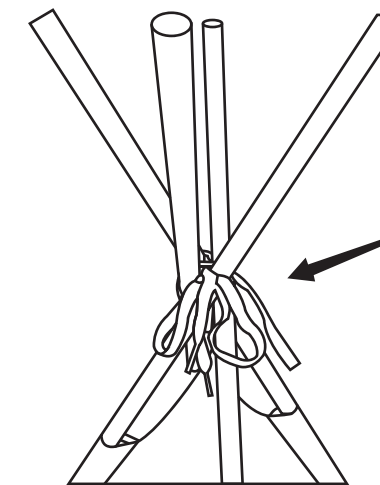

- ① Pinch a Bow on left and right side.
- ② Fold the shorter end into the shape of a bow, pinching it against your neck.
- ③ Pull and Pluck. Pull the long side over the bow and then pluck both sides of the bow together.
- ④ Tie tension in avoid the bow loosen.

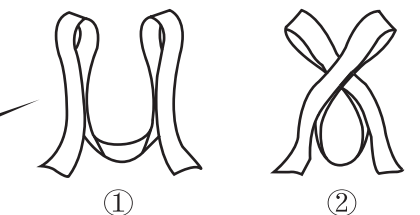

①



②



③



④