


3+ YEARS

HUNGRY DINO SET

INSTRUCTIONS

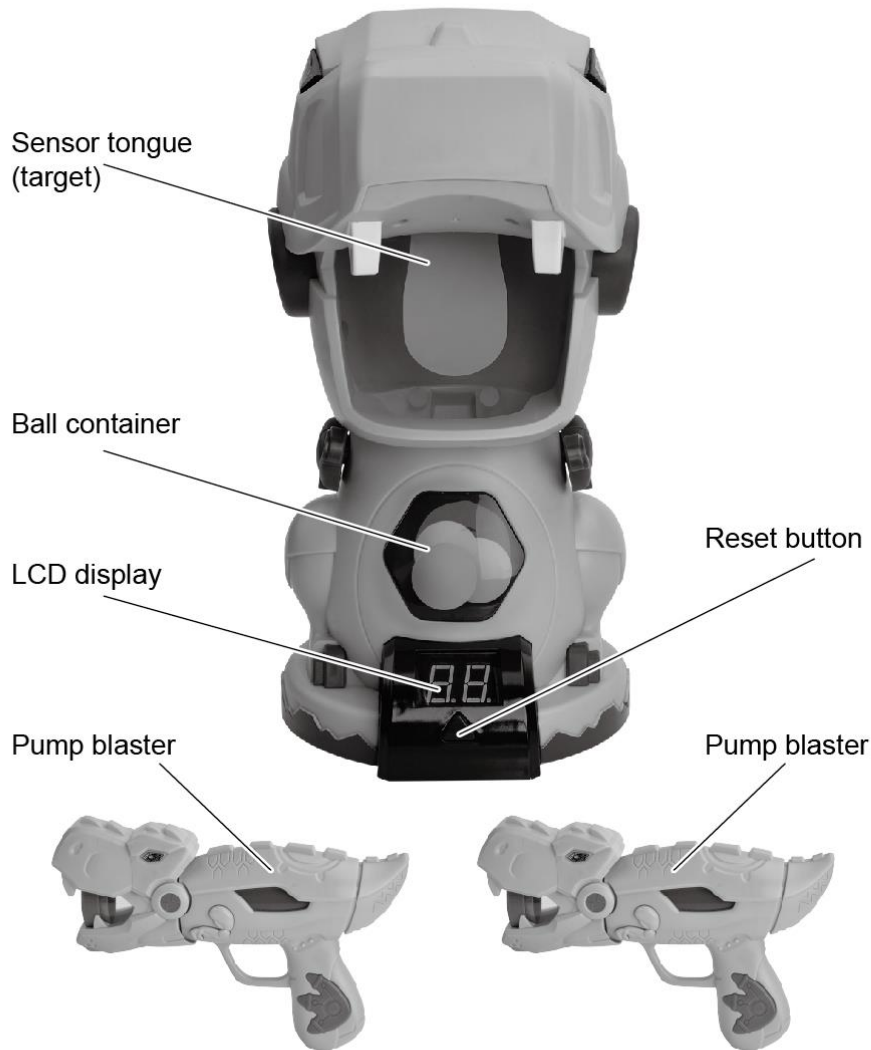

PACKAGE CONTENTS


- 1 Dino Scorekeeper
- 2 Blasters
- 16 Indoor Foam Balls

INSERTING BATTERIES

1. Unscrew to open battery cover, insert 2 x 1.5V AA batteries.

2. Replace battery cover.

Attention: Remove batteries after you have finished using your product.

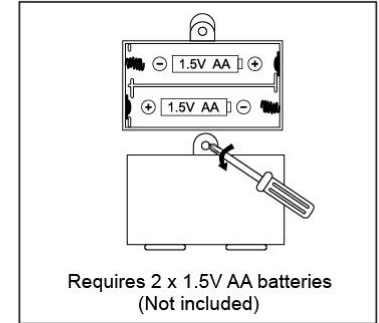

HOW TO PLAY

1. Use the pump blaster to aim for the tongue which is the target.



2. The LCD display will show the score for each time you hit the tongue.



3. Take the balls out of the dino's tail to prepare for the next shot.



4. If you want to reset the score, press the reset button.

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY AN ADULT. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

ADULT SUPERVISION REQUIRED.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.
PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.

WARNING: CHOKING HAZARD
SMALL PARTS AND SMALL BALLS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: DO NOT AIM AT FACE OR EYES. DO NOT USE PROJECTILES OTHER THAN THOSE SUPPLIED BY MANUFACTURER.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

Keycode: 43113460

WARNING:
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS AS FOAM PIECES MAY BREAK OFF AND CAUSE A CHOKING HAZARD.