

 **ADVICE FOR USE & CARE**

1. Clean the scale with slightly damp cloth. DO NOT immerse the scale in water or use chemical/corrosive cleaner. Keep the scale in cool dry place.
2. All plastics parts should be cleaned immediately after contact with fats, spices, vinegar and strongly flavored/colored foods. (Avoid contact with acids citrus juice.)
3. Always use the scale on a solid, flat surface, keep the scale unmoved when weighing.
4. This product is precision instrument, please handle with care; Do not strike, shake or drop the scale.
5. If fail to turn on, please check whether battery(ies) are installed or battery power is low.
6. Keep away from high temperature, do not strip the scale arbitrarily.
7. Designed for family use only, not for commercial use.

anko

**KITCHEN
SCALES**

INSTRUCTIONS FOR USE

 


ISO 9001 CERTIFIED BY SGS

■ MAIN FUNCTION



1. With high precision load cell
2. Water & milk volume measuring function.
3. Battery power low and over loaded warning function.
4. Zero & tare function.
5. Auto off function

■ TO REPLACE BATTERY AND CHARGE

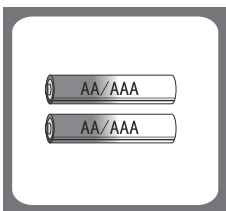

2 x 1.5V(AA/AAA)batteries(excluded)
 Open the battery cover.Install new batteries by
 putting one side of the battery down first and
 pressing down the other side.
 (Please observe the polarity)

  ■ LCD ICONS INDICATION

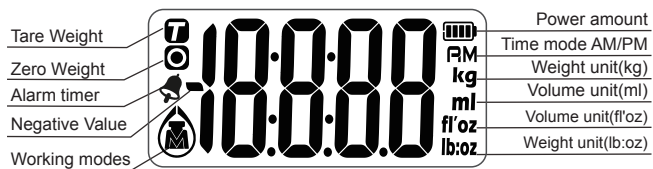

LCD display differs form one to another, so the above picture is indicative only.

■ BUTTONS FUNCTION

MODE CHANGING,
UNIT CHANGING
BUTTONS:



 
ON/OFF, ZERO,
TARE BUTTONS:



Note:


1. Above buttons are for indicative only.
2. UNIT button for some items are on bottom of the scale, please set the unit there if needed.
3. Buttons **UNIT** and **ZERO** are indicative in this manual.

■ WEIGHING

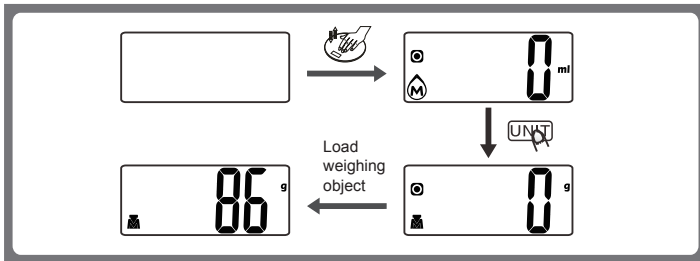

1. Place the scale on a solid and flat surface.
2. Place bowl (if any) on the scale.
3. Gently press on the scale by hand to turn on.
4. Start weighing when LCD shows "0". Press **UNIT** button to convert to weighing mode.
5. Load weighing object on scale(or bowl) to start weighing. LCD will show the weight reading.

 ■ VOLUME MEASURING

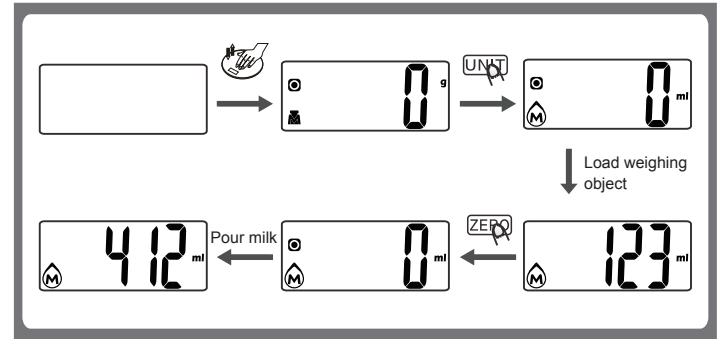

1. Place the scale on a solid and flat surface.
2. Gently press on the scale by hand to turn on.
3. Press the **UNIT** button to convert the mode to water or milk volume mode when LCD shows "0".
4. Put a container onto the scale platform, LCD shows the weight of the container.
5. Press **ZERO** button for Zero or Tare.
6. Pour liquid (water or milk) into the container, LCD shows the volume of the liquid.

■ MODE / UNIT TRANSFER

 
Press **UNIT** button to switch the mode or unit you need after turning on the scale, it can be switch circularly.

There is **UNIT** button on base of the scale for some models, in this case, you need to set the unit with the **UNIT** button on base.

Note: The unit system of scale depends on scale destination or the requirement of distributor.

■ ZERO & TARE FUNCTION

To weigh different loads consecutively without removing loads from the scale. Put first Load on the scale, get weight reading. Press **ZERO** button to reset the LCD reading to "0" before adding next load. You can repeat this operation.

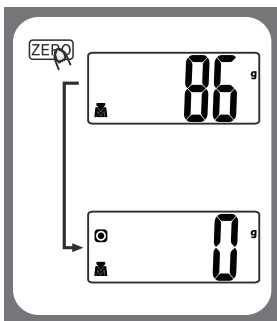

Condition 1: "ZERO" function

When total sum of all loads on scale $\leq 4\%$ of scale's max.weight capacity:

LCD will show ---- or Og each time **ZERO** is pressed. ---- means not stable, please wait for a moment. Og and meanwhile an icon o on the LCD mean ZERO function is activated. Max.weight capacity remains unchanged.

(For example:

When capacity is 2000g, 4% is 80g;

When capacity is 5000g, 4% is 200g)

Condition 2: "TARE" function

When total sum of all loads on scale $> 4\%$ of scale's max.weight capacity:

LCD will show ---- or Og each time **ZERO** is pressed. ---- means not stable, please wait for a moment. Og and meanwhile an icon T on the LCD mean TARE function is activated. Max.Weight capacity is reduced by total weight of all loads.

(For example:

 
When capacity is 2000g, 4% is 80g;

When capacity is 5000g, 4% is 200g)

Under this condition:

By pressing **ZERO**, you can see the total weight of all loads on the scale. If you want to weigh more loads, just press **ZERO** to reset LCD reading to '0' again.


■ AUTO OFF (BATTERY POWER SAVING MODE)

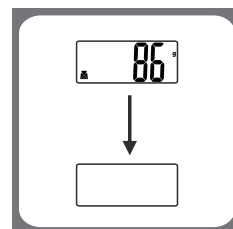

The product will turn off automatically if there are no operation within a few minutes.

Note: The time of auto off depends on the requirement of destination or distributors.

 ■ WARNING

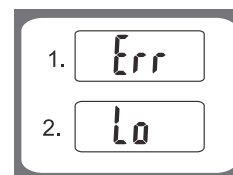


OVER LOADING WARNING

When LCD shows Err, it is over loaded(Max capacity is shown on product), please take off the object to prevent damage to the scale.

LOW POWER WARNING

When LCD shows Lo, battery power is low, please change new battery(ies).

 ■ THE RESET BUTTON OF CHARGING PRODUCT

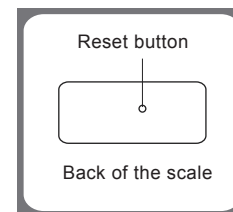

If product with rechargeable battery has reset button as shown in the picture, please press the reset button to reset it with the aid of a sharp object. It can make product back to work.