

REMINGTON®
EST. NEW YORK 1937

PRO CURLS TONG



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

CI1019AU

IMPORTANT SAFEGUARDS

Warning: When the tong is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the tong is switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.

- Your tong should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Burn hazard - Keep appliance out of reach from young children, particularly during use and cool down.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The plates will be very hot during use. Do not let bare skin touch heated surfaces.
- Do not place the heated tong on any soft surface such as a bed, carpet or a towel. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.

SAVE THESE INSTRUCTIONS

CI1019AU PRO CURLS TONG

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your Remington® Pro Curls 19mm Tong with ceramic technology for even heat distribution. You can now style your hair quickly and easily creating defined curls or soft curls and waves.



KEY PARTS

- | | |
|--------------------------|---|
| 1. Cool tip | 6. Salon swivel cord |
| 2. Ceramic coated barrel | 7. Variable temperature and on/off switch |
| 3. Clamp | 8. Protective stand |
| 4. Tong grip | 9. Brush sleeve attachment |
| 5. On indicator light | |

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair prior to styling, then dry your hair thoroughly and make sure that it is tangle free.

Note: The Pro Curls Tong is not suitable for use on synthetic wigs or hair extensions.

CERAMIC TECHNOLOGY

The Pro Curls Tong from Remington® has a ceramic coated barrel that provides even heat distribution and locks in moisture to create shiny curls and waves.

AUTOMATIC WORLDWIDE VOLTAGE

Pro Curls features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

Note: Some countries will require the use of a plug adaptor that is not included with your tong.

HOW TO ATTACH THE BRUSH SLEEVE ATTACHMENT

Pro Curls can be used with or without the brush sleeve attachment. To fit the brush attachment, with the tong unplugged and cold, hold the tong by the handle and slide the brush over the barrel – with the clamp flat against the barrel. Ensure that the brush sleeve is clipped on to the screws on the clamp. Only remove the brush sleeve attachment when the barrel of the tong is cold. To remove, simply grasp it and pull it away from the barrel.

HOW TO USE YOUR REMINGTON® PRO CURLS TONG

Place the tong on a flat, hard, heat resistant surface ensuring the barrel does not come into contact with the surface. Plug in to any household (120/240V AC) power outlet. Slide the on/off switch towards the barrel, the on indicator will light up red to indicate the tong is heating. Select your desired temperature using the variable temperature switch. The lowest temperature indicated on the variable temperature switch is • . The highest temperature on the variable temperature switch is • . Your tong will be ready to use in 30 seconds.

Take extra care when using the tong, as it can get very hot. It is important to establish the correct temperature for your hair type prior to use, to prevent over drying or damage to your hair. If in doubt, start with the low temperature setting first and increase the temperature gradually.

Pro Curls is not suitable for use on synthetic wigs or hair extensions.

HOW TO MAKE A CURL

- Separate small sections of hair (about 5cms wide) and place the ends of one section under the clamp.
- Hold at a vertical angle, and then rotate the barrel, rolling hair up towards the roots trying not to overlap the hair.
- Use the cool tip if you need to get a better grip of the unit without having to grip the heated barrel and clamping tong. The swivel cord ensures you can turn the unit easily without getting tangled, when in use. The tightness of the curl is determined by how tightly you wrap the hair around the tong and how long you hold the tong in place.
- Hold the tong for 10 to 20 seconds, depending on the texture and length of your hair.
- To remove the tong from the curl, simply press the tong grip and remove the tong from the curl. The ceramic coated barrel will ensure that the hair slides smoothly from the tong.
- After removing the tong from your hair, wrap the ringlet around your finger and secure it with a bobby pin.
- Allow the curls to cool fully before styling, as this ensures a long-lasting curl. When the curls have cooled (allow approximately 5 – 10 minutes) unpin and comb through with your fingers.
- Complete your style with a finishing balm or spray.

TO CREATE A FLICK STYLE OR A BOB

With the brush attachment fitted to the tong, start at the end of a section of hair. For a flick up style hold the brush over the hair and roll the hair away from the face. For a bob repeat as above but roll the hair towards the face. Hold in place for 10 to 20 seconds.

TO CREATE EXTRA VOLUME

If your hair is flat and limp add loads of volume at the roots by placing the brush under each section of hair near the root and holding it there.

MAINTENANCE

This tong is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the tong from the power outlet, allow it to cool, and then wipe the exterior surface with a soft damp cloth. Do not immerse the appliance in any liquid. Do not use an abrasive cleaning fluid or material to clean the ceramic coated barrel as this will scratch the surface.

STORAGE

When not in use, always unplug the tong from the power outlet. Allow the tong to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the tong as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the power plug and tong connections. If the cord becomes twisted in use, periodically straighten it.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

This product conforms to radio frequency interference requirements.
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited
WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON[®]
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

①New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2018 Spectrum Brands Inc.

Rev. 12/18

Part No. T22-0004521-B

Type: C11019

