



Instruction Manual

Gaming Microphone ORB

Keycode: 43126491




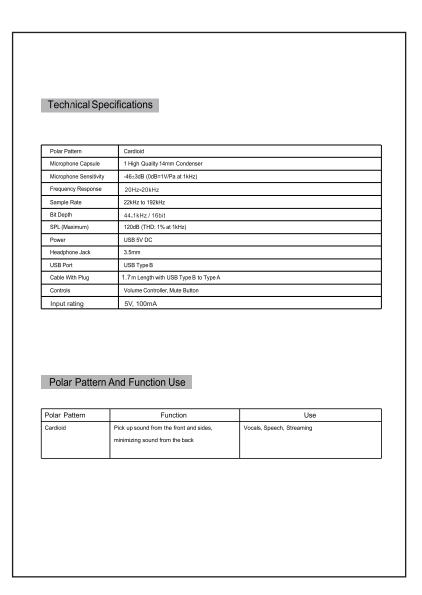


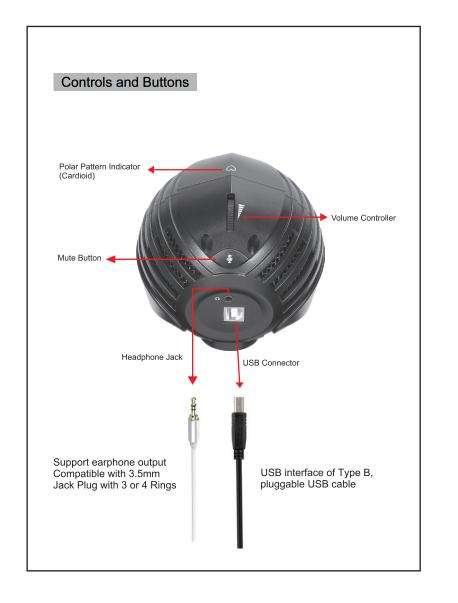

Windows 7/8/10 Installation for USB


- 1. Plug USB port of the microphone directly into your laptop or desktop computer.
- 2. Right click the **Audio Manager icon** on the lower right of the desktop, then click the recording devices.
- 3. See the microphone is set up and is on default, double click on **microphone**, then you can find internal microphone properties and click it.
- 4. Click the **listen**, then click the **OK button** (If ou need to monitor when recording, click **OK** to save the settings).
- 5. Click the **custom**, you can choose whether there is **AGC** based on your personal preference.
- 6. Click the **levels**, you can adjust the volume based on your personal preference.
- 7. Click **OK** to save the setting, then start to use this microphone.

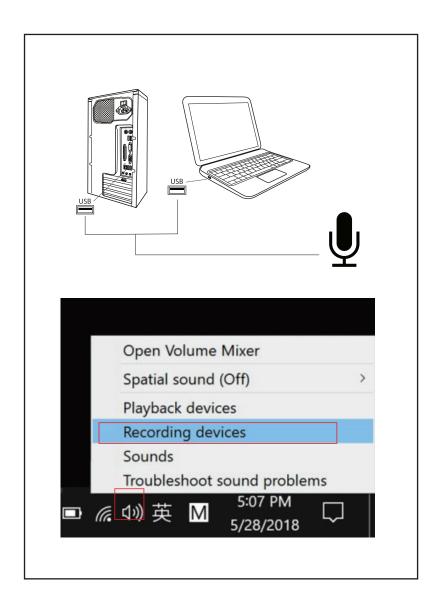

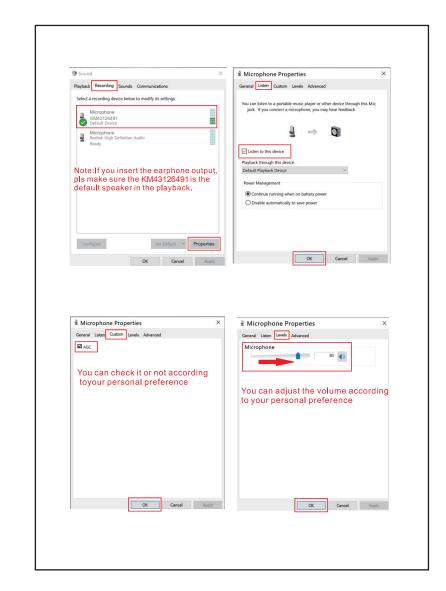


Mac OS for USB

- 1. Click the desktop menu, then click system preferences.
- 2. Find **sound button** and click it.
- 3. Choose **input**, you will find internal microphone, turn off the input volume.
- 4. Choose **KM43126491** adjust input volume (Generally adjust in the middle).
- 5. Test the microphone sound: search out the computer comes with the software: **Quick Time player**.
- 6. Right click and select "New Audio recording"
- 7. After selecting the external USB microphone, click the **recording button** and you can record it.

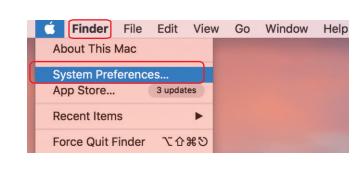



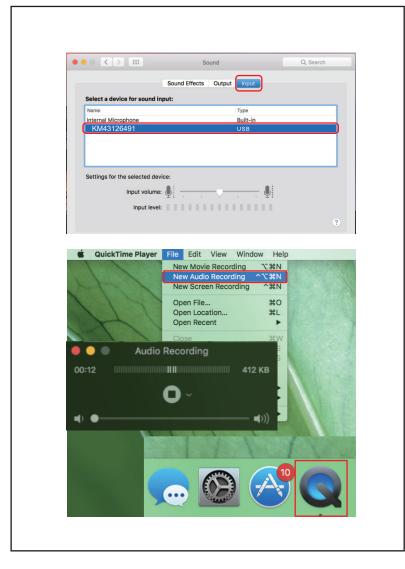

How to install

Mount the microphone over the central pole of the tripod, then rotate the tripod stand as below direction shown to fix the microphone



How to use

- 1.Press Mute button, Polar Pattern Indicator will change to red color, the power on.
- 2.Plug earphones to the AUX port, then you could listen to the music or record your voice, etc.
- 3. Turn the Volume controller to increase or decrease volume based on your need.
- 4. Press Mute button, and Polar Pattern Indicator will go off.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.