

INSTRUCTION MANUAL

43131938

43131938_Bluetooth Portable Speaker_IM_V1


Artwork Proof Date: 11.18.2021

PAPER:
80gsm
Bright white uncoated paper

PRINT COLOURS:

BLACK	GREY
C:0 M:0 Y:0 K:100	C:0 M:0 Y:0 K:70

PRINT FINISH:
Double sided
Folded in the centre

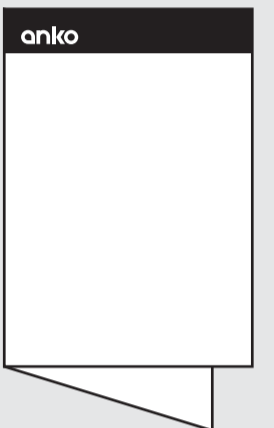

LASER All rights reserved.

←
285mm
→

←
210mm
→

anko

Bluetooth Portable Speaker

User Manual

Package Contents

- › Bluetooth Portable Speaker
- › Charging Cable (Micro USB Cable)
- › Audio Cable (3.5mm Aux Cable)
- › User's Manual



43131938

***In TWS mode, when inserting U-disk or TF card into main speaker driver, it will disconnect TWS and switch to U-disk or TF card mode. Any secondary speakers connected via TWS will go into an idle state. When inserting U-disk or TF card into a secondary speaker, it will switch to U-disk or TF card mode, but primary speaker will stay in Bluetooth mode.**


Battery Charging:
This Speaker is powered by a rechargeable Li-ion battery. Please use provided micro USB cable for charging. Plug the micro USB cable end to the unit and the other USB A end into a PC USB port, wall charger or other 5V charging devices.
There are a total of 5 battery levels:
1 › led light: 1%-20%,
2 › led lights: 21%-40%
3 › led lights: 41%-60%
4 › led lights: 61-80%
5 › led lights: 81%-100%

12 month warranty
Thank you for your purchase from Kmart. Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.
Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation

WARNING › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble Waste electrical products should not be disposed of with household waste, please recule where facilities exist. Check with your local authority for recycle advice. › Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet-liquids can cause serious damage. Do not handle your device with wet hands.

- Specification:**
- › Model No: 43131938
 - › Version: V5.0 Multimedia bluetooth chipset
 - › Working Distance: 10 Meters
 - › Output: 2 X 5W Speaker
 - › Frequency: 20Hz – 20kHz
 - › Talk Time: 7h
 - › Standby Time: 10h
 - › Charging Voltage: 5V d.c.
 - › Charging Time: 4-5h
 - › Music Playing Time: 3h at 100% volume, 5.5h at 50% volume

- Safety instructions:**
- › Device may become warm while charging.
 - › Do not press the buttons too hard as it could damage the product.
 - › Only use a dry cloth to keep product clean from dust.
 - › Do not use chemicals on this product.
 - › Avoid dropping the product, as harsh impacts could damage the product.

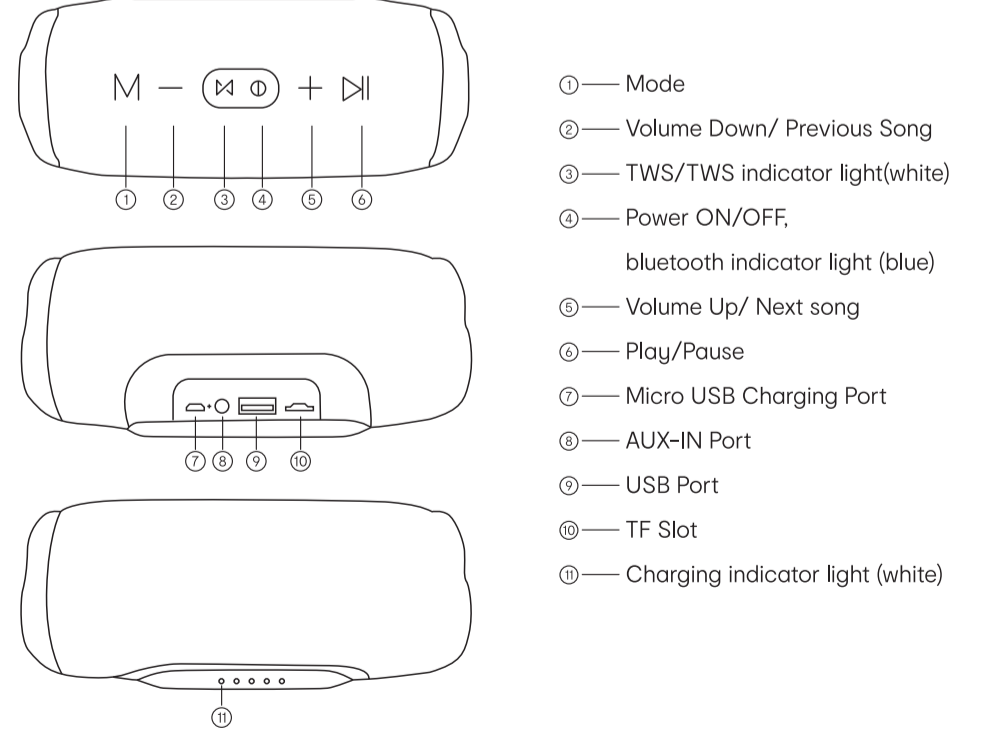

- How to use this Speaker**
- Skip Track:**
Press and Hold the + or – key once to skip the track.
- Adjusting the Volume:**
Press the + or – key to increase and decrease the volume.
- Mode Button:**
- › The Speaker enters Bluetooth Mode by default after switching on.
 - › When multiple media devices are connected, you can cycle through Bluetooth, TF Card, USB or AUX mode by pressing the mode button.
 - › Post- insertion priority, the Speaker will enter TF card or USB or AUX mode once they are inserted in the slot.
- Paring the Speaker with Bluetooth devices**
- › Press and hold the Power button until the LED flashes rapidly, indicating it is ready to pair with a Bluetooth device.
 - › In the Bluetooth menu on the media device, search for “KM43131938” and connect. Type Password “0000” or “1234” if password requested
 - › Once the Speaker is successfully paired and connected, indicator lights remains on and you can now play music through the speaker. When playing music, the indicator light will flash slowly in blue.

- TF Card Play:**
Insert the TF Card into the TF Card socket to connect your device, the speaker will play the music automatically from the TF card. (Press the M button on the unit to select Music mode)
- USB Operation:**
U disk play: Insert the USB drive into USB port. You will hear an alert. The speaker will play the music from the USB drive automatically. (Press the M button on the unit to select Music mode).
USB port can not supply power to other drivers.
- AUX Function:**
Use a 3.5mm Aux-in cable to connect your device through the AUX in port. Choose the music from your music list from your media device and play.
- Receiving and Ending Calls**
When there is an incoming call, the speaker will pause the playback and ring to alert you of the call.
To answer/hang up the call, short press the Play/Pause button. To reject the call, press and hold the Play/Pause button 2 seconds. When the speaker is connected to a cell phone, double click play/pause will redial last number.
- TWS function:**
Two same model speakers can connect to make a TWS pair. Press and hold the TWS button for 3 - 4 seconds, after hearing a prompt and seeing an indicator light the speakers will be paired. Primary speaker will be left channel audio and secondary speaker will be right channel. Both speakers can control the functions and unpairing but only the primary speaker can re-pair.