

# anko

## User Manual

### HDMI MULTI SWITCH BOX

### Keycode 43136087



Please read all the information carefully before you use the device to avoid accidents and keep it for future reference.

#### **Packing Contents:**

1. HDMI Switch X1
2. Remote control X1 (2AAA batteries not included)
3. Adaptor X1 (5V=1A)

### Product Introduction

Support connect five HDMI sources to one HDMI display

(Only one screen can display at one time, screens CANNOT display simultaneously)

Plug And Play, with remote control.

HDMI version: 1.4 A

Easy install & operation

Support up to 4K/30Hz resolution

Support 3D video format

MAX operation current: 600mA

**Remark: Compatible HDMI cable must be used to support the connection for highest resolution and refresh frequency.**

### Operating and Connecting

1. Connect 5 HDMI cables (not included) from HDMI source device into HDMI input ports.
2. Connect 1 HDMI cable (not included) from HDMI source device into HDMI output ports.
3. Connect 5V/1A power adapter to the HDMI switch.
4. Switch the monitor display by remote or press SELECT button on device

