

# Assembly Instructions

## 43151974 Soho Marble Hall Table

**WARNING:** THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. DO NOT STAND, SIT OR LEAN ON THIS TABLE. DO NOT USE THE TABLE AS A CHOPPING SURFACE. DO NOT KNOCK OR DRAG THE PRODUCT. DO NOT USE THE TABLE UNLESS ALL SCREWS ARE FIRMLY SECURED. USE ONLY ON A FLAT SURFACE. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

**CARE INSTRUCTIONS:** WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. FOR INDOOR AND DOMESTIC USE.

**MAXIMUM LOADING WEIGHT: 15KG**

Parts List

Ax1      Bx1      Dx16      Ex2      Fx2      Gx2      Hx2      Ix1

Cx4

Step 1

B

C

A

To be assembled on a clean, dry and soft surface.

Step 2

D

I

D

D

Repeat step 2 for the other side.

Step 3

H

F

G

E

TOPPLING FURNITURE WARNING:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

TOPPLING HAZARD

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.