


# **anko**

## **Pancake Maker FS-678A User Manual**

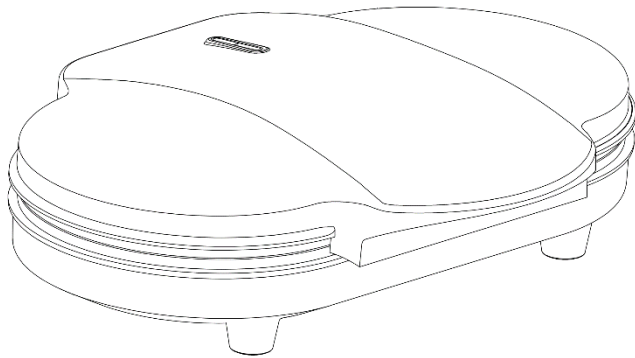

**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFEGUARDS


When using any electrical product, always follow these basic safety precautions:



### **READ ALL INSTRUCTIONS BEFORE USE.**


Read and understand all instructions before using this product and follow all warnings and cautions in the manual.

- To protect against risk of electrical hazards, do not immerse the appliance, power cord or plug in water or any other liquids.
- If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard, or the product must be disposed of.
- Place the cord in such a way that pulling or tripping over it is not possible.
- Always place and operate the appliance on a flat, solid, clean, dry and heat-resistance surface.
- The power socket must be readily accessible so that the appliance can be unplugged in an emergency.
- This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
- The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any other use will void the warranty.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities.
- Children should be supervised unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety and they do not play with the appliance.
- Always unplug from the mains supply when not in use and allow the appliance to cool down before cleaning.
- Do not operate the appliance if damaged or malfunctioning.
- Do not touch hot surfaces. Only use the handle.
- Do not place on or near a hot gas or electric burner, or in a heater oven.
- Do not use an extension cord with this appliance.
- Do not dismantle and repair the appliance by yourself. **DANGER OF AN ELECTRIC SHOCK AND/OR FIRE!**
- Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use.
- **IMPORTANT! Do not leave the appliance unattended when in use or when connected to mains power.**
- Do not operate your appliance inside or under a wall cabinet. When storing in a cabinet, always unplug the unit from mains power.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.

- Use only heat-proof synthetic or wooden utensils when taking pancake out in order not to damage the non-stick coating of the heating plates. Make sure that the utensils are not pointed or have sharp edges.
-  **Caution, hot surface. Care must be taken. The surfaces are liable to get hot during use.**
- For cleaning cooking surface, please refer to section “Cleaning and Maintenance”.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### KNOW YOUR PANCAKE MAKER

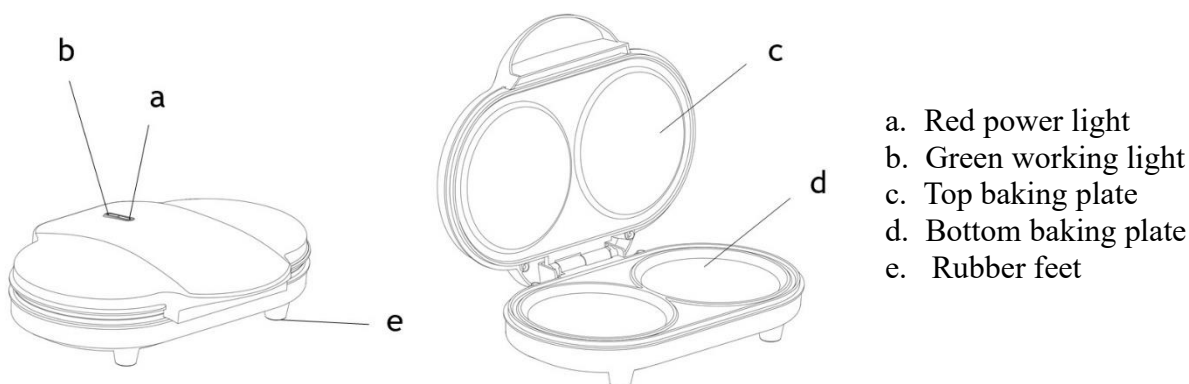

### BEFORE FIRST USE

**IMPORTANT! Always place and operate the appliance on a flat, solid, clean, dry and heat-resistance surface.**

- Unpack the appliance and check if all parts are there and undamaged. In case of shipping damage or incomplete package, return the product to Kmart.
- Clean the inside and outside of the appliance with a damp cloth or sponge. Wipe dry with a soft dry cloth.
- **WARNING!** Do not immerse the appliance in water or any other liquids to clean.
- Place the appliance on a flat, heat resistant stable surface and ensure a minimum of 10cm free space around the appliance. Do not operate your appliance inside a cabinet or under a wall cabinet.
- Plug the appliance into an electrical power outlet.
- Note: Make sure the voltage indicated on the appliance matches the local voltage before connecting the appliance to mains power. The rated voltage is: 220-240V~ 50-60Hz.

- Allow the appliance to heat up for approximately 5 minutes. Apply a thin coating of cooking oil to the cooking plates and carefully rub it in with a paper towel. You only need to condition the cooking plates once, when used for the first time.
- **WARNING! The cooking plates will get very hot during use and immediately after use.**
- NOTE: On first use there may be a small amount of haze (smoke) and an odor emitted from the appliance. This is perfectly normal and will subside after few minutes of use.
- Unplug the appliance and now it is ready for use.

## HOW TO USE YOUR PANCAKE MAKER

1. Before using the appliance, clean the baking surfaces with a damp cloth. Dry it with paper towel.
2. Close the appliance and plug it into a mains power outlet socket. Both red power light and green working light will light up, indicating that the pancake maker is connected to the mains power and begins heating. The red power indicator will remain on until you unplug the appliance.
3. It will take approximately 3 minutes to reach the recommended baking temperature. The green working light will go off when the pancake maker is ready for use.
4. Open the appliance and brush the baking plates with a small amount of vegetable oil.
5. Fill batter into the bottom baking plate. Ladle the batter to fill approx. 1/3 of bottom baking plate.
6. Close the appliance. The green working light will turn ON when another baking cycle begins. The pancake will be ready after around 4 - 6 minutes.
7. Open the appliance and check whether the pancake is sufficiently done. If you prefer it darker, continue baking until the desired color is achieved. When the pancake is ready, open the appliance and remove the pancake from the grid by using heat-proof synthetic or wooden utensil.
8. If additional baking is to be done, close the pancake maker to retain heat. Wait until the green working light goes off again before making more pancakes.
9. After using the pancake maker, disconnect the power plug from the mains power socket.

### NOTE:

Gently close the lid and ensure to lock the appliance with a click sound. Do not slam the lid down, as it may cause the mixture to come out of the mold.

Do not open the appliance during the first 2 minutes after filling in the batter. It will cause splitting of the under-baked pancake and make it difficult to remove.

### WARNING!

1. Never use sharp forks or knives to remove the pancakes as this would damage the non-stick coating of baking surface. Use heat-resistant wood or plastic utensils only.
2. Always unplug the appliance from the power outlet socket when not in use.

## CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

**CAUTION: Do not immerse the pancake maker in water or in a dishwasher!**

- Always unplug your pancake maker from the mains power before cleaning or maintenance.
- Ensure that your pancake maker has completely cooled down before cleaning, as it gets very hot during and immediately use.
- Clean the baking plates and outside of the appliance with a damp cloth or soft brush. Do not use anything abrasive that can scratch or damage the appliance.

## STORAGE

1. Unplug the pancake maker from mains power outlet socket.
2. Allow the appliance to cool down completely.
3. Clean and dry the appliance and accessories.

**WARNING! Do not wrap the power cord around the appliance.**

4. Store the appliance in a dry location and out of the reach of children.

## TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 1100-1300W

## SUGGESTED RECIPE

Ingredients:

500g	all purpose flour
50g	sugar
400ml	milk
5	eggs
100g	butter
5g	baking powder

## DIRECTIONS

Beat the eggs until well mixed. Add remaining ingredients and mix until smooth. Leave the mixture for at least half an hour.

Preheat the pancake maker. Use a pastry brush to lightly grease coat the non-stick coating of the baking plates with oil or butter. Pour mixture into pancake maker. Cook until golden brown.

## **12 Month Warranty**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.