

anko

User Manual

FAN/LIGHT RECHARGEABLE WITH REMOTE
Keycode: 43156078



WARNING: BUTTON CELL BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24-HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 131126 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT. USED BATTERIES MUST BE DISPOSED OF IN THE GARBAGE OR A BATTERY RECYCLE FACILITY.

The photos and illustrations shown in this instruction manual are generic. The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Safety instructions:

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products. To ensure the production works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Conditions near heater or high temperature service.
3. Conditions with direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.
5. To avoid being involved by the motor, please keep your hair away from the fan blade cover
6. KEEP FAN AWAY FROM HAIR AND JEWELLERY

Packaging contents:

Fan x 1
Remote control x 1
USB-C cable x 1
User manual x 1

Specification:

Input: DC5V/2A
Output: DC5V
Led Power: 0.5W~2W
Battery capacity: 5200mAh
USB cable length: 100cm



- ① Wind switch
- ② Power display
- ③ Light switch
- ④ Wind switch
- ⑤ Low wind
- ⑥ Mid wind
- ⑦ Max wind
- ⑧ 2hrs timing
- ⑨ 3hrs timing
- ⑩ Light switch
- ⑪ low light
- ⑫ Mid light
- ⑬ Max light
- ⑭ 5hrs timing



until the fan is fully charged.

Hang the device by the hook if required.

This device could be used as a temporary power bank in case of emergency.

Caution

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Made in China

How to Use

Control with no remote:

1. Press **⏸** button to control the fan speed. Press once for low wind, press twice for mid wind, press three times for max wind. Press again to turn the fan off.
2. Press **💡** button to control the light. Press once for low brightness, press twice for mid brightness, press three times for max brightness. Press again to turn the light off.

Control with remote:

1. Use the remote to control the fan and light without pressing the control panel on the fan.
2. Press **⌚** button to set timer
Power display shows the battery power. Charge the battery using the provided USB cable. The indicator light will flash to show 25% 50% 75% 100% battery