INSTRUCTION MANUAL

43157136

[KMT085]

KMT43157136_MAN_GamingMousepad_V2

Artwork Proof Date: 04.12.2022 Number of artboards: 1

PAPER:

80gsm


Bright white uncoated paper

PRINT COLOURS:



PRINT FINISH:

Double sided Folded in the centre

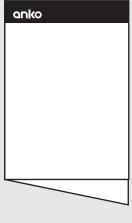

CHANGE LOG CREST INTERNAL USE ONLY

 
v2: updated 12th effects to "7 colour wave"

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.

ALL ARTWORK <u>MUST</u> BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.



anko

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

RGB GAMING MOUSE PAD LARGE

Operating instructions


includes:

- > mouse pad
- micro USB cable
- → manual




43-157-136

PRODUCT OVERVIEW

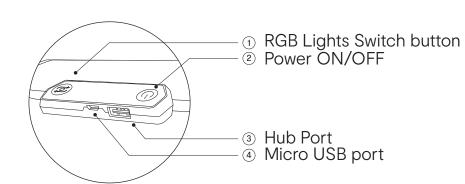

HOW TO CONNECT

Plug the detachable USB cable into the Micro USB port to power it up.

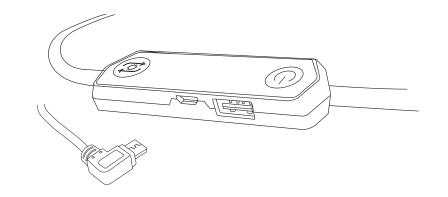

POWER ON/OFF

Press the Power ON/OFF button to turn ON or OFF the RGB lighting. Upon powering on, this will preset to the last settings.

RGB ILLUMINATION SETTINGS

Press the RGB Lights Switch button to toggle between 14 RGB light modes.

MODES	EFFECTS
1	Red
2	Blue
3	Green
4	Purple
5	Cyan
6	Yellow
7	White

MODES	EFFECTS
8	Alternating Wave
9	Synchronizing Wave
10	Alternating Flash
11	Alternating Red Flash
12	7 colour wave
13	Synchronize Breathing
14	Alternate Breathing

Double click RGB Lights Switch button to change brightness, supports dual brightness adjustments. It will remember the brightness and mode of RGB on the next use.