

Pop Up Storage Tent with Shelves

USER MANUAL



WARNING – FABRICS CAN BURN WHEN LEFT IN CONTACT WITH A FLAME SOURCE.

KEEP AWAY FROM FIRE

Key Code: 43159079



Warnings / Care Instructions

Please ensure you read all instructions for use carefully to familiarise yourself with the assembly method. Incorrect assembly may result in damage to the poles and fabric.

Prior to packing always clean off mud, grass and all dirt and use a damp cloth to clean any soiled areas of your tent organiser and then dry thoroughly. DO NOT use bleach, acids, solvents or abrasive cleaners. Ensure tent organiser is fully dry before packing and do not store when wet or damp. Store in a dry well-ventilated place.

Do not use any flames, cooking or heating appliances in or near this tent organiser, as this could result in serious injury or death.

Ensure the poles are securely fastened

Use only on firm level ground avoiding sharp rocks and stones


Do not use this product for other than its intended purpose

Keep these instructions for future reference.

Assembly Instructions


- 1) Choose a site that is level, free from stones, debris and other sharp objects. Spread out your tent organiser with the opening facing your desired direction as shown in Fig. A.

Fig. A

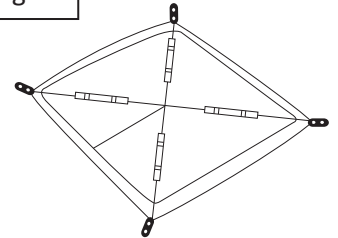


- 2) Take each fibreglass pole and assemble as shown in Fig B. Now carefully feed the poles through the sleeves on your tent organiser, DO NOT use excessive force. When forming the pole and feeding through the sleeve, where possible it should be done with two people. If the pole does not slide through, check that the fabric is not caught on the pole, especially around the metal joints in the pole.

Fig. B

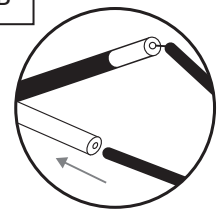

- 3) Now locate the metal tip at the ends of each pole into the plastic eyelet assemblies at the base of the tent organiser. Insert the pole into the hole that is closest to the tent as shown in Fig. C.

Fig. C

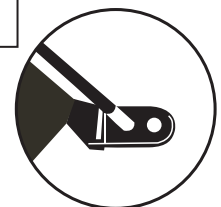

Taking down the Tent Organiser

To take the tent organiser down follow the above steps in the reverse order, be sure to leave the tent organiser door unzipped when folding. To fold the tent organiser up, fold in half lengthways towards the door. Now fold in from each side until the folded tent organiser is slightly smaller than the carry bag. Prior to packing always clean off mud, grass and all dirt and use a damp cloth to clean any soiled areas of your tent organiser and then dry thoroughly. Ensure the tent organiser is fully dry before packing. DO NOT store when wet or damp. Store in a dry well-ventilated place.