

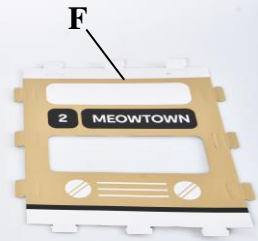
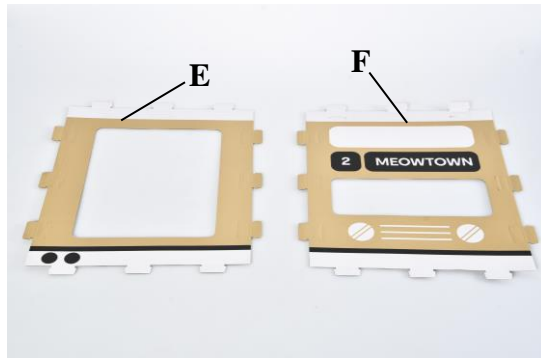


anko

Cat Scratcher Bus

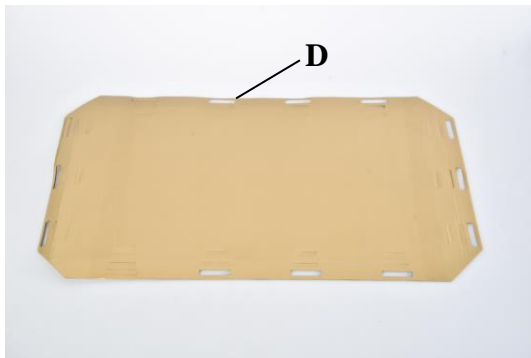

Contents

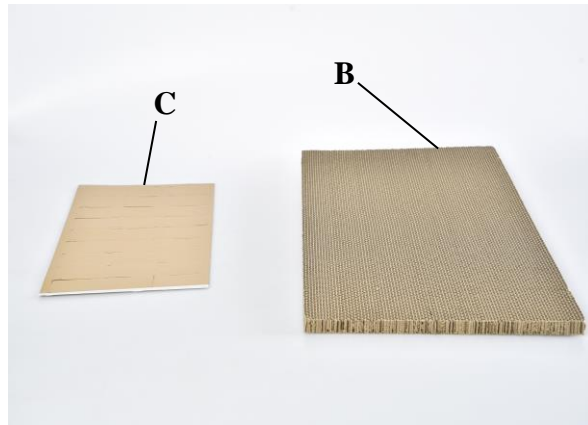

A. Bottom & side paper x 1 pc	B. Paper Scratcher x 1 pc	C. Connector x 27 pcs	D. Top paper x 1 pc
E. Rectangle paper (back) x 1 pc	F. Rectangle paper (front) x 1 pc		

Assembly Instructions

Step 1.

Connect the bottom & side paper A to the rectangle paper (E&F) as below image, please pay attention on the assembly position, rectangle paper F is the front of the bus and rectangle paper E is the back.



Step 2.

Put the scratcher B on the bottom paper A.



Step 3.

Connect the top paper D to the bottom & side paper A and rectangle paper (E&F) with cardboard tabs. please refer to the image below.



Step 4.

Use connectors C to stabilize the connection of each fitting, please fasten them firmly.



WARNING: Pet toy – Not intended for children.

It is the responsibility of the pet owner if this toy is suitable for their pet's style of play.

No pet toy is indestructible and can be damaged during play.

For your pet's safety, inspect regularly and remove if damaged.

Always supervise your pet during play.