

INSTRUCTION MANUAL & REFERENCE GUIDE

BATTERY REQUIREMENTS

This product requires 3 x AA batteries, not included.

BATTERY INSTALLATION

The product features a water-resistant compartment where the ON/OFF switch and battery housing are located .

- Gently pull out a bit of the battery housing, in order to access the cap.
- Remove water-resistant cap by unscrewing it counter-clockwise.
- Slide out the battery cartridge.
- Remove expired AA batteries if applicable.
- Insert new batteries into the housing-make sure to properly match polarities.
- Insert the battery cartridge back into the housing - **make sure not to force the cartridge into the housing if key slots are not lined up as it may get damaged.**
- Screw the cap back on- do not over-tighten.
- Gently push the battery housing back into the waterproof compartment.
- Attention: this product use non-rechargeable batteries!

HOW TO USE

Press the top button on the compartment to turn on.The product features 3 light modes.

MODE1	MODE2	MODE3
FAST	SLOW	ALWAYS ON

NOTICES, CAUTIONS & WARNINGS

▲WARNING:

This product contains flashing lights, which can cause seizures, headaches and dizziness in certain individuals.

Take CAUTION when using this product particularly around people who have Photosensitive epilepsy.

CARE & HANDLING

- Includes a Patch Kit
- Do not submerge the product in any liquids other than water
- Keep unit dry when not in use
- Remove batteries from product when not in use
- Do not place product near powerful, unshielded magnets
- Do not expose the product to extreme hot or cold temperatures
- Do not jump into the product
- Do not cut, poke, or try to disassemble the product for any reason
- Do not tow the product with a mechanical or motorized vehicle
- Do not drag the product on a hard or abrasive ground as it may puncture the inflatable
- Do not adhere or apply any hardware or attachments to the product not recommended by the manufacturer
- Do not mix different types of batteries like Alkaline, Zinc, or Rechargeable Batteries

BATTERY HANDLING INFORMATION

- Non-rechargeable batteries are not to be recharged
- DO NOT MIX alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium & nickel-metal hydride) batteries
- Exhausted batteries are to be removed
- Do not mix old and new batteries
- Do not dispose of batteries in fire; batteries may explode or leak
- Do not dispose of product in fire, batteries may explode or leak
- If this product will not be used for an extended period of time, remove the batteries from the product
- The supply terminals are not to be short-circuited
- Batteries are to be inserted with the correct polarity
- Clean the battery contacts and also those of the product prior to battery installation
- As always, dispose of batteries in an eco-friendly manner

WARNING:

THIS IS NOT A LIFE-SAVING DEVICE, ONLY BE USED IN SHALLOW WATER AND UNDER SUPERVISION.