

Indoor Wooden Playtent Instruction Manual

18+
months



SENSORY
& TACTILE



EASY TO
ASSEMBLE



INSTRUCTIONS
INCLUDED



Keycode: 43-170-920

IMPORTANT - READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING THIS PRODUCT. FOLLOW ALL INSTRUCTIONS TO PREVENT INJURIES AND ENSURE PROPER MAINTENANCE.

WARNING:

- › This product must be assembled by adults before use.
- › Assembly requires at least TWO adults.
- › Always inspect product thoroughly before each use.
- › Remove all packaging before use.
- › Leave all assembly parts away from children.
- › Manufacturer cannot assume responsibility for incorrect use or misuse.
- › Dispose of this product responsibly.
- › Colour and content may vary from illustration.
- › Do not sit or press firmly on the product.
- › Wipe the tent clean before each use.
- › Keep away from fire. Never allow a naked flame near this product.

Retain this instruction manual and packaging for future reference



MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART
STORES IN AUSTRALIA AND NEW ZEALAND.

1

Important advice for assembly, safe use, maintenance and supervision

Age and Usage:

- › For domestic use only.
- › For indoor use only.
- › This product is intended for use by children ages 18+ months.
- › Use by children under 18 months of age or heavier weight may result in entrapment and serious injury.
- › Adult assembly required.
- › Children must not use this product in any way until it is properly assembled and inspected by adults.
- › Maintain this product properly and periodically to keep it in a safe condition for children.
- › Anchor, store away or restrict this product from use under severe weather conditions.
- › Moving this product after assembly may affect product integrity. When moving, apply force evenly around the frame and move horizontally. Remove all attachments before moving. Inspect this product thoroughly after moving.

Assembly:

- › This product must be assembled by adults exactly in accordance with the instructions.
- › Make sure all components and parts are in place. Check them with the part list in this manual.
- › Some wooden components may occasionally twist, warp or crack slightly. This is normal.
- › DO NOT use any wood piece if it is not in good condition for assembly and not safe to use.
- › Contact the retailer for a replacement part if required.
- › Sort and install all components and parts according to sizes.
- › NEVER install this product on any slope, gravel, asphalt, packed earth, hard impact surface or other unsafe surfaces. It is recommended to install protective surfacing to imitate soft impact surface 2 metres in all directions beyond this product.
- › Place this product in a location at least 2 metres away from any structure, obstruction, road or driveway. Keep this product free from electrical wires, branches, rocks, or any other objects that could endanger children's safety.

2


Play Supervision:

- › Always maintain legibility of warning statements on this product.
- › DO NOT allow children to use this product in manner other than intended.
- › DO NOT allow children to climb or jump off the equipment. This could lead to serious injury or death.
- › Wear proper clothing and shoes when playing.
- › DO NOT allow pets or other animals near this product to prevent damage or injuries.
- › All wood and other parts are subject to normal wear. Always check and ensure all wood and parts are secured, stable and in good condition before use.
- › Pay special attention to all connections and fastenings.
- › DO NOT attach items to this product that are not specifically designed for use with this product.
- › NEVER place this product near fire.
- › Moving this product after assembly may affect product integrity. When moving, apply force evenly around the frame and move horizontally. Inspect this product thoroughly after moving.

Maintenance:

- › It is recommended to apply multiple layers of wood sealers such as paint, stain or outdoor oil before assembling this product for the first time.
- › After installation, a follow-up inspection should take place after one week and twice a month during play season.
- › Rub down splinters and rough surfaces with sandpaper and repair sharp points if needed.
- › Maintenance should be performed when necessary. Major maintenance on wood finishing should be performed at least every six months.
- › Checks and maintenance of main parts (crossbeam, anchors, etc.) should be performed at regular intervals. If these checks are not carried out, this product could overturn or otherwise become a hazard.
- › It is important, at regular intervals and beginning of each season, to check all nuts and bolts for tightness. Tighten them when required. Check all coverings and bolts for sharp edges. Replace them when required.

Tools Required for Assembly (Not Included)

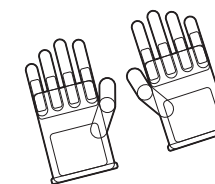


Working Gloves

3

Contents

- 1 x4
- 2 x6
- 3 x4 57cm
- 4 x4 80cm
- 5 x2 82.5cm
- 6 x5 100.5cm
- 7 x1

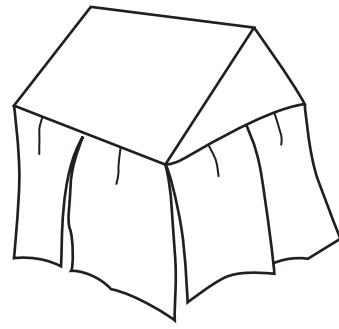

1

2 x4

5 x2

6 x2

repeat 2 times

* before next step, make sure the base is flat after assembly

4

2

4 x4

3

1 x4

6 x2

repeat 2 times

5

4

3 x4

2 x2

repeat 2 times

5

6 x1

6

6

7 x1

7

Roll up and tighten the door curtain as needed.

- 1.
- 2.
- 3.

7