

anko

4 in 1 Breakfast Maker

HX-5092

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

1. To protect against electric shock do not immerse the appliance, power cord or plug in water or other liquid.
2. Close supervision is necessary when any appliance is used by or near children.
3. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified electrician in order to avoid a hazard.
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries or damage to property.
6. The appliance is intended for household use only. Do not use outdoors or for commercial purpose. Any misuse will void the warranty.
7. This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not touch hot surfaces.
11. Do not use appliance for other than its intended use.
12. Do not use this appliance within reach of a bath or a sink or any vessel containing water or liquids.
13. Do not disconnect from mains power outlet by pulling on the power cord, grasp and pull from the plug itself when removing from mains power outlet socket.
14. Remove all protective wrapping prior to using the appliance.

CAUTION: For electrical safety, never use the appliance if the supply cord is damaged or shows any signs of wear and tear. It must be replaced by a qualified electrical person only or the appliance must be disposed.

15. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
16. Children should be supervised to ensure that they do not play with the appliance.
17. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. Do not use an extension cord with this appliance.
19. Always operate the appliance on an even, flat surface. Make sure that there is enough ventilation, so that hot steam can evaporate.
20. **To avoid the danger of fire, never leave the appliance unattended. Never use appliance near any flammable materials, such as curtains, wall cabinet, etc., due to risk of burning and or fire.**

21. The rear surface of appliance may be placed against a wall.
22. CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.
23. For the details on how to clean surfaces in contact with food, please refer to section "Care and Maintenance".
24. Do not touch any sections of the appliance that may become hot or the heating components of the appliance, as this could cause injury.
25. Always ensure that the appliance has fully cooled down after use before performing any cleaning or maintenance or storing away.
26. For details on how to remove breadcrumbs, please refer to section "Care and Maintenance".
27. **CAUTION! The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.**
28. The appliance must not be immersed.
29. Warning of potential injury from misuse.
30. The heating element surface is subject to residual heat after use.
31. **CAUTION: Avoid injuries from the egg piercer.**



CAUTION: Hot surface - Hot steam can cause serious injury. Take care around any parts of the appliance that may emit steam, and never touch hot components without heat protective gloves.

 
Warning!

Keep the appliance away from flammable materials.

Never operate toaster on its side. To prevent damage to the toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients. Adding any food substances to bread, muffins or crumpets can cause an electric shock and / or fire. This toaster is for toasting bread, crumpets and muffins only.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

Description of Parts

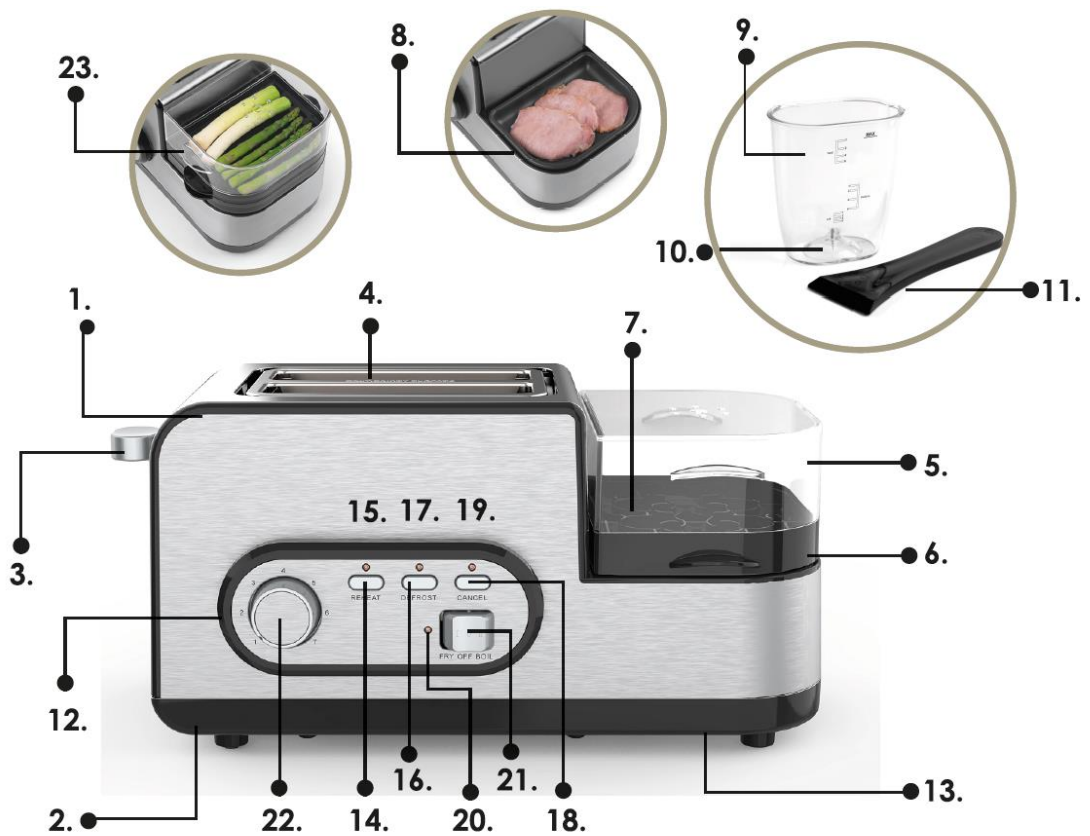

- | | | | |
|-----|--------------------------------|-----|---|
| 1. | 4 in 1 Breakfast Maker housing | 13. | Power cord storage |
| 2. | Crumb tray | 14. | Reheat button |
| 3. | Toasting lever | 15. | Reheat indicator light |
| 4. | Toasting slots | 16. | Defrost button |
| 5. | Egg boiler lid | 17. | Defrost indicator light |
| 6. | Steaming tray | 18. | Cancel button |
| 7. | Egg holder | 19. | Cancel indicator light |
| 8. | Non-stick heating plate | 20. | Heating plate indicator light |
| 9. | Measuring cup | 21. | Heating plate selector switch
(FRY/OFF/BOIL) |
| 10. | Egg piercer | 22. | Browning control |
| 11. | Spatula | 23. | Steamer insert |
| 12. | Control panel | | |

Instructions for Use

Before First Use

Before connecting to the mains power supply, wipe the breakfast maker housing with a soft, damp cloth and dry thoroughly.

STEP 1: Remove all of the accessories and wash them in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the breakfast maker main body in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the breakfast maker or its accessories, as this could cause damage.

STEP 2: Place the breakfast maker onto a stable, heat-resistant surface, at a height that is comfortable for the use.

NOTE: When using the breakfast maker for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the breakfast maker.

Using the 4 in 1 Breakfast Maker

Using the Toaster

STEP 1: Make sure that the crumb tray is inserted fully into the toaster and that the toasting lever is in the upright position. Check that there is no bread or other objects inside the toasting slots.

STEP 2: Plug in and switch ON the breakfast maker at the mains power supply.

STEP 3: Set the browning control to the required setting: turning the dial anticlockwise to decrease the heat setting or clockwise to increase it. Setting 4-5 is the medium setting for toasting.

STEP 4: Insert the bread or toasting food into the toasting slot(s) and lower the toasting lever until it has locked into position. Toasting will begin when the toasting lever is fully locked down.

STEP 5: When the toast reaches the desired browning level, it will pop up automatically.

STEP 6: Switch off and unplug the breakfast maker from the mains power supply.

STEP 7: Remove the bread from the toasting slot(s) using heat-resistant oven gloves, i.e. oven mitts.

Note: To interrupt the toasting process, press the cancel button at any point.

Caution: Never use a sharp-edged utensil to remove toast, as this may damage the heating element or cause injury.

Do not toast pastries with runny fillings or frostings.

Do not toast torn slices of bread.

Do not place buttered bread or wrapped food into the toaster.

Do not toast small sized bread, mini baguettes, breadsticks etc.

Warning: Electric Shock Hazard. Do not put anything into the toaster whilst it is in use or attempt to dislodge food from the toaster whilst it is plugged in connected to mains power.

Do not place anything on top of the toaster.

The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains. The toaster should be attended when in use.

If the breakfast maker begins to malfunction during use, immediately press the cancel button and unplug it from the mains power supply.

Automatic Centering Guides

Lowering the toasting lever closes the centering guides and holds the bread or toasting food centrally in the toasting slot(s).

Note: The toasting lever will not lock down unless the toaster is plugged in and switched ON at the mains power supply.

Using the Defrost / Reheat Setting

The defrost setting allows bread to be toasted from frozen.

The reheat setting allows cold toast to be reheated.

STEP 1: Make sure that the crumb tray is inserted fully into the toaster and that the toasting lever is in the upright position. Check that there is no bread or other objects inside the toasting slots.

STEP 2: Plug in and switch on the breakfast maker at the mains power supply.

STEP 3: Set the browning control to the required setting; turning the dial anticlockwise to decrease the heat setting or clockwise to increase it. Setting 4-5 is the medium setting for toasting.

STEP 4: Insert the frozen bread or cold toast into the toasting slot(s) and lower the toasting lever until it is locked into position.

STEP 5: Once toasting has begun, press 'DEFROST' to defrost the toast; this will cause the defrost indicator light to illuminate. Alternatively, press 'REHEAT' to reheat cold toast; this will cause the reheat indicator light to illuminate.

STEP 6: When the defrost / reheat setting has completed its cycle, the bread will pop up automatically.

STEP 7: If the bread has not fully defrosted or reheated fully, repeat steps 4-5. To stop the cycle, press the cancel button.

STEP 8: Switch off and unplug the toaster from the mains power supply.


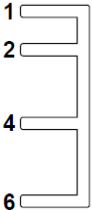
STEP 9: Remove the food from the toasting slot(s) using heat-resistant oven gloves.


To Make Boiled Eggs

The consistency of the eggs to be boiled is determined by how much water is placed onto the heating plate. Use the measuring cup as a guide for how much water is required dependent upon the consistency and number of eggs.

Note: The egg boiling time and doneness are approximate and may vary depending on egg size and temperature.

A measuring cup is provided to give an approximate guide as to how much water is required for each consistency of egg dependent upon the number of eggs being boiled.

Preparation	Cooking method	Number of eggs	Water lever	
Soft-boiled	Soft	1		40ml
		2		36ml
		4		31ml
		6		28ml
Boiled	Medium	1		75ml
		2		68ml
		4		55ml
		6		45ml

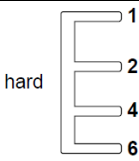Hard-boiled	Hard	1		140ml
		2		130ml
		4		120ml
		6		110ml

STEP 1: Before connecting to the mains power supply, check that the heating plate is clean and dry.

Determine the desired consistency of the eggs to be boiled (soft, medium or hard eggs; fill it to the appropriated line with cold water.

STEP 2: Pour the cold water onto the heating plate and then place the egg holder on top, checking that it is seated securely.

STEP 3: Prepare the number of eggs to be boiled (up to 6 eggs at once). Use the egg piercer to create a small hole in the larger end of each egg and then place them securely into the egg holder. This will prevent the eggs from breaking during the boiling process.

STEP 4: Place the egg boiler lid over the eggs, checking that it is seated securely and forms a seal over the egg holder.

STEP 5: Plug in and switch on the breakfast maker at the mains power supply.

STEP 6: Press the heat selector switch to the 'BOIL' setting; the heating plate indicator light will illuminate and the boiling process will begin.

STEP 7: Once the water has completely evaporated and the eggs are **boiled**, the indicator light will turn off.

STEP 8: Press the heat selector switch to 'OFF'.

STEP 9: Allow the breakfast maker to cool for approx. 2 minutes before using heat-resistant oven gloves to remove the egg boiler lid. Remove it with caution as steam will be emitted from the heating plate. Carefully remove the eggs; they will have become hot during the boiling process.

STEP 10: Switch off and unplug the breakfast maker at the mains power supply and let it cool completely before cleaning and storing it.

Note: During use, a small amount of water may be released from the sides of the egg boiler.

Ensure that the breakfast maker is not placed above or near electrical items.

Caution: Do not touch the egg boiler lid during the boiling process, as it will become extremely hot.

Warning: Steam and hot water may be released when the lid is lifted. Keep the egg boiler lid away from the body. Do not allow steam to come in to contact with your hands.

To Make Fried Eggs / As a Mini Frying Pan

STEP 1: Before connecting to the mains power supply, check that the heating plate is clean and then plug in and switch on the breakfast maker.

STEP 2: Press the heat selector switch to the 'FRY' setting; the heating plate indicator light will illuminate.

STEP 3: Using a paper towel, apply a small amount of oil to the heating plate. Do not touch the heating plate directly.

STEP 4: The heating plate will take approx. 2 minutes to heat up. Add the egg (or other food) directly to the heating plate; do not place food larger than the heating plate onto it.

STEP 5: Once the food is cooked to the desired consistency, press the heat selector switch to 'OFF'.

STEP 6: Carefully remove the egg / cooked food using a heat-resistant plastic spatula.

STEP 7: Switch off and unplug the breakfast maker at the mains power supply and let it cool completely before cleaning and storing it.

Note: The heating plate is suitable for frying small food items such as eggs, diced onions, chopped bacon etc. Never attempt to cook large foods, such as raw chicken breast, as they will not cook thoroughly.

IMPORTANT! Always cook raw foods thoroughly before serving.

To Steam Foods

STEP 1: Before connecting to the mains power supply, check that the heating plate is clean and then plug in and switch on the breakfast maker.

Determine the desired amount of water required for steaming; filling the measuring cup to the max mark to steam for 16-18 minutes. Water cannot exceed the max mark on the measuring cup.

STEP 2: Pour the cold water onto the heating plate and then place the egg holder onto the heating plate. Place the steaming tray on top, checking that it is seated securely. **Do not place the steaming tray directly onto the heating plate.**

STEP 3: Place the foods to be steamed onto the steaming tray; do not place food larger than the steaming tray onto it.

STEP 4: Place the egg boiler lid over the steaming tray, checking that it is seated securely and forms a seal over the egg holder.

STEP 5: Plug in and switch on the breakfast maker at the mains power supply.

STEP 6: Press the heat selector switch to the 'BOIL' setting; the heating plate indicator light will illuminate and the water will begin to heat.

STEP 7: Once the water has completely evaporated, the indicator light will turn off. If further steaming is required, carefully lift the lid with heatproof gloves and add more water as required.

STEP 8: Press the heat selector switch to 'OFF'.

STEP 9: Allow the breakfast maker to cool for approx.2 minutes before using heat-resistant oven gloves to remove the egg boiler lid. Remove it with caution as steam and hot water will be emitted from the heating plate and egg boiler lid. Carefully remove the steamed food; it will have become hot during the cooking process.

STEP 10: Switch the unit off at the mains power supply and let it cool completely before cleaning and sorting it.

Caution: Do not touch the egg boiler lid during the steaming process, as it will become extremely hot.

Warning: Steam and hot water may be released when the egg boiler lid is lifted; keep the egg boiler lid away from the body.

Do not allow steam to come in to contact with your hands.

Only ever place the egg holder in direct contact with the heating plate. Never place the steaming tray or lid directly on the heating plate.

Care and Maintenance

STEP 1: Switch off and unplug the breakfast maker from the mains power supply. Allow it cool fully before performing any cleaning or maintenance.

STEP 2: Wipe the breakfast maker housing with a soft, damp cloth and allow to dry thoroughly.

STEP 3: Remove crumbs from the inside of the base of the toaster by sliding open the crumb tray.

STEP 4: Wash all accessories in warm, soapy water, then rinse and dry thoroughly.

Do not immerse the breakfast maker in water or any other liquid.

Never use harsh or abrasive scourers to clean the breakfast maker, as this could cause damage.

Note: The breakfast maker should be cleaned after each use.

Caution: Never place fingers near or inside the toasting slots.

Always unplug the breakfast maker and allow it to cool thoroughly before attempting to remove any bread that has become stuck inside the toasting slot.

Take care when removing food from the toasting slot to avoid damage to the internal mechanism and heating element.

Do not allow crumbs to build up inside the base of the toaster.

Do not operate the toaster without bread as this may cause damage to the toaster.

If the breakfast maker falls into the water, unplug it from the mains power supply immediately. Do not reach into the water.

Storage

Check that the breakfast maker is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the breakfast maker; wrap it loosely to avoid causing damage.

Specifications

Voltage: 220-240V~ 50-60Hz

Power: Toaster 850W

Fry / Boil 400W

12 MONTH WARRANTY

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.